http://www.xiaoyu163.com

aiwa

aiwa SERVICE

NSX-A505
NSX-S505
NSX-S507

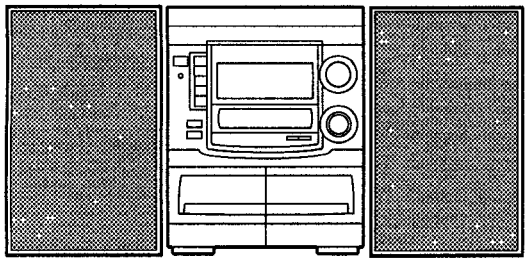

COMPACT DISC STEREO
CASSETTE RECEIVER

- BASIC TAPE MECHANISM : 2ZM-3MK2 PR4NM, 6ZM-3 PR2NM
- BASIC CD MECHANISM : 4ZG–1 Z3DSHNM
- TYPE : 505(U,LH), 507LH

SERVICE MANUAL

REVISION PUBLISHING

SYSTEM	CD CASSEIVER	SPEAKER	REMOTE CONTROLLER
NSX-A505	CX-NA505 (TYPE : U)	SX–NA502	RC - 7AS06
NSX-S505	CX-NS505 (TYPE : LH)	SX–NS503	
NSX-S507	CX-NS507 (TYPE : LH)	SX–FNS705	

- If requiring information about the CD mechanism, see Service Manual of 4ZG-1, S/M Code No. 09-983-249-3OT.

- This Service Manual is the "Revision Publishing" and replaces "Simple Manual", S/M Code No. 09-983-256-5FE.

S/M Code No. 09–984–247–3FE

http://www.xiaoyu163.com

http://www.xiaoyu163.com

TABLE OF CONTENTS

SPECIFICATIONS 3
NOTE ON BEFORE STARTING REPAIR 4, 5
PROTECTION OF EYES FROM LASER BEAM DURING SERVICING 6
PRECAUTION TO REPLACE OPTICAL BLOCK 6
ELECTRICAL MAIN PARTS LIST ..... 7 ~ 10
TRANSISTOR ILLUSTRATION 11
FL GRID ASSIGNMENT & ANODE CONNECTION 12, 13
IC BLOCK DIAGRAM – 1 14
BLOCK DIAGRAM (MAIN / FRONT) 15, 16
WIRING – 1 (MAIN) 17, 18
SCHEMATIC DIAGRAM – 1 (MAIN 1/2) ..... 19 ~ 21
SCHEMATIC DIAGRAM – 2 (FRONT) ..... 22 ~ 24
WIRING – 2 (FRONT) 25, 26
WIRING – 3 (AC1 / AC2) 27
SCHEMATIC DIAGRAM – 3 (TUNER FRONT END) 28
SCHEMATIC DIAGRAM – 4 (MAIN 2/2) 29, 30
WIRING – 4 (DECK : 6ZM-3 PR2NM) 31
WIRING – 5 (DECK : 2ZM-3MK2 PR4NM) 32
IC BLOCK DIAGRAM - 2 ..... 33 ~ 36
PRACTICAL SERVICE FIGURE 36
IC DESCRIPTION 37, 38
ADJUSTMENT <TUNER / DECK> 39, 40
MECHANICAL EXPLODED VIEW 1 / 1 ..... 41, 42
MECHANICAL PARTS LIST 1 / 1 43
TAPE MECHANISM EXPLODED VIEW 1 / 1 <6ZM-3 PR2NM> 44, 45
TAPE MECHANISM PARTS LIST 1 / 1 <6ZM-3 PR2NM> 46
SPRING APPLICATION POSITION <6ZM-3 PR2NM> 47
TAPE MECHANISM EXPLODED VIEW 1 / 1 <2ZM-3MK2 PR4NM> 48, 49
TAPE MECHANISM PARTS LIST 1 / 1 <2ZM-3MK2 PR4NM> 50
SPRING APPLICATION POSITION <2ZM-3MK2 PR4NM> 51
SPEAKER DISASSEMBLY INSTRUCTIONS 52
SPERKER PARTS LIST 53
ACCESSORIES / PACKAGE LIST 53
REFERENCE NAME LIST 54

www.xiaoyu163.com

http://www.xiaoyu163.com

http://www.xiaoyu163.com

SPECIFICATIONS

<FM Tuner section>

Tuning range	87.5 MHz to 108 MHz
Usable sensitivity(IHF)	13.2 dBf
Antenna terminals	75 ohms (unbalanced)

<MW Tuner section>

Tuning range	531 kHz to 1602 kHz (9 kHz step) 530 kHz to 1710 kHz (10 kHz step)
Usable sensitivity	350 uV/m
Antenna	Loop antenna

<Amplifier section>

Power output	U : 50 W + 50 W (50 Hz - 20 kHz, T.H.D.less than 1%, 6 ohms) LH : 100 W + 100 W (6 ohms,T.H.D. 10%,1 kHz)
Total harmonic distortion	U : 0.05% (40 W, 1 kHz, 6 ohms, DIN AUDIO) LH : 0.05% (70 W, 1 kHz, 6 ohms, DIN AUDIO)
Inputs	U : VIDEO/AUX : 150 mV(adjustable) MD : 150mV (adjustable) MIC: 1.8mV (10 kohms) LH : VIDEO/AUX : 210 mV(adjustable) MD : 210mV (adjustable) MIC1, MIC2 : 2.4mV (10 kohms)
Outputs	LINE OUT: 200mV U : SUPER WOOFER: 1.78 V LH : SUPER WOOFER: 2.25 V SPEAKERS: accept speakers of 6 ohms or more SURROUND SPEAKERS: accept speakers of 8 ohms to 16 ohms PHONES (stereo jack) : accepts headphones of 32 ohms or more

<Cassette deck section>

Track format	4 tracks, 2 channels stereo
Frequency response	U : 50 Hz – 15000 Hz LH : CrO_2 tape : 50 Hz – 16000 Hz Normal tape : 50 Hz – 15000 Hz
Recording system	AC bias
Heads	Deck 1 : playback head x 1 Deck 2 : Recording/Playback head x 1/ erase head x 1

<Compact disc player section>

Laser	Semiconductor laser (λ =780 nm)
D-A converter	1 bit dual
Signal-to-noise ratio	85 dB (1 kHz, 0 dB)
Harmonic distortion	0.05 % (1 kHz, 0 dB)
Wow and flutter	Unmeasurable

<Speaker system SX–NA502 (For NSX-A505)>

Cabinet type	3 way, bass reflex (magnetic shielded type)
Speakers	Woofer : 140 mm ($5^5/_8$ in.) cone type Tweeter : 60 mm ($2^3/_8$ in.) cone type Super tweeter: 10 mm ($^{13}/_{32}$ in.) ceramic type
Impedance	6 ohms
Output sound pressure level	87 dB/W/m
Dimensions (W x H x D)	235 x 324 x 250mm ($9^3/_8$ X $12^7/_8$ X $9^7/_8$ in.)
Weight	3.3 kg (7 lbs 4 oz.)

<Speaker system SX–NS503 (For NSX-S505)>

Cabinet type	3 way, bass reflex (magnetic shielded type)
Speakers	Woofer : 160 mm cone type Tweeter : 60 mm cone type Super tweeter: 20 mm ceramic type
Impedance	6 ohms
Output sound pressure level	87 dB/W/m
Dimensions (W x H x D)	240 x 324 x 255mm
Weight	4.9 kg

<Speaker system SX–FNS705 (For NSX-S507)>

Cabinet type	4 way, bass reflex (magnetic shielded type)
Speakers	Woofer : 160 mm cone type Tweeter : 80 mm ceramic type Super tweeter: 20 mm ceramic type Surround speaker: 80 mm cone type
Impedance	Front speaker : 6 ohms Surround speaker : 8 ohms
Output sound pressure level	87 dB/W/m
Dimensions (W x H x D)	250 x 324 x 255mm
Weight	3.7 kg

<General>

Power requirements	U : 120 VAC, 60 Hz LH : 120 V/220-230 V/240 V AC switchable, 50/60 Hz
Power consumption	U : 90 W LH : 155 W
Dimensions of main unit	260 x 329.1 x 344.5 mm ($10^1/_4$ X 13 X $13^5/_8$ in.)
Weight	U : 6.4 kg (14 lbs 2 oz.) LH : 7.3 kg

- Design and specifications are subject to change without notice.

- The word "BBE"and the "BBE symbol" are trademarks of BBE Sound, Inc.
  Under license from BBE Sound,Inc.

http://www.xiaoyu163.com

http://www.xiaoyu163.com

NOTE ON BEFORE STARTING REPAIR

1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, the secondary defect can occur.
In order to prevent the secondary trouble, perform the following measures before starting repair work.

Discharge procedure

① Remove the AC power cord.
② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connector the other end of the lead wire to metal chassis.
③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
④ Contact the same end of the discharging resistor as step ③ to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
⑤ Check that voltage across C101 and C102 has decreased 1 V or less using a multimeter or an oscilloscope.

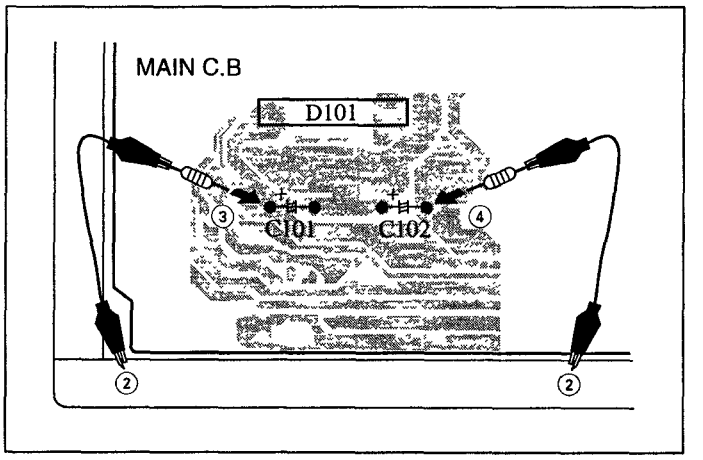

Fig-1

Select a discharging resistor referring to the following table.

Charging voltage (V) (C101, 102)	Discharging resistor (Ω)	Rated power (W)	Parts number
25-48	100	3	87-A00-247-090
49-140	220	5	87-A00-232-090

Note: The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitor on schematic diagram before starting the discharging work.

2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is "H", the MICROCOMPUTER is judged to be operating correctly. When this terminal is "L", the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.
When the MICROCOMPUTER is not defective, the HOLD terminal can also go "L" when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to "L".

- Good or no good judgment of the MICROCOMPUTER

① Turn on the AC main power.
② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the "H" level or not.
③ When the HOLD terminal is "L" level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

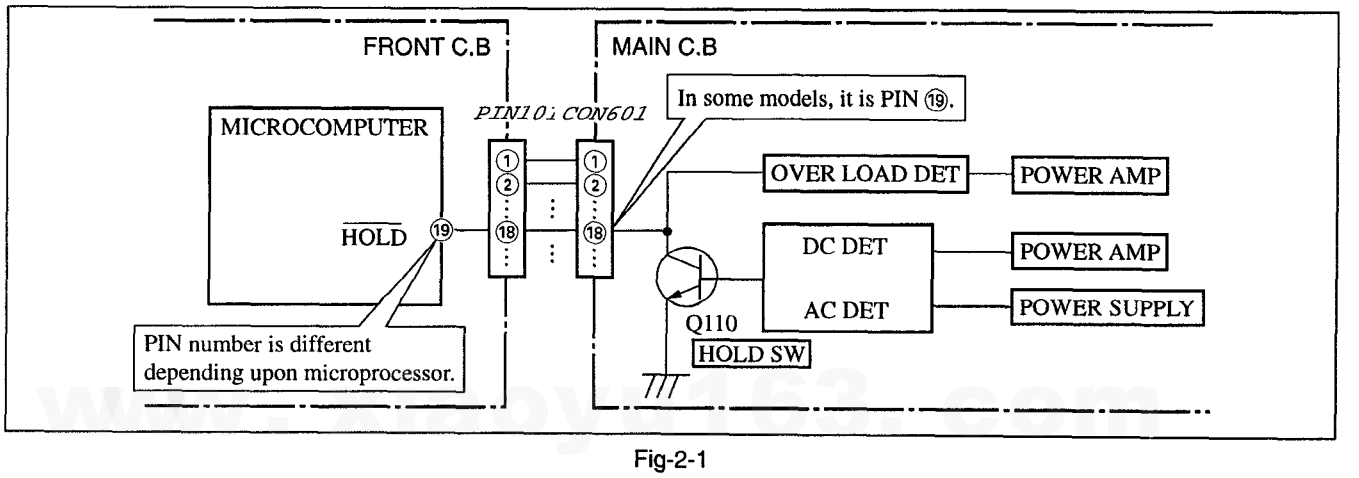

Fig-2-1

http://www.xiaoyu163.com

http://www.xiaoyu163.com

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.
When the above described phenomenon occurs, it can leads to wrong judgment as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

① Remove the AC power cord.

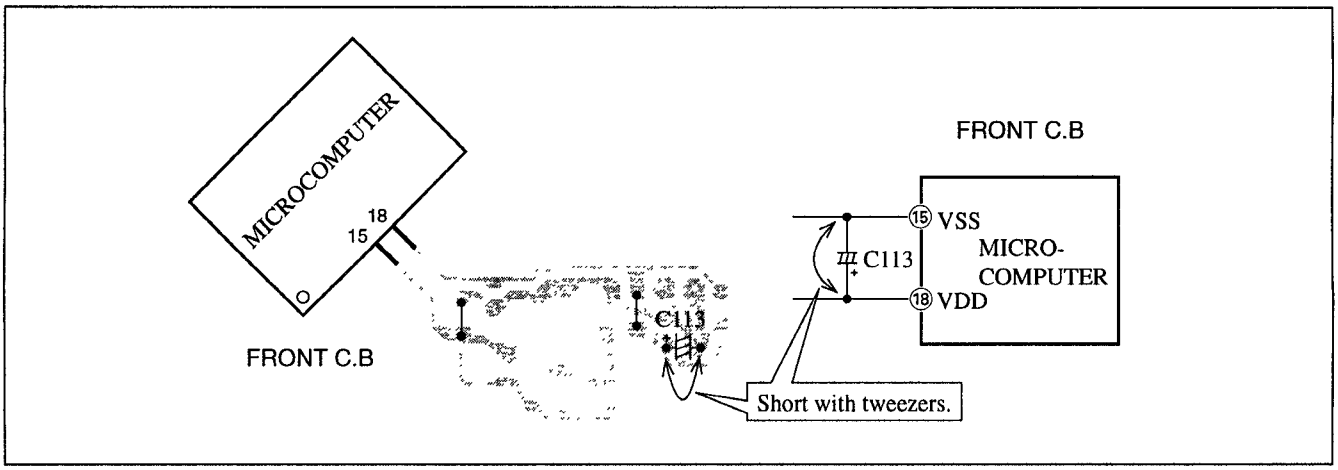

Fig-2-2

② Short the both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

Note: The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

http://www.xiaoyu163.com

http://www.xiaoyu163.com

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!
WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

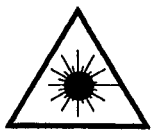

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!
Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING!
Om apparaten används på annat sätt än vad som specificeras i denna bruksanvising, kan användaren utsättas för osynling laserstrålning, som överskrider gränsen för laserklass 1.

CAUTION
Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION
L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!
Usynlig laserstråling ved åbning, når sikkerhedsafbrydereer ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.
The CLASS 1 LASER PRODUCT label is located on the rear exterior.

CLASS 1	LASER PRODUCT
KLASSE 1	LASER PRODUKT
LUOKAN 1	LASER LAITE
KLASS 1	LASER APPARAT

Precaution to replace Optical block

(KSS – 213F)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

1) After the connection, remove solder shown in right figure.

PICK-UP Assy P.C.B

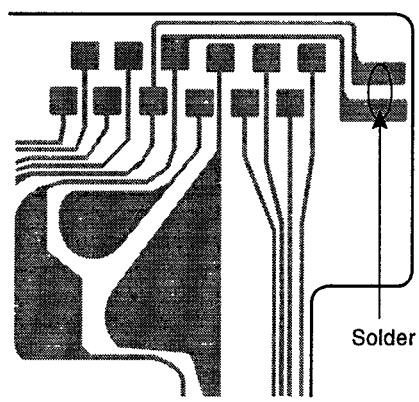

http://www.xiaoyu163.com

http://www.xiaoyu163.com

ELECTRICAL MAIN PARTS LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
IC			
	88-NF7-690-010		C-IC,LC866560W-5G73
	87-070-083-010		IC,GP1U281X
	87-070-121-010		IC,HA12185NT<U>
	87-A20-783-040		C-IC,BA7762AFS<LH>
	87-A20-083-010		IC,BA3835S
	87-A20-804-040		C-IC,NJM2152M
	87-017-915-080		IC,BU4094BCF
	87-A20-613-040		C-IC,BU9262AFS<LH>
	87-A20-805-040		C-IC,M62445FP<U>
	87-A20-954-040		C-IC,M62445FP-601<LH>
	87-017-888-080		IC,NJM4558MD
	86-NFZ-655-010		IC,LC72131D(Z)
	87-A20-438-010		IC,LA1837
	87-020-454-010		IC,DN6851
TRANSISTOR			
	87-A30-087-080		C-FET,2SK2158
	89-213-702-010		TR,2SB1370 (1.8W)
	87-026-263-080		C-TR,RN1410
	87-A30-071-080		C-TR,RT1N 144C
	87-026-610-080		TR,KTC3198GR
	87-A30-076-080		C-TR,2SC3052F
	87-A30-196-080		TR,2SC4115SRS
	87-A30-075-080		C-TR,2SA1235F
	87-026-609-080		TR,KTA1266GR
	87-A30-107-070		C-TR,CMBT5401
	87-A30-190-080		TR,CC5551
	87-A30-137-010		TR,2SD2494<U>
	87-A30-097-010		TR,FN 1016<LH>
	87-A30-138-010		TR,2SB1625<U>
	87-A30-098-010		TR,FP 1016<LH>
	87-A30-106-070		C-TR,CMBT5551
	87-A30-186-010		FET,2SK3053
	87-A30-072-080		C-TR,RT1P 144C
	87-A30-074-080		C-TR,RT1P 141C
	87-026-232-080		C-TR,DTA 144WK
	87-A30-073-080		C-TR,RT1N 141C
	87-A30-105-080		C-TR,RT1P 441C
	87-026-238-080		TR,DTC144WK<U>
	87-026-580-080		C-TR,DTA123JK
	87-A30-086-070		C-TR,CSD1306E
	89-112-965-080		TR,2SA1296 (0.75W)
	87-A30-085-070		C-TR,CSA1362GR
	89-327-143-080		TR,2SC2714 (0.1W)
	87-026-463-080		TR,2SA933SRS
DIODE			
	87-A40-470-080		DIODE,1SS254
	87-002-225-010		DIODE,DBF40C-K10<U>
	87-A40-115-060		DIODE,RS603M<LH>
	87-A40-269-080		C-DIODE,MC2836
	87-A40-509-080		ZENER,MTZJ6.8C
	87-A40-270-080		C-DIODE,MC2838
	87-070-274-080		DIODE,1N4003 SEM
	87-A40-341-080		ZENER,MTZJ 36 A
	87-A40-308-080		ZENER,DZ10M
	87-A40-004-080		ZENER,MTZJ16A
	87-A40-488-080		DIODE,1SS244
	87-A40-299-080		ZENER,DZ5.1M
	87-A40-345-080		ZENER,MTZJ10C
	87-A40-184-090		DIODE,RF34
	87-A40-302-080		ZENER,DZ5.6M<LH>
	87-A40-002-080		ZENER,MTZJ5.1C
	87-A40-438-080		ZENER,MTZJ4.7A
	87-A40-234-080		ZENER,MTZJ5.6A

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
MAIN C.B			
C103	87-016-658-090		CAP,E 4700-35 SMG<LH>
C104	87-016-658-090		CAP,E 4700-35 SMG<LH>
C105	87-012-368-080		C-CAP,S 0.1-50 F
C106	87-012-368-080		C-CAP,S 0.1-50 F
C107	87-012-368-080		C-CAP,S 0.1-50 F
C108	87-012-368-080		C-CAP,S 0.1-50 F
C109	87-010-196-080		CHIP CAPACITOR,0.1-25
C110	87-010-196-080		CHIP CAPACITOR,0.1-25
C111	87-010-196-080		CHIP CAPACITOR,0.1-25
C112	87-010-196-080		CHIP CAPACITOR,0.1-25
C113	87-010-247-080		CAP, ELECT 100-50V
C116	87-010-247-080		CAP, ELECT 100-50V
C117	87-010-430-080		CAP, ELECT 100-63
C118	87-010-263-080		CAP, ELECT 100-10V
C119	87-010-260-080		CAP, ELECT 47-25V
C120	87-010-403-080		CAP, ELECT 3.3-50V
C121	87-012-140-080		CAP 470P
C122	87-010-263-080		CAP, ELECT 100-10V<U>
C123	87-010-247-080		CAP, ELECT 100-50V
C124	87-010-112-080		CAP, ELECT 100-16V
C125	87-010-235-080		CAP,E 470-16 SME
C151	87-010-917-090		CAP,E 3300-50 M SMG<U>
C151	87-016-520-090		CAP,E 3300-65<LH>
C152	87-010-917-090		CAP,E 3300-50 M SMG<U>
C152	87-016-520-090		CAP,E 3300-65<LH>
C153	87-010-928-090		CAP,E 4700-25 SMG<U>
C154	87-010-928-090		CAP,E 4700-25 SMG<U>
C209	87-010-404-080		CAP, ELECT 4.7-50V
C210	87-010-404-080		CAP, ELECT 4.7-50V
C211	87-010-180-080		C-CER 1500P<LH>
C211	87-010-181-080		CAP,CHIP S 1800P<U>
C212	87-010-180-080		C-CER 1500P<LH>
C212	87-010-181-080		CAP,CHIP S 1800P<U>
C213	87-010-186-080		CAP,CHIP 4700P
C214	87-010-186-080		CAP,CHIP 4700P
C215	87-010-404-080		CAP, ELECT 4.7-50V
C216	87-010-404-080		CAP, ELECT 4.7-50V
C217	87-010-260-080		CAP, ELECT 47-25V
C218	87-010-260-080		CAP, ELECT 47-25V
C229	87-A10-812-080		C-CAP,S 220P-200 J CH
C230	87-A10-812-080		C-CAP,S 220P-200 J CH
C233	87-010-544-080		CAP, ELECT 0.1-50V
C234	87-010-544-080		CAP, ELECT 0.1-50V
C235	87-010-196-080		CHIP CAPACITOR,0.1-25
C237	87-012-368-080		C-CAP,S 0.1-50 F
C238	87-012-368-080		C-CAP,S 0.1-50 F
C239	87-012-368-080		C-CAP,S 0.1-50 F
C240	87-012-368-080		C-CAP,S 0.1-50 F
C247	87-010-168-080		CAP, CHIP 150P
C248	87-010-168-080		CAP, CHIP 150P
C280	87-010-182-080		C-CAP,S 2200P-50 B
C298	87-010-196-080		CHIP CAPACITOR,0.1-25
C301	87-010-318-080		C-CAP,S 47P-50 CH
C302	87-010-318-080		C-CAP,S 47P-50 CH
C303	87-012-157-080		C-CAP,S 330P-50 CH
C304	87-012-157-080		C-CAP,S 330P-50 CH
C305	87-012-145-080		CAP, CHIP S 270P CH
C306	87-012-145-080		CAP, CHIP S 270P CH
C307	87-010-196-080		CHIP CAPACITOR,0.1-25
C309	87-010-196-080		CHIP CAPACITOR,0.1-25
C310	87-010-196-080		CHIP CAPACITOR,0.1-25
C311	87-010-198-080		CAP, CHIP 0.022
C312	87-010-198-080		CAP, CHIP 0.022
C313	87-010-180-080		CAP,CHIP S B1500P<U>
C313	87-010-178-080		CHIP CAP 1000P<LH>
C314	87-010-180-080		CAP,CHIP S B1500P<U>
C314	87-010-178-080		CHIP CAP 1000P<LH>
C315	87-010-182-080		C-CAP,S 2200P-50 KB C2012<U>

http://www.xiaoyu163.com

http://www.xiaoyu163.com

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C315	87-010-178-080		CHIP CAP 1000P<LH>
C316	87-010-182-080		C-CAP,S 2200P-50 KB C2012<U>
C316	87-010-178-080		CHIP CAP 1000P<LH>
C321	87-016-492-080		C-CAP,S 0.33-16 FZ
C322	87-016-492-080		C-CAP,S 0.33-16 FZ
C324	87-010-260-080		CAP, ELECT 47-25V
C325	87-010-370-080		CAP,E 330-6.3 SME
C327	87-010-404-080		CAP, ELECT 4.7-50V
C328	87-010-404-080		CAP, ELECT 4.7-50V
C332	87-010-196-080		CHIP CAPACITOR,0.1-25
C335	87-010-401-080		CAP, ELECT 1-50V
C336	87-010-401-080		CAP, ELECT 1-50V
C337	87-010-196-080		CHIP CAPACITOR,0.1-25
C339	87-010-196-080		CHIP CAPACITOR,0.1-25
C340	87-010-196-080		CHIP CAPACITOR,0.1-25
C351	87-012-140-080		CAP 470P
C352	87-012-140-080		CAP 470P
C354	87-010-175-080		CAP 560P
C355	87-012-349-080		C-CAP,S 1000P-50 CH
C356	87-010-260-080		CAP, ELECT 47-25V
C357	87-010-197-080		CAP, CHIP 0.01 DM
C358	87-010-183-080		C-CAP,S 2700P-50 B
C359	87-010-183-080		C-CAP,S 2700P-50 B
C360	87-010-183-080		C-CAP,S 2700P-50 B
C370	87-010-196-080		CHIP CAPACITOR,0.1-25
C373	87-016-083-080		C-CAP,S 0.15-16 RK
C374	87-016-083-080		C-CAP,S 0.15-16 RK
C378	87-010-196-080		CHIP CAPACITOR,0.1-25
C379	87-010-382-080		CAP, ELECT 22-25V
C380	87-010-382-080		CAP, ELECT 22-25V
C381	87-010-197-080		CAP, CHIP 0.01 DM
C382	87-010-312-080		C-CAP,S 15P-50 CH
C383	87-010-197-080		CAP, CHIP 0.01 DM
C384	87-010-402-080		CAP, ELECT 2.2-50V
C386	87-010-196-080		CHIP CAPACITOR,0.1-25
C387	87-012-145-080		CAP, CHIP S 270P CH
C391	87-010-319-080		C-CAP,S 56P-50 CH
C392	87-010-319-080		C-CAP,S 56P-50 CH
C393	87-010-319-080		C-CAP,S 56P-50 CH
C394	87-010-319-080		C-CAP,S 56P-50 CH
C401	87-010-405-080		CAP, ELECT 10-50V
C402	87-010-405-080		CAP, ELECT 10-50V
C403	87-010-182-080		C-CAP,S 2200P-50 B
C404	87-010-182-080		C-CAP,S 2200P-50 B
C405	87-010-193-080		CHIP CAPACITOR,0.033
C406	87-010-193-080		CHIP CAPACITOR,0.033
C407	87-010-405-080		CAP, ELECT 10-50V
C408	87-010-405-080		CAP, ELECT 10-50V
C409	87-010-380-080		CAP, ELECT 47-16V
C410	87-010-380-080		CAP, ELECT 47-16V
C411	87-010-405-080		CAP, ELECT 10-50V
C412	87-010-112-080		CAP, ELECT 100-16V
C415	87-010-187-080		CAP CHIP S5600P
C416	87-010-187-080		CAP CHIP S5600P
C457	87-010-400-080		CAP, ELECT 0.47-50V
C458	87-010-400-080		CAP, ELECT 0.47-50V
C516	87-010-196-080		CHIP CAPACITOR,0.1-25
C601	87-010-180-080		C-CER 1500P
C602	87-010-180-080		C-CER 1500P
C613	87-016-081-080		C-CAP,S 0.1-16 RK
C614	87-016-081-080		C-CAP,S 0.1-16 RK
C619	87-010-185-080		C-CAP,S 3900P-50 B
C620	87-010-185-080		C-CAP,S 3900P-50 B
C621	87-010-401-080		CAP, ELECT 1-50V
C622	87-010-401-080		CAP, ELECT 1-50V
C625	87-010-405-080		CAP, ELECT 10-50V
C626	87-010-405-080		CAP, ELECT 10-50V
C629	87-010-405-080		CAP, ELECT 10-50V
C630	87-010-213-080		CAP, CHIP 0.015-25 KB GRM
C631	87-010-992-080		CHIP-CAP,S 0.047-25B
C632	87-010-263-080		CAP, ELECT 100-10V
C633	87-010-263-080		CAP, ELECT 100-10V
C634	87-010-196-080		CHIP CAPACITOR,0.1-25
C635	87-010-196-080		CHIP CAPACITOR,0.1-25
C636	87-010-194-080		CAP, CHIP 0.047
C637	87-010-183-080		C-CAP,S 2700P-50 B
C641	87-010-196-080		CHIP CAPACITOR,0.1-25
C667	87-010-196-080		CHIP CAPACITOR,0.1-25
C701	87-010-381-080		CAP, ELECT 330-16V
C702	87-010-404-080		CAP, ELECT 4.7-50V
C703	87-010-197-080		CAP, CHIP 0.01 DM
C704	87-010-197-080		CAP, CHIP 0.01 DM
C709	87-010-322-080		C-CAP,S 100P-50 CH
C711	87-010-263-080		CAP, ELECT 100-10V
C712	87-010-196-080		CHIP CAPACITOR,0.1-25
C713	87-010-197-080		CAP, CHIP 0.01 DM
C714	87-010-197-080		CAP, CHIP 0.01 DM
C721	87-010-312-080		C-CAP,S 15P-50 CH
C722	87-010-312-080		C-CAP,S 15P-50 CH
C723	87-010-178-080		CHIP CAP 1000P
C725	87-010-178-080		CHIP CAP 1000P
C727	87-010-196-080		CHIP CAPACITOR,0.1-25
C728	87-010-248-080		CAP, ELECT 220-10V
C755	87-010-197-080		CAP, CHIP 0.01 DM
C756	87-010-197-080		CAP, CHIP 0.01 DM
C757	87-010-318-080		C-CAP,S 47P-50 CH
C758	87-010-149-080		C-CAP,S 5P-50 CH
C759	87-012-156-080		C-CAP,S 220P-50 CH
C760	87-012-156-080		C-CAP,S 220P-50 CH
C761	87-010-196-080		CHIP CAPACITOR,0.1-25
C762	87-010-197-080		CAP, CHIP 0.01 DM
C763	87-010-194-080		CAP, CHIP 0.047
C764	87-010-319-080		C-CAP,S 56P-50 CH
C765	87-010-197-080		CAP, CHIP 0.01 DM
C766	87-010-197-080		CAP, CHIP 0.01 DM
C767	87-010-405-080		CAP, ELECT 10-50V
C768	87-010-197-080		CAP, CHIP 0.01 DM
C769	87-010-408-080		CAP, ELECT 47-50V
C770	87-015-821-080		C-CAP 0.047
C771	87-010-407-080		CAP, ELECT 33-50V
C772	87-010-194-080		CAP, CHIP 0.047
C773	87-010-196-080		CHIP CAPACITOR,0.1-25
C774	87-010-263-080		CAP, ELECT 100-10V
C775	87-010-404-080		CAP, ELECT 4.7-50V
C776	87-010-197-080		CAP, CHIP 0.01 DM
C777	87-010-400-080		CAP, ELECT 0.47-50V
C778	87-010-401-080		CAP, ELECT 1-50V
C779	87-010-401-080		CAP, ELECT 1-50V
C780	87-010-196-080		CHIP CAPACITOR,0.1-25
C781	87-010-405-080		CAP, ELECT 10-50V
C782	87-010-405-080		CAP, ELECT 10-50V
C783	87-015-819-080		CAPACITOR,0.01
C784	87-010-197-080		CAP, CHIP 0.01 DM
C785	87-010-403-080		CAP, ELECT 3.3-50V
C786	87-010-403-080		CAP, ELECT 3.3-50V
C789	87-010-179-080		CAP,CHIP S B1200P
C790	87-010-179-080		CAP,CHIP S B1200P
C791	87-010-405-080		CAP, ELECT 10-50V
C793	87-010-177-080		C-CAP,S 820P-50 SL
C794	87-010-406-080		CAP, ELECT 22-50
C795	87-010-596-080		CAP, S 0.047-16
C796	87-010-403-080		CAP, ELECT 3.3-50V
C797	87-010-181-080		CAP,CHIP S 1800P
C798	87-010-181-080		CAP,CHIP S 1800P
C799	87-010-194-080		CAP, CHIP 0.047
C812	87-010-197-080		CAP, CHIP 0.01 DM
C814	87-010-197-080		CAP, CHIP 0.01 DM
C820	87-010-408-080		CAP, ELECT 47-50V
C821	87-010-197-080		CAP, CHIP 0.01 DM
C822	87-010-197-080		CAP, CHIP 0.01 DM

http://www.xiaoyu163.com

http://www.xiaoyu163.com

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C823	87-010-197-080		CAP, CHIP 0.01 DM
C828	87-010-196-080		CHIP CAPACITOR,0.1-25
C829	87-010-196-080		CHIP CAPACITOR,0.1-25
C959	87-010-196-080		CHIP CAPACITOR,0.1-25
C960	87-010-196-080		CHIP CAPACITOR,0.1-25
C961	87-010-152-080		C-CAP,S 8P-50 CH
CF801	87-008-261-010		FILTER, SFE10.7MA5-A
CF802	87-008-261-010		FILTER, SFE10.7MA5-A
CON351	86-ZM3-605-010		CONN ASSY,8P-RPB<U>
FC602	88-906-241-110		FF-CABLE,6P 1.25
FFE801	A8-8ZA-190-030		8ZA-1 FEUNM
J201	87-A60-488-010		JACK,DIA6.3 BLK ST W/SW KM16AT
J202	87-A60-547-010		JACK,PIN 4P R/W/B
J203	87-033-240-010		TERMINAL,SP 4P32SV1-05
J601	87-A60-402-010		JACK,PIN 6P R/W HSP-246V30
J801	87-A60-202-010		TERMINAL,ANT 4P MSP-154V-02
L201	87-003-383-010		COIL,1UH-S
L202	87-003-383-010		COIL,1UH-S
L301	87-A50-049-010		COIL,TRAP 85K(COI)
L302	87-A50-049-010		COIL,TRAP 85K(COI)
L351	87-007-342-010		COIL,OSC 85K BIAS
L771	87-A50-266-010		COIL,FM DET-2N(TOK)
L772	87-A90-733-010		FLTR,PCFAZH-450 (TOK)
L781	87-005-847-080		COIL,2.2UH(CECS)
L832	86-NFZ-694-080		COIL,2.2UH K CECS
L981	87-NF4-650-010		COIL,AM PACK 4N(TOK)
R123	87-022-200-080		RESISTOR, METAL 0.56 1W<U>
R237	87-A00-257-080		RES,M/F 0.15-1W J<U>
R237	87-A00-262-080		RES,M/F 0.15-2W J<LH>
R238	87-A00-257-080		RES,M/F 0.15-1W J<U>
R238	87-A00-262-080		RES,M/F 0.15-2W J<LH>
R239	87-A00-257-080		RES,M/F 0.15-1W J<U>
R239	87-A00-262-080		RES,M/F 0.15-2W J<LH>
R240	87-A00-257-080		RES,M/F 0.15-1W J<U>
R240	87-A00-262-080		RES,M/F 0.15-2W J<LH>
RY101	87-A90-464-010		RELAY, DG12D2-O(M)
RY201	87-A90-713-010		RELAY, 12V DQ12D1
SFR351	87-A90-433-080		SFR,50K H NVZ6TLTA
SFR352	87-A90-433-080		SFR,50K H NVZ6TLTA
W104	85-NF5-628-010		F-CABLE 7P-2.5
X721	87-A70-061-010		VIB,XTAL 4.500MHZ CSA-309

FRONT C.B

C101	87-010-550-040		CAP,E 100-6.3 GAS
C102	87-010-196-080		CHIP CAPACITOR,0.1-25
C103	87-010-196-080		CHIP CAPACITOR,0.1-25
C104	87-010-494-040		CAP,E 1-50 GAS
C105	87-010-178-080		CHIP CAP 1000P
C106	87-A10-189-040		CAP,E 220-10
C107	87-010-197-080		CAP, CHIP 0.01 DM
C108	87-010-196-080		CHIP CAPACITOR,0.1-25
C109	87-018-208-080		CAP 0.047-50F
C110	87-012-157-080		C-CAP,S 330P-50 CH
C111	87-010-320-080		CHIP CAP 68P
C112	87-010-312-080		C-CAP,S 15P-50 CH
C113	87-010-316-080		C-CAP,S 33P-50 CH
C114	87-010-182-080		C-CAP,S 2200P-50 B
C115	87-010-182-080		C-CAP,S 2200P-50 B
C116	87-010-498-040		CAP,E 10-16 GAS
C117	87-012-157-080		C-CAP,S 330P-50 CH
C118	87-010-196-080		CHIP CAPACITOR,0.1-25
C119	87-010-196-080		CHIP CAPACITOR,0.1-25
C120	87-010-196-080		CHIP CAPACITOR,0.1-25
C121	87-010-194-080		CAP, CHIP 0.047
C122	87-010-194-080		CAP, CHIP 0.047
C124	87-010-263-040		CAP,E 100-10
C125	87-010-196-080		CHIP CAPACITOR,0.1-25
C201	87-010-178-080		CHIP CAP 1000P
C202	87-010-194-080		CAP, CHIP 0.047
C203	87-A10-797-040		CAP,E 47-35 M 5L SRM
C204	87-010-497-040		CAP,E 4.7-35 GAS
C205	87-010-497-040		CAP,E 4.7-35 GAS
C206	87-012-157-080		C-CAP,S 330P-50 CH
C207	87-012-157-080		C-CAP,S 330P-50 CH
C208	87-012-157-080		C-CAP,S 330P-50 CH
C209	87-012-157-080		C-CAP,S 330P-50 CH
C210	87-012-157-080		C-CAP,S 330P-50 CH
C211	87-012-157-080		C-CAP,S 330P-50 CH
C212	87-012-157-080		C-CAP,S 330P-50 CH
C213	87-012-157-080		C-CAP,S 330P-50 CH
C214	87-012-157-080		C-CAP,S 330P-50 CH
C215	87-012-157-080		C-CAP,S 330P-50 CH
C216	87-012-157-080		C-CAP,S 330P-50 CH
C217	87-012-157-080		C-CAP,S 330P-50 CH
C218	87-012-157-080		C-CAP,S 330P-50 CH
C371	87-010-196-080		CHIP CAPACITOR,0.1-25
C372	87-010-196-080		CHIP CAPACITOR,0.1-25
C373	87-010-196-080		CHIP CAPACITOR,0.1-25
C375	87-010-196-080		CHIP CAPACITOR,0.1-25
C376	87-010-173-080		C-CAP,S 390P-50 SL
C377	87-010-196-080		CHIP CAPACITOR,0.1-25
C378	87-010-196-080		CHIP CAPACITOR,0.1-25
C402	87-010-196-080		CHIP CAPACITOR,0.1-25
C404	87-010-196-080		CHIP CAPACITOR,0.1-25
C406	87-010-196-080		CHIP CAPACITOR,0.1-25
C408	87-010-196-080		CHIP CAPACITOR,0.1-25
C501	87-010-319-080		C-CAP,S 56P-50 CH<LH>
C502	87-010-319-080		C-CAP,S 56P-50 CH<LH>
C503	87-012-393-080		C-CAP,S 0.22-16 R K<LH>
C504	87-010-197-080		CAP, CHIP 0.01 DM<LH>
C505	87-010-180-080		C-CER 1500P<LH>
C506	87-010-213-080		C-CAP,S 0.015-50 B<LH>
C507	87-010-213-080		C-CAP,S 0.015-50 B<LH>
C508	87-010-197-080		CAP, CHIP 0.01 DM<LH>
C509	87-010-181-080		CAP,CHIP S 1800P<LH>
C510	87-010-196-080		CHIP CAPACITOR,0.1-25<LH>
C511	87-018-209-080		CAP, CER 0.1-50V<LH>
C512	87-010-374-040		CAP,E 47-10<LH>
C513	87-010-401-040		CAP,E 1-50 SME<LH>
C514	87-010-401-040		CAP,E 1-50 SME<LH>
C515	87-010-183-080		C-CAP,S 2700P-50 B<LH>
C516	87-010-183-080		C-CAP,S 2700P-50 B<LH>
C518	87-010-196-080		CHIP CAPACITOR,0.1-25<LH>
C519	87-010-263-040		CAP,E 100-10<LH>
C523	87-012-141-080		CHIP-CAPACITOR,0.22-16F<LH>
C601	87-010-391-040		CAP,E 10-35 SME
C602	87-010-186-080		CAP,CHIP 4700P<LH>
C603	87-010-498-040		CAP,E 10-16 GAS<LH>
C604	87-010-382-040		CAP,E 22-25 SME<LH>
C605	87-010-196-080		CHIP CAPACITOR,0.1-25
C606	87-010-322-080		C-CAP,S 100P-50 CH
C607	87-010-321-080		CHIP CAPACITOR,82P(J)
C608	87-016-492-080		C-CAP,S 0.33-16 FZ<U>
C608	87-010-196-080		CHIP CAPACITOR,0.1-25<LH>
C609	87-010-545-040		CAP,E 0.22-50 SME
C611	87-010-177-080		C-CAP,S 820P-50 SL
C614	87-A10-189-040		CAP,E 220-10
C651	87-010-401-040		CAP,E 1-50 SME
C652	87-010-196-080		CHIP CAPACITOR,0.1-25
C653	87-010-196-080		CHIP CAPACITOR,0.1-25
FB601	87-008-372-080		FILTER, EMI BL OIRNI
FC501	85-NF5-615-010		CABLE,FFC 15P-1.25<LH>
FC501	88-911-201-110		FF-CABLE,11P 1.25<U>
FC801	85-NF5-618-010		CABLE,FFC 13P-1.25
FL201	88-NF7-651-010		FL,BJ602GK
J601	87-A60-284-010		JACK,3.5MO (MSC)
J602	87-A60-284-010		JACK,3.5MO (MSC)<LH>
L501	87-005-448-080		COIL 220UH,K<LH>

http://www.xiaoyu163.com

http://www.xiaoyu163.com

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
LED401	87-070-197-080		LED,SLP7118C-51-S-T1
LED403	87-070-197-080		LED,SLP7118C-51-S-T1
LED405	87-070-197-080		LED,SLP7118C-51-S-T1
LED407	87-070-197-080		LED,SLP7118C-51-S-T1
LED409	87-070-197-080		LED,SLP7118C-51-S-T1
LED411	87-070-201-080		LED,SLP9118C-51-S-T1
LED412	87-070-201-080		LED,SLP9118C-51-S-T1
LED413	87-070-201-080		LED,SLP9118C-51-S-T1
LED414	87-070-201-080		LED,SLP9118C-51-S-T1
LED415	87-070-201-080		LED,SLP9118C-51-S-T1
LED417	87-070-281-080		LED,SLZ736A-25-S-T1
LED419	87-070-281-080		LED,SLZ736A-25-S-T1
LED421	87-070-281-080		LED,SLZ736A-25-S-T1
LED423	87-070-281-080		LED,SLZ736A-25-S-T1
LED425	87-070-281-080		LED,SLZ736A-25-S-T1
LED427	87-070-281-080		LED,SLZ736A-25-S-T1
LED428	87-A40-380-080		LED,SEL6510C-TP5 GRN
LED429	87-A40-380-080		LED,SEL6510C-TP5 GRN
LED430	87-A40-380-080		LED,SEL6510C-TP5 GRN
LED431	87-A40-380-080		LED,SEL6510C-TP5 GRN
LED432	87-A40-380-080		LED,SEL6510C-TP5 GRN
LED433	87-A40-380-080		LED,SEL6510C-TP5 GRN
LED434	87-A40-380-080		LED,SEL6510C-TP5 GRN
LED435	87-A40-380-080		LED,SEL6510C-TP5 GRN
LED436	87-A40-380-080		LED,SEL6510C-TP5 GRN
LED437	87-A40-380-080		LED,SEL6510C-TP5 GRN
LED444	87-070-278-010		LED,SLZ-738A-24-S
LED445	87-070-290-010		LED,SLZ 936-30-S
LED446	87-070-278-010		LED,SLZ-738A-24-S
LED447	87-070-278-010		LED,SLZ-738A-24-S
LED448	87-070-290-010		LED,SLZ 936-30-S
LED449	87-070-278-010		LED,SLZ-738A-24-S
S101	87-A90-791-010		SW,RTRY EC16B12204 ENCODER
S102	87-A90-535-010		SW,RTRY EC16B24304
S301	87-A90-095-080		SW,TACT EVQ11G04M
S302	87-A90-095-080		SW,TACT EVQ11G04M
S303	87-A90-095-080		SW,TACT EVQ11G04M<LH>
S304	87-A90-095-080		SW,TACT EVQ11G04M<LH>
S305	87-A90-095-080		SW,TACT EVQ11G04M<LH>
S306	87-A90-095-080		SW,TACT EVQ11G04M
S307	87-A90-095-080		SW,TACT EVQ11G04M
S308	87-A90-095-080		SW,TACT EVQ11G04M
S309	87-A90-095-080		SW,TACT EVQ11G04M
S310	87-A90-095-080		SW,TACT EVQ11G04M
S311	87-A90-095-080		SW,TACT EVQ11G04M
S312	87-A90-095-080		SW,TACT EVQ11G04M
S313	87-A90-095-080		SW,TACT EVQ11G04M<LH>
S321	87-A90-095-080		SW,TACT EVQ11G04M
S322	87-A90-095-080		SW,TACT EVQ11G04M
S323	87-A90-095-080		SW,TACT EVQ11G04M
S324	87-A90-095-080		SW,TACT EVQ11G04M
S325	87-A90-095-080		SW,TACT EVQ11G04M
S326	87-A90-095-080		SW,TACT EVQ11G04M
S327	87-A90-095-080		SW,TACT EVQ11G04M
S335	87-A90-095-080		SW,TACT EVQ11G04M
S341	87-A90-095-080		SW,TACT EVQ11G04M
S342	87-A90-095-080		SW,TACT EVQ11G04M
S343	87-A90-095-080		SW,TACT EVQ11G04M
S344	87-A90-095-080		SW,TACT EVQ11G04M
S345	87-A90-095-080		SW,TACT EVQ11G04M
S346	87-A90-095-080		SW,TACT EVQ11G04M
S347	87-A90-095-080		SW,TACT EVQ11G04M
S348	87-A90-095-080		SW,TACT EVQ11G04M
S349	87-A90-095-080		SW,TACT EVQ11G04M<LH>
S350	87-A90-095-080		SW,TACT EVQ11G04M<LH>
VR601	87-NB7-602-010		VR,RTRY 10KAX1 1 V<U>
X101	87-A70-070-080		VIB,CER 5.76MHZ CRHF

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
SW C.B			
S351	87-A90-095-080		SW,TACT EVQ11G04M
S352	87-A90-095-080		SW,TACT EVQ11G04M
S353	87-A90-095-080		SW,TACT EVQ11G04M
S354	87-A90-095-080		SW,TACT EVQ11G04M
S355	87-A90-095-080		SW,TACT EVQ11G04M
AC1 C.B			
⚠ FC1	87-033-147-010		FUSE CLAMP,MT-20<LH>
⚠ F101	87-035-369-010		FUSE,5A 250V TE<LH>
⚠ F101	87-035-416-010		FUSE,T3A 250V UL<U>
⚠ FC2	87-033-147-010		FUSE CLAMP,MT-20<LH>
⚠ FC101	87-A90-505-080		FUSE CLAMP,TP00351-51<U>
⚠ FC102	87-A90-505-080		FUSE CLAMP,TP00351-51<U>
⚠ PT101	88-NF7-663-010		PT,8NF-7 LH<LH>
⚠ PT101	88-NF7-661-010		PT,8NF-7 U<U>
⚠ SW1	87-A90-165-010		SW,SL 1-2-3 SWS2301<LH>
⚠ T1	87-A60-317-010		TERMINAL, 1P MSC<LH>
⚠ T101	87-A60-317-010		TERMINAL, 1P MSC<U>
⚠ T102	87-A60-317-010		TERMINAL, 1P MSC<U>
⚠ T2	87-A60-317-010		TERMINAL, 1P MSC<LH>
AC2 C.B			
⚠ PR101	87-026-691-080		FUSE,10A 125V 251<U>
⚠ PR101	87-026-682-080		PROTECTOR,10A 60V491<LH>
⚠ PR102	87-026-691-080		FUSE,10A 125V 251<U>
⚠ PR102	87-026-682-080		PROTECTOR,10A 60V491<LH>
⚠ PR103	87-026-691-080		FUSE,10A 125V 251<U>
⚠ PR103	87-026-682-080		PROTECTOR,10A 60V491<LH>
⚠ PR104	87-026-691-080		FUSE,10A 125V 251<U>
⚠ PR104	87-026-682-080		PROTECTOR,10A 60V491<LH>
DECK C.B			
CON105	87-099-756-019		CONN, 15P 9604 S F<LH>
CON105	87-099-753-019		CONN, 11P H 9604<U>
SFR1	87-024-581-019		SFR,3.3K DIA 6H
SOL1	82-ZM1-618-410		SOL ASSY, 27
SOL2	82-ZM1-618-410		SOL ASSY, 27
SW1	87-A90-248-019		SW,MICRO ESE11SH2CXQ
SW2	87-A90-248-019		SW,MICRO ESE11SH2CXQ
SW3	87-A90-248-019		SW,MICRO ESE11SH2CXQ
SW4	87-036-110-010		SW,MICRO SPPB62<LH>
SW4	87-A90-248-019		SW,MICRO ESE11SH2CXQ<U>
SW5	87-036-110-010		SW,MICRO SPPB62<LH>
SW5	87-A90-248-019		SW,MICRO ESE11SH2CXQ<U>
SW6	87-036-110-010		SW,MICRO SPPB62<LH>
SW8	87-A90-248-019		SW,MICRO ESE11SH2CXQ<LH>
SW9	87-A90-248-019		SW,MICRO ESE11SH2CXQ<LH>
W001	82-ZM3-601-019		RBN,CORD,4P-75
HEAD-1 C.B			
CON301	85-MA2-615-010		CON ASSY,3P-PB<U>
HEAD-2 C.B			
CON351	87-NF6-616-010		CONN ASSY,8P-RPB<LH>

http://www.xiaoyu163.com

http://www.xiaoyu163.com

○ チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

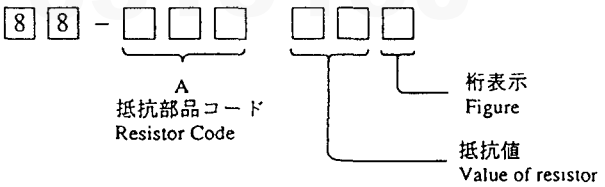

チップ抵抗
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm) 外形／Form	L	W	t	抵抗コード：A Resistor Code: A
1／16W	1608	±5%	CJ		1.6	0.8	0.45	108
1／10W	2125	±5%	CJ		2	1.25	0.45	118
1／8W	3216	±5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION

E C B

KTA1266GR
KTC3198GR

E C B

CC5551

E C B

2SA1296



B C E

2SB1370
2SB1625
2SD2494
FN1016
FP1016



E C B

2SA933
2SC4115

G D S

2SK3053

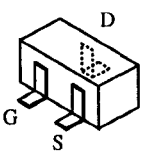

2SK2158

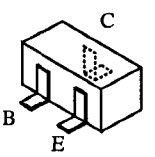

2SA1235F
2SC2714
2SC3052F
CMBT5401
CMBT5551
CSA1362GR
CSD1306E
DTA123JK
DTA144WK
DTC144WK
RN1410
RT1N141C
RT1N144C
RT1P141C
RT1P144C
RT1P441C

http://www.xiaoyu163.com

http://www.xiaoyu163.com

FL GRID ASSIGNMENT & ANODE CONNECTION

FL, BJ602GK

GRID ASSIGNMENT

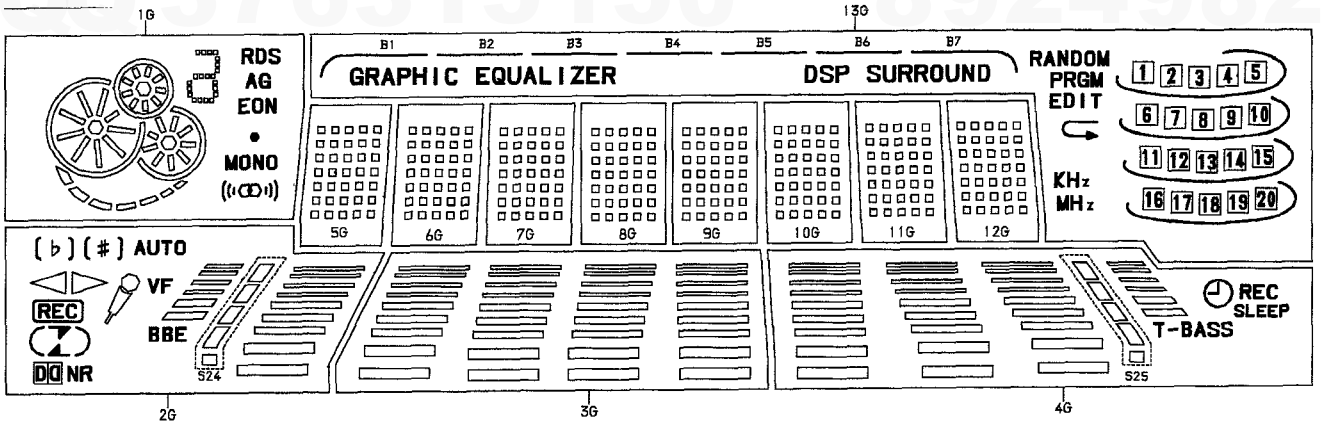

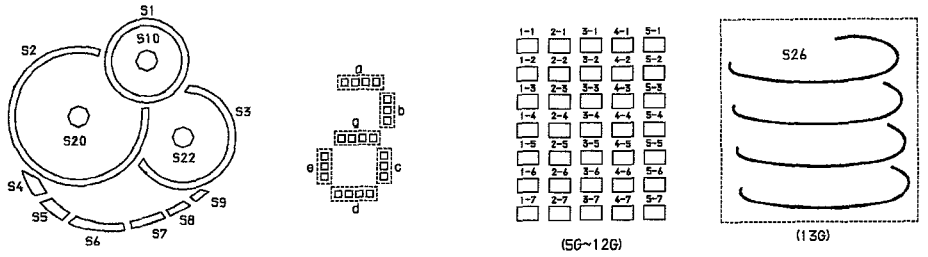

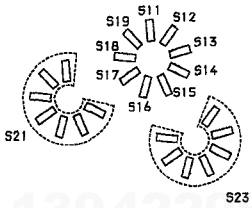

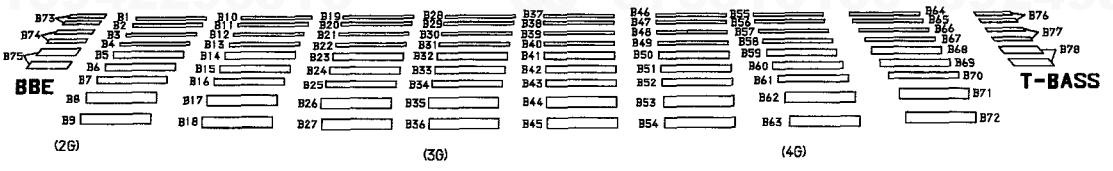

TEL 13942296513 QQ 376315150 892498299

www.xiaoyu163.com

http://www.xiaoyu163.com

http://www.xiaoyu163.com

ANODE CONNECTION

	1G	2G	3G	4G	5G-12G	13G
P1	**EON**	B9	B45	**REC**	1-1	**DSP SURROUND**
P2	**AG**	**DC NR**	B36	B72	2-1	**GRAPHIC EQUALIZER**
P3	◯	**BBE**	B27	B63	3-1	B7
P4	**MONO**	S24	B18	B54	4-1	B6
P5	((CD))	BB	B44	◴	5-1	B5
P6	**RDS**	(	B35	B71	1-2	B4
P7	b	⚑	B26	B62	2-2	B3
P8	c	)	B17	B53	3-2	B2
P9	a, d, g	B7	B43	**SLEEP**	4-2	B1
P10	e	**REC**	B34	B70	5-2	**RANDOM**
P11	S1	◁	B25	B61	1-3	**PRGM**
P12	S11	▷	B16	B52	2-3	**EDIT**
P13	S12	B6	B42	**T-BASS**	3-3	⊂
P14	S19	♭ ♯	B33	B69	4-3	**KHz**
P15	S13	(♭)	B24	B60	5-3	**MHz**
P16	S10	(♯)	B15	B51	1-4	S26
P17	S18	B5	B41	B78	2-4	**16**
P18	S14	B75	B32	B68	3-4	**11**

	1G	2G	3G	4G	5G-12G	13G
P19	S17	B74	B23	B59	4-4	**6**
P20	S15	B73	B14	B50	5-4	**1**
P21	S16	B4	B40	B77	1-5	**17**
P22	S3	VF	B31	B67	2-5	**12**
P23	S23	**AUTO**	B22	B58	3-5	**7**
P24	S22	—	B13	B49	4-5	**2**
P25	S9	B3	B39	B76	5-5	**18**
P26	S8	—	B30	B66	1-6	**13**
P27	S7	—	B21	B57	2-6	**8**
P28	S6	—	B12	B48	3-6	**3**
P29	S5	B2	B38	S25	4-6	**19**
P30	S4	—	B29	B65	5-6	**14**
P31	S2	—	B20	B56	1-7	**9**
P32	S21	—	B11	B47	2-7	**4**
P33	S20	B1	B37	—	3-7	**20**
P34	—	—	B28	B64	4-7	**15**
P35	—	—	B19	B55	5-7	**10**
P36	—	—	B10	B46	—	**5**

TEL 13942296513 QQ 376315150 892498299
www.xiaoyu163.com

http://www.xiaoyu163.com

http://www.xiaoyu163.com

IC BLOCK DIAGRAM – 1

IC, HA12185NT

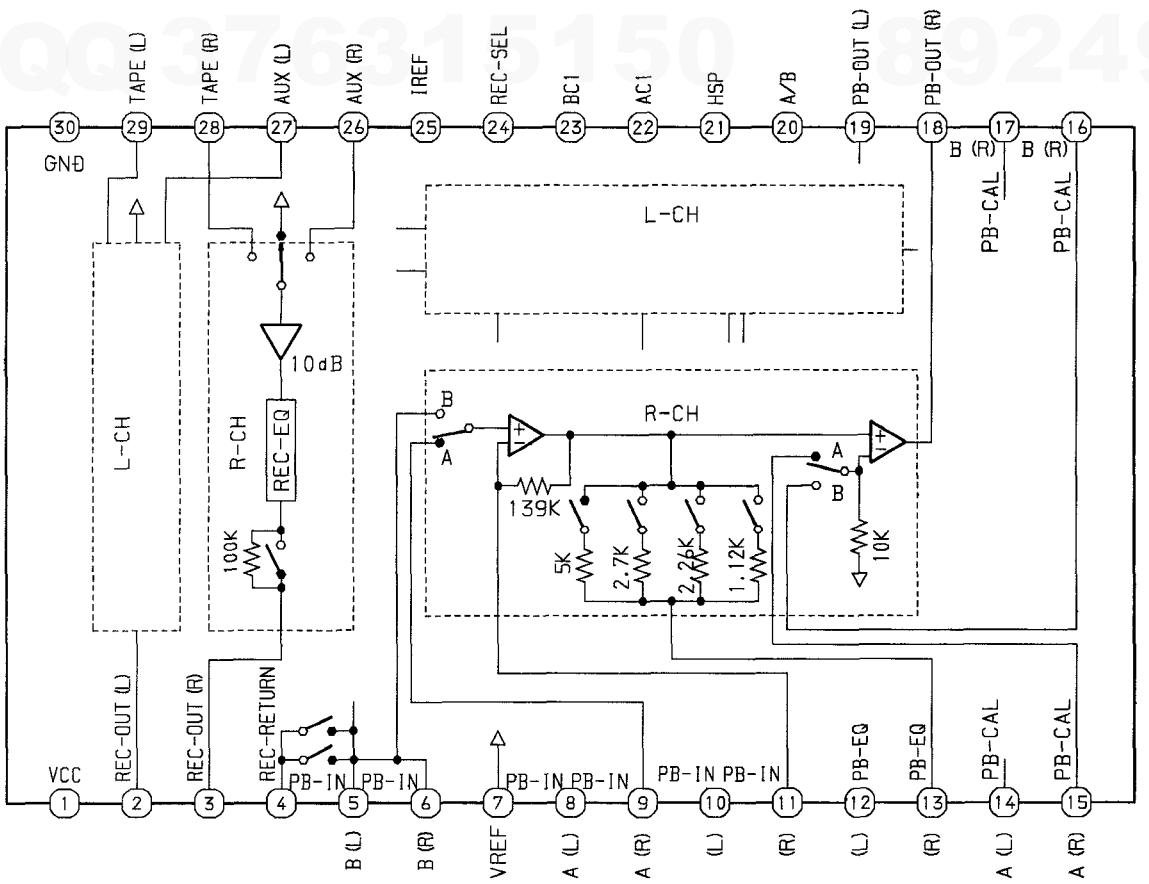

IC, BA7762FS

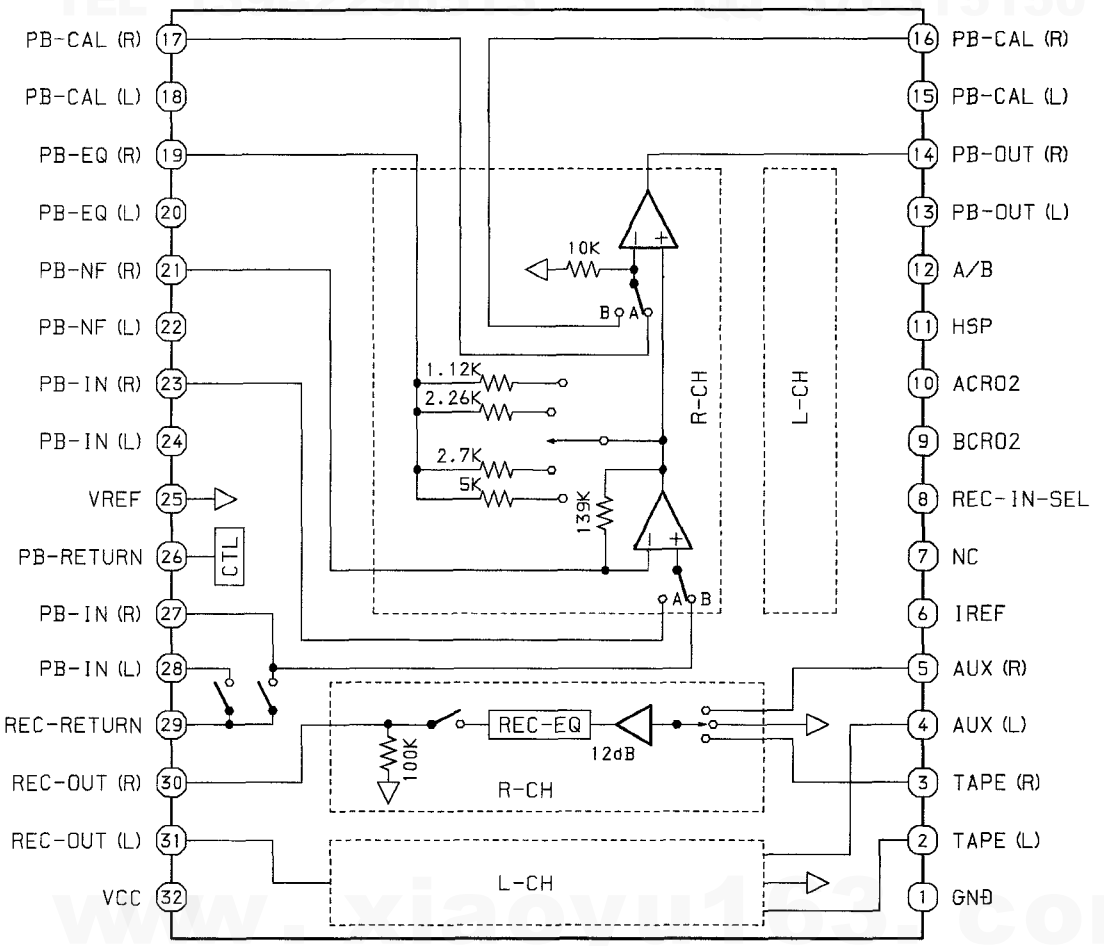

http://www.xiaoyu163.com

http://www.xiaoyu163.com

BLOCK DIAGRAM (MAIN / FRONT)

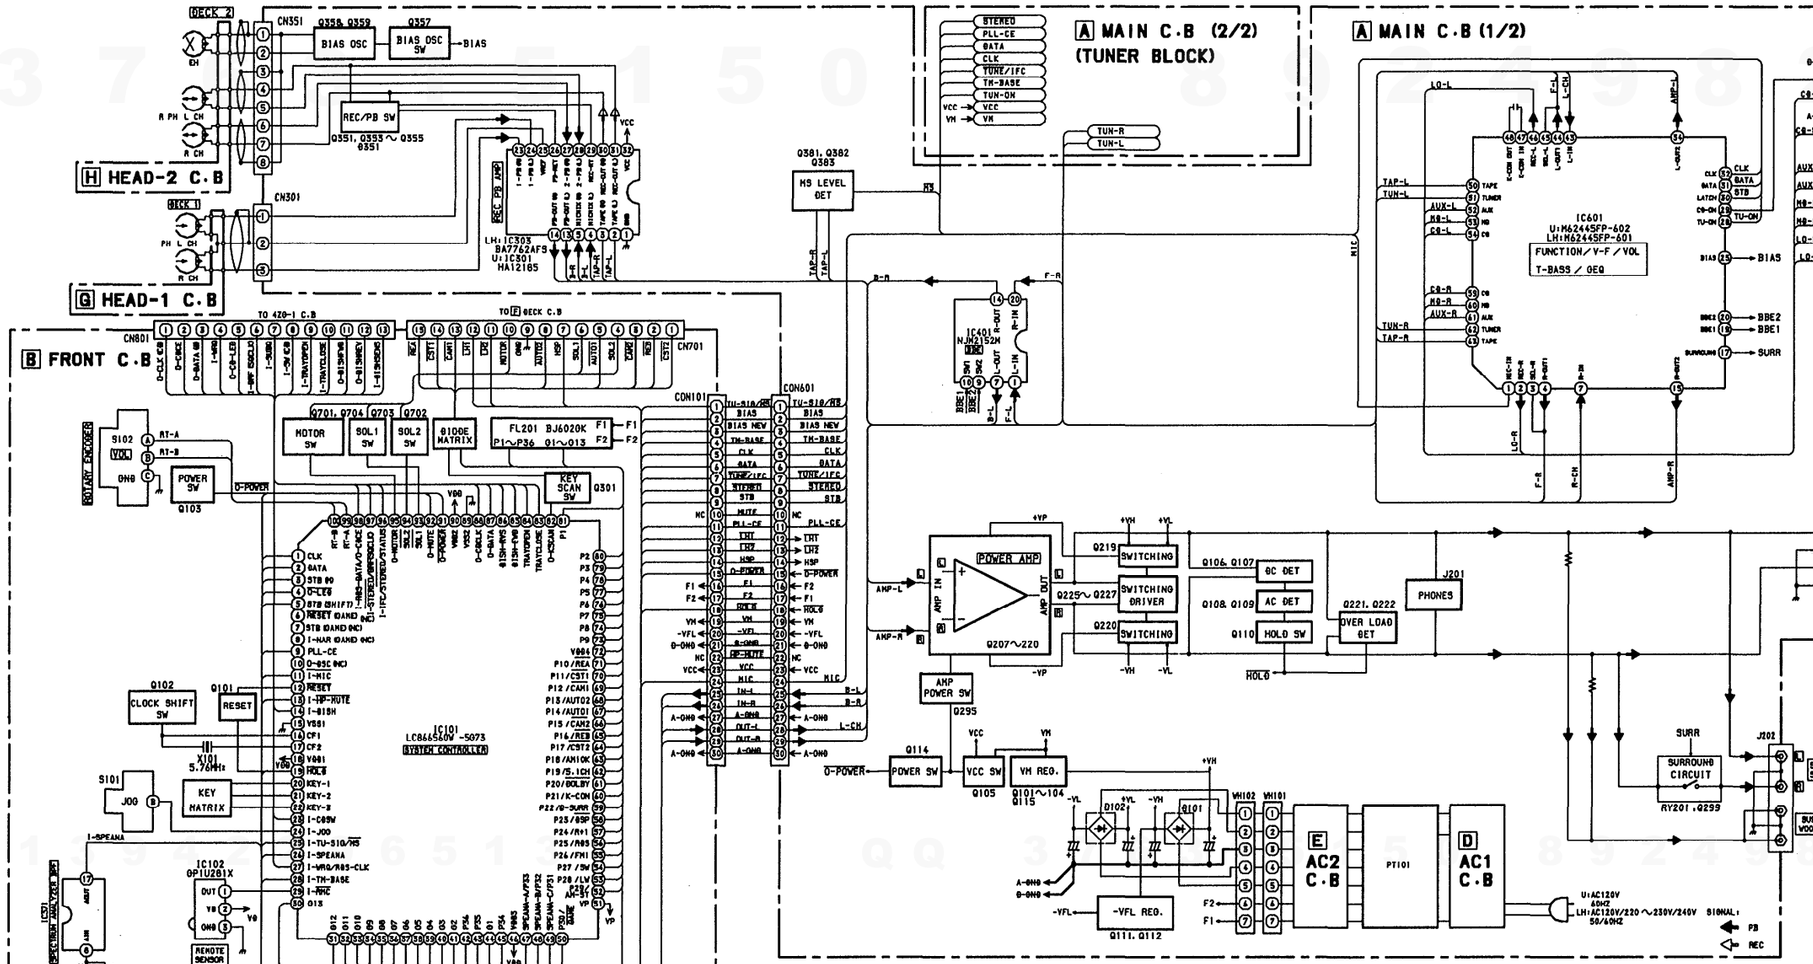

http://www.xiaoyu163.com

http://www.xiaoyu163.com

1 2 3 4 5 6 7 8 9 10 11 12 13 14

A B C D E F G H I J

A MAIN C.B

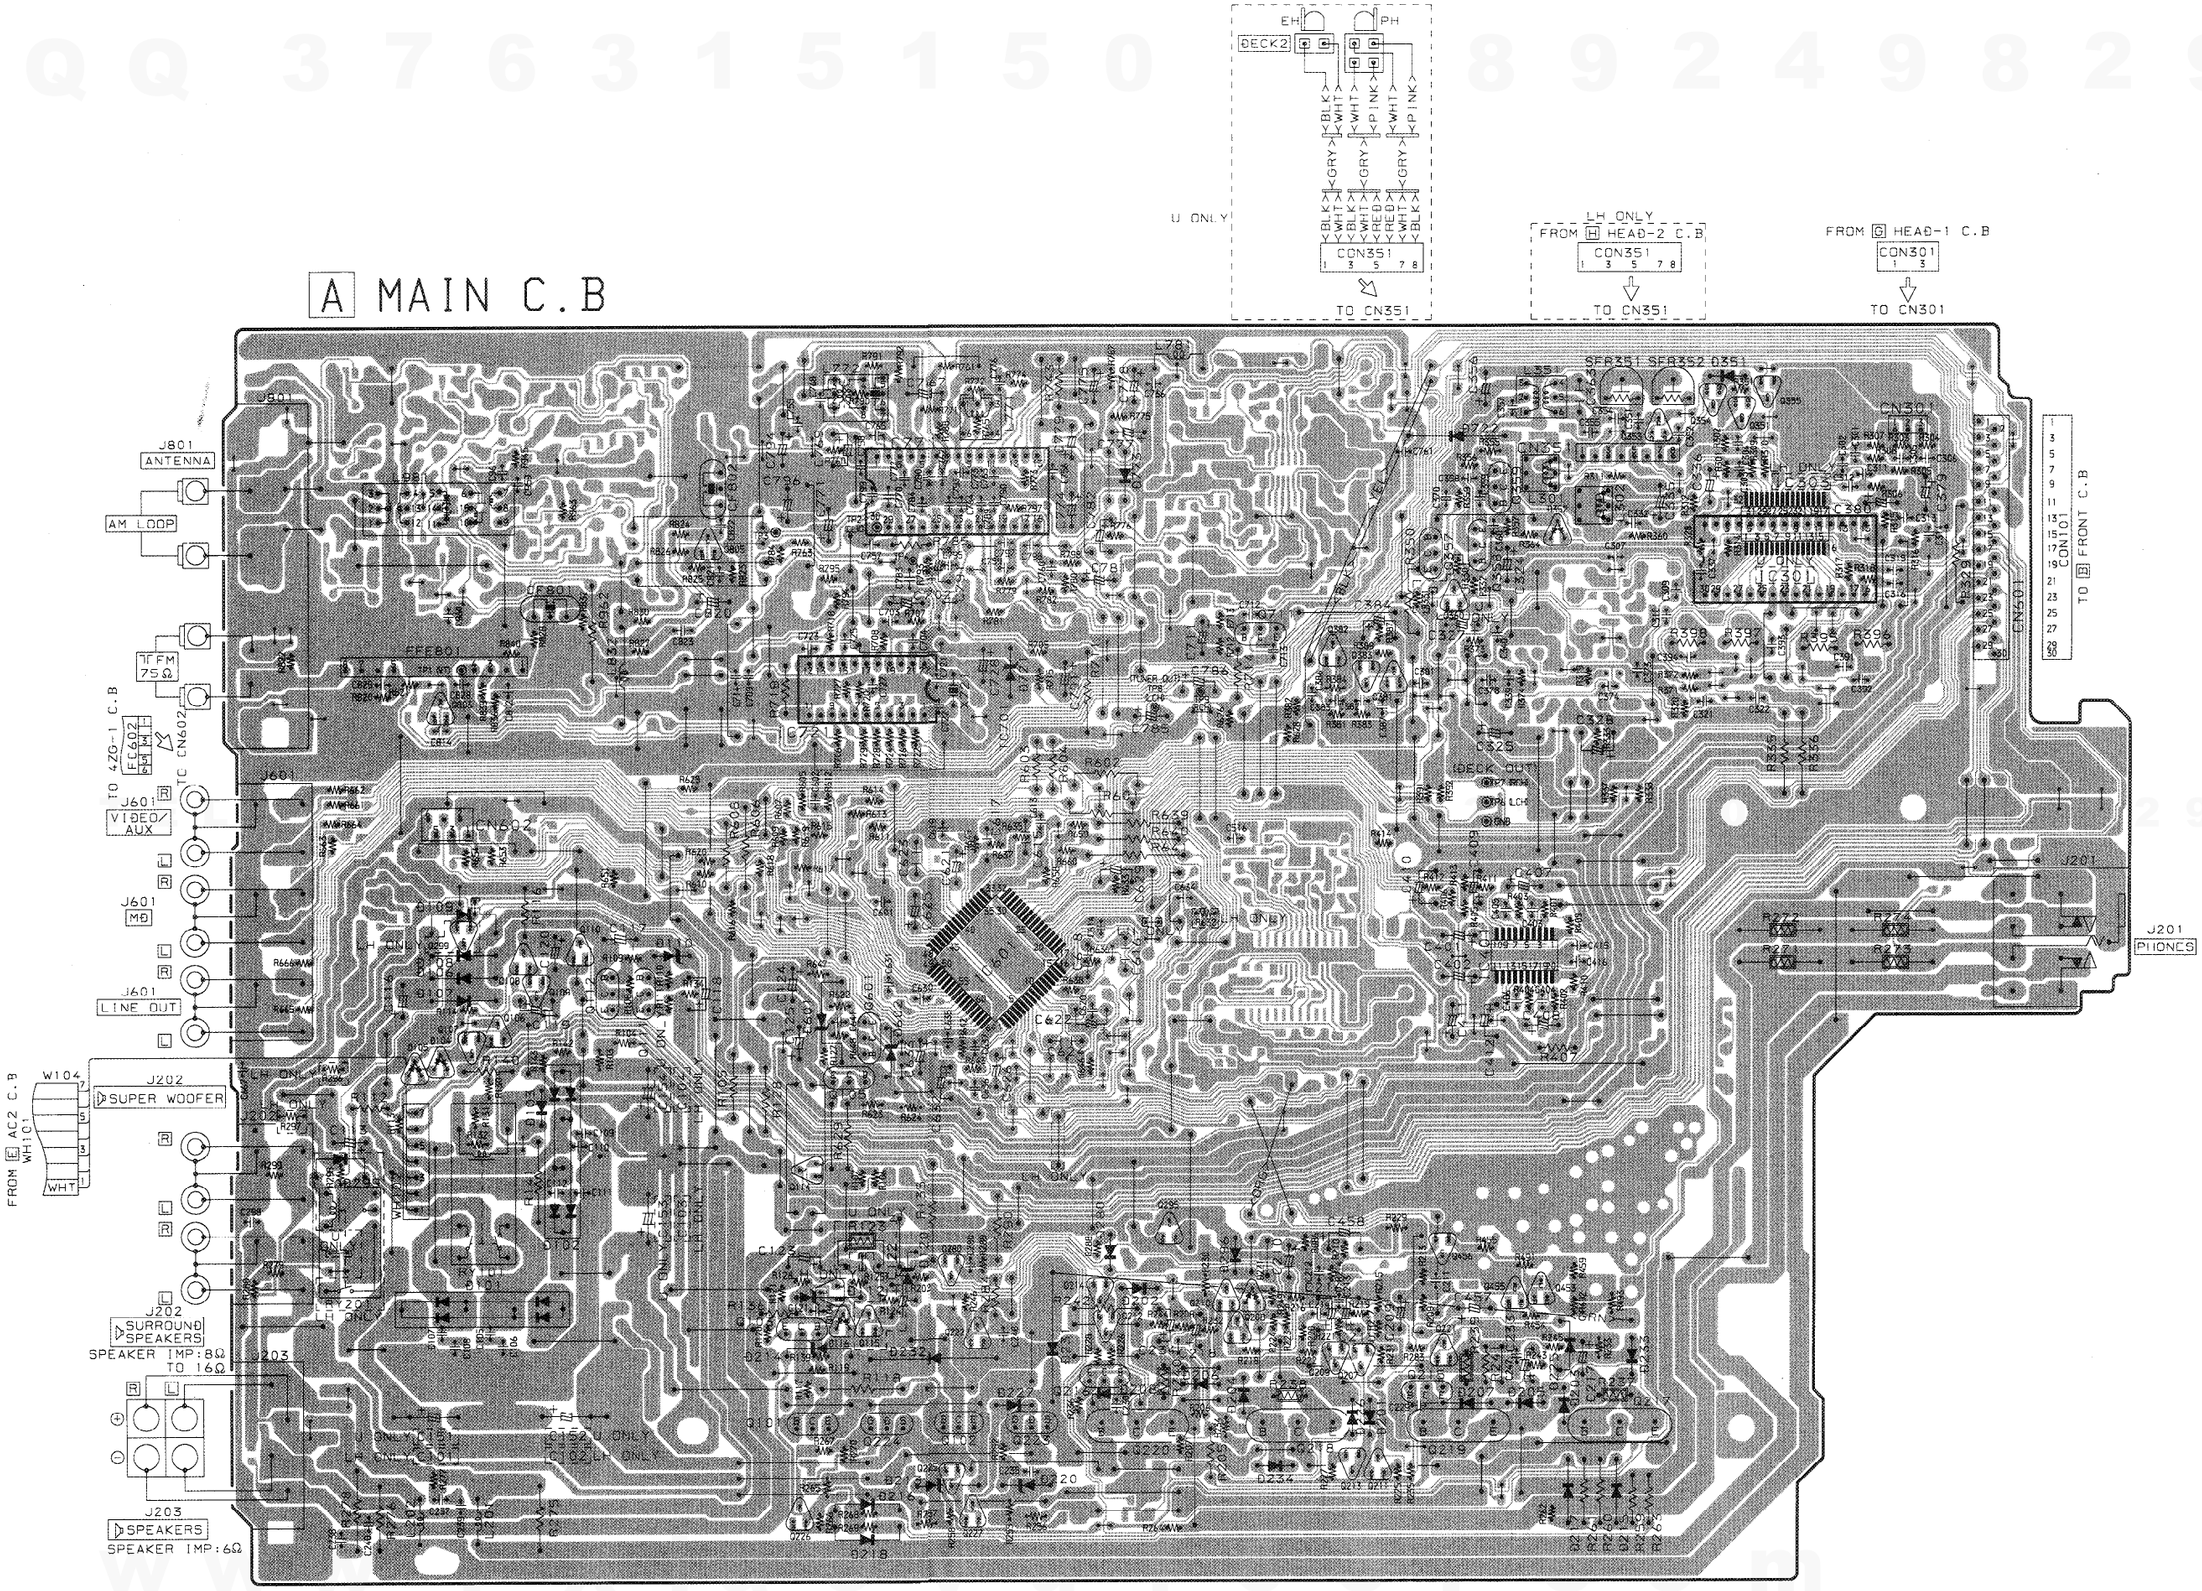

http://www.xiaoyu163.com

http://www.xiaoyu163.com

SCHEMATIC DIAGRAM – 1 (MAIN 1 / 2)

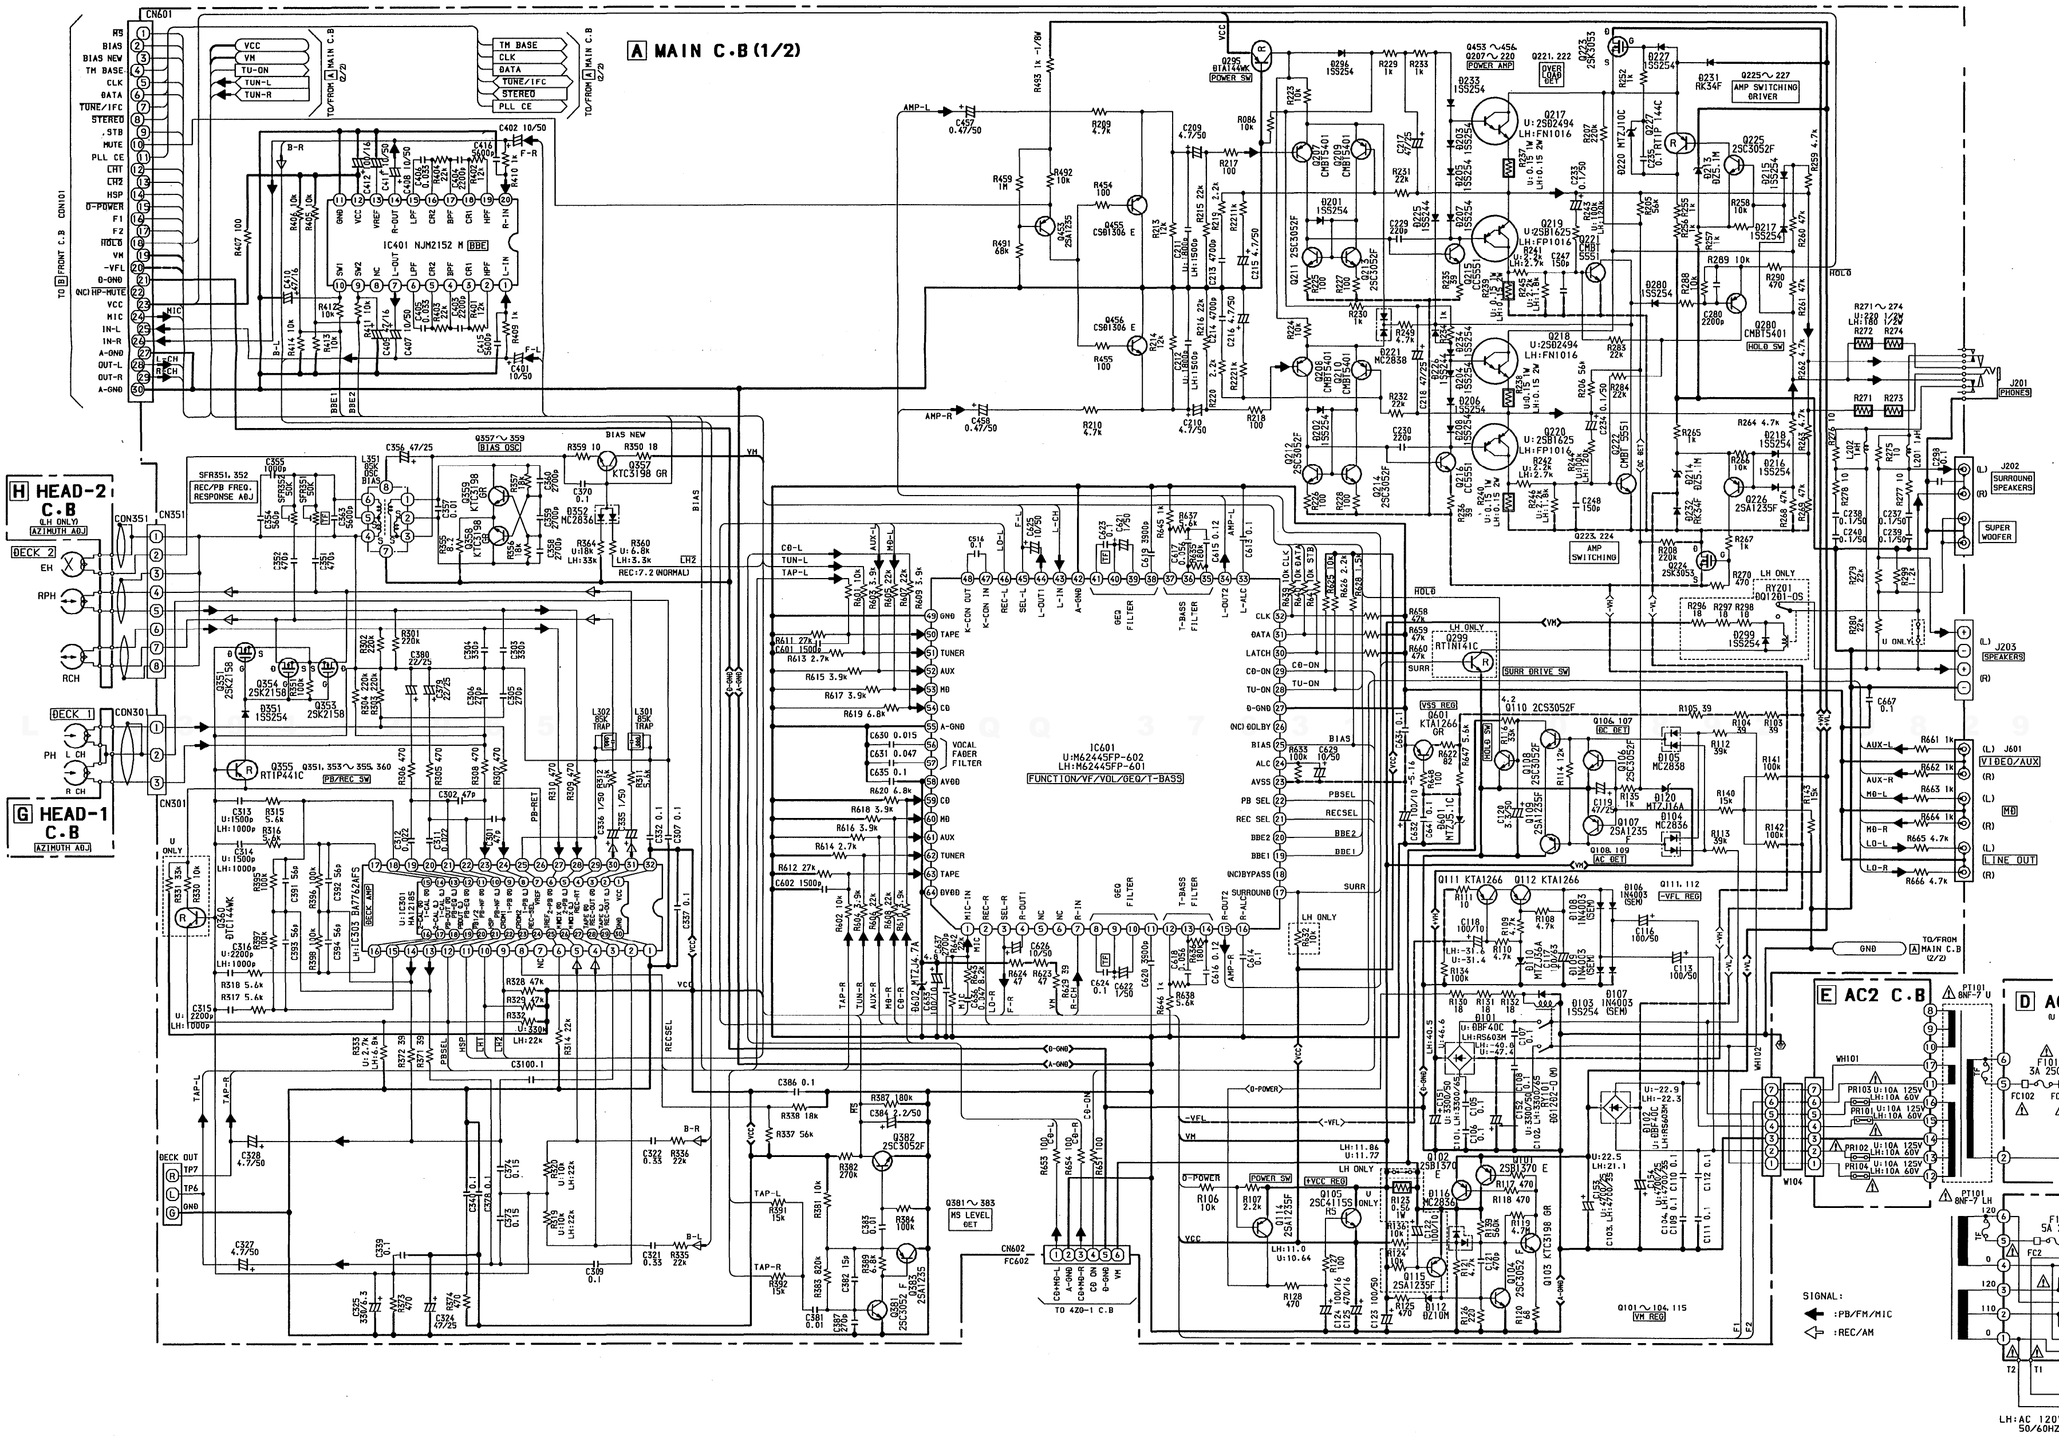

http://www.xiaoyu163.com

http://www.xiaoyu163.com

SCHEMATIC DIAGRAM – 2 (FRONT)

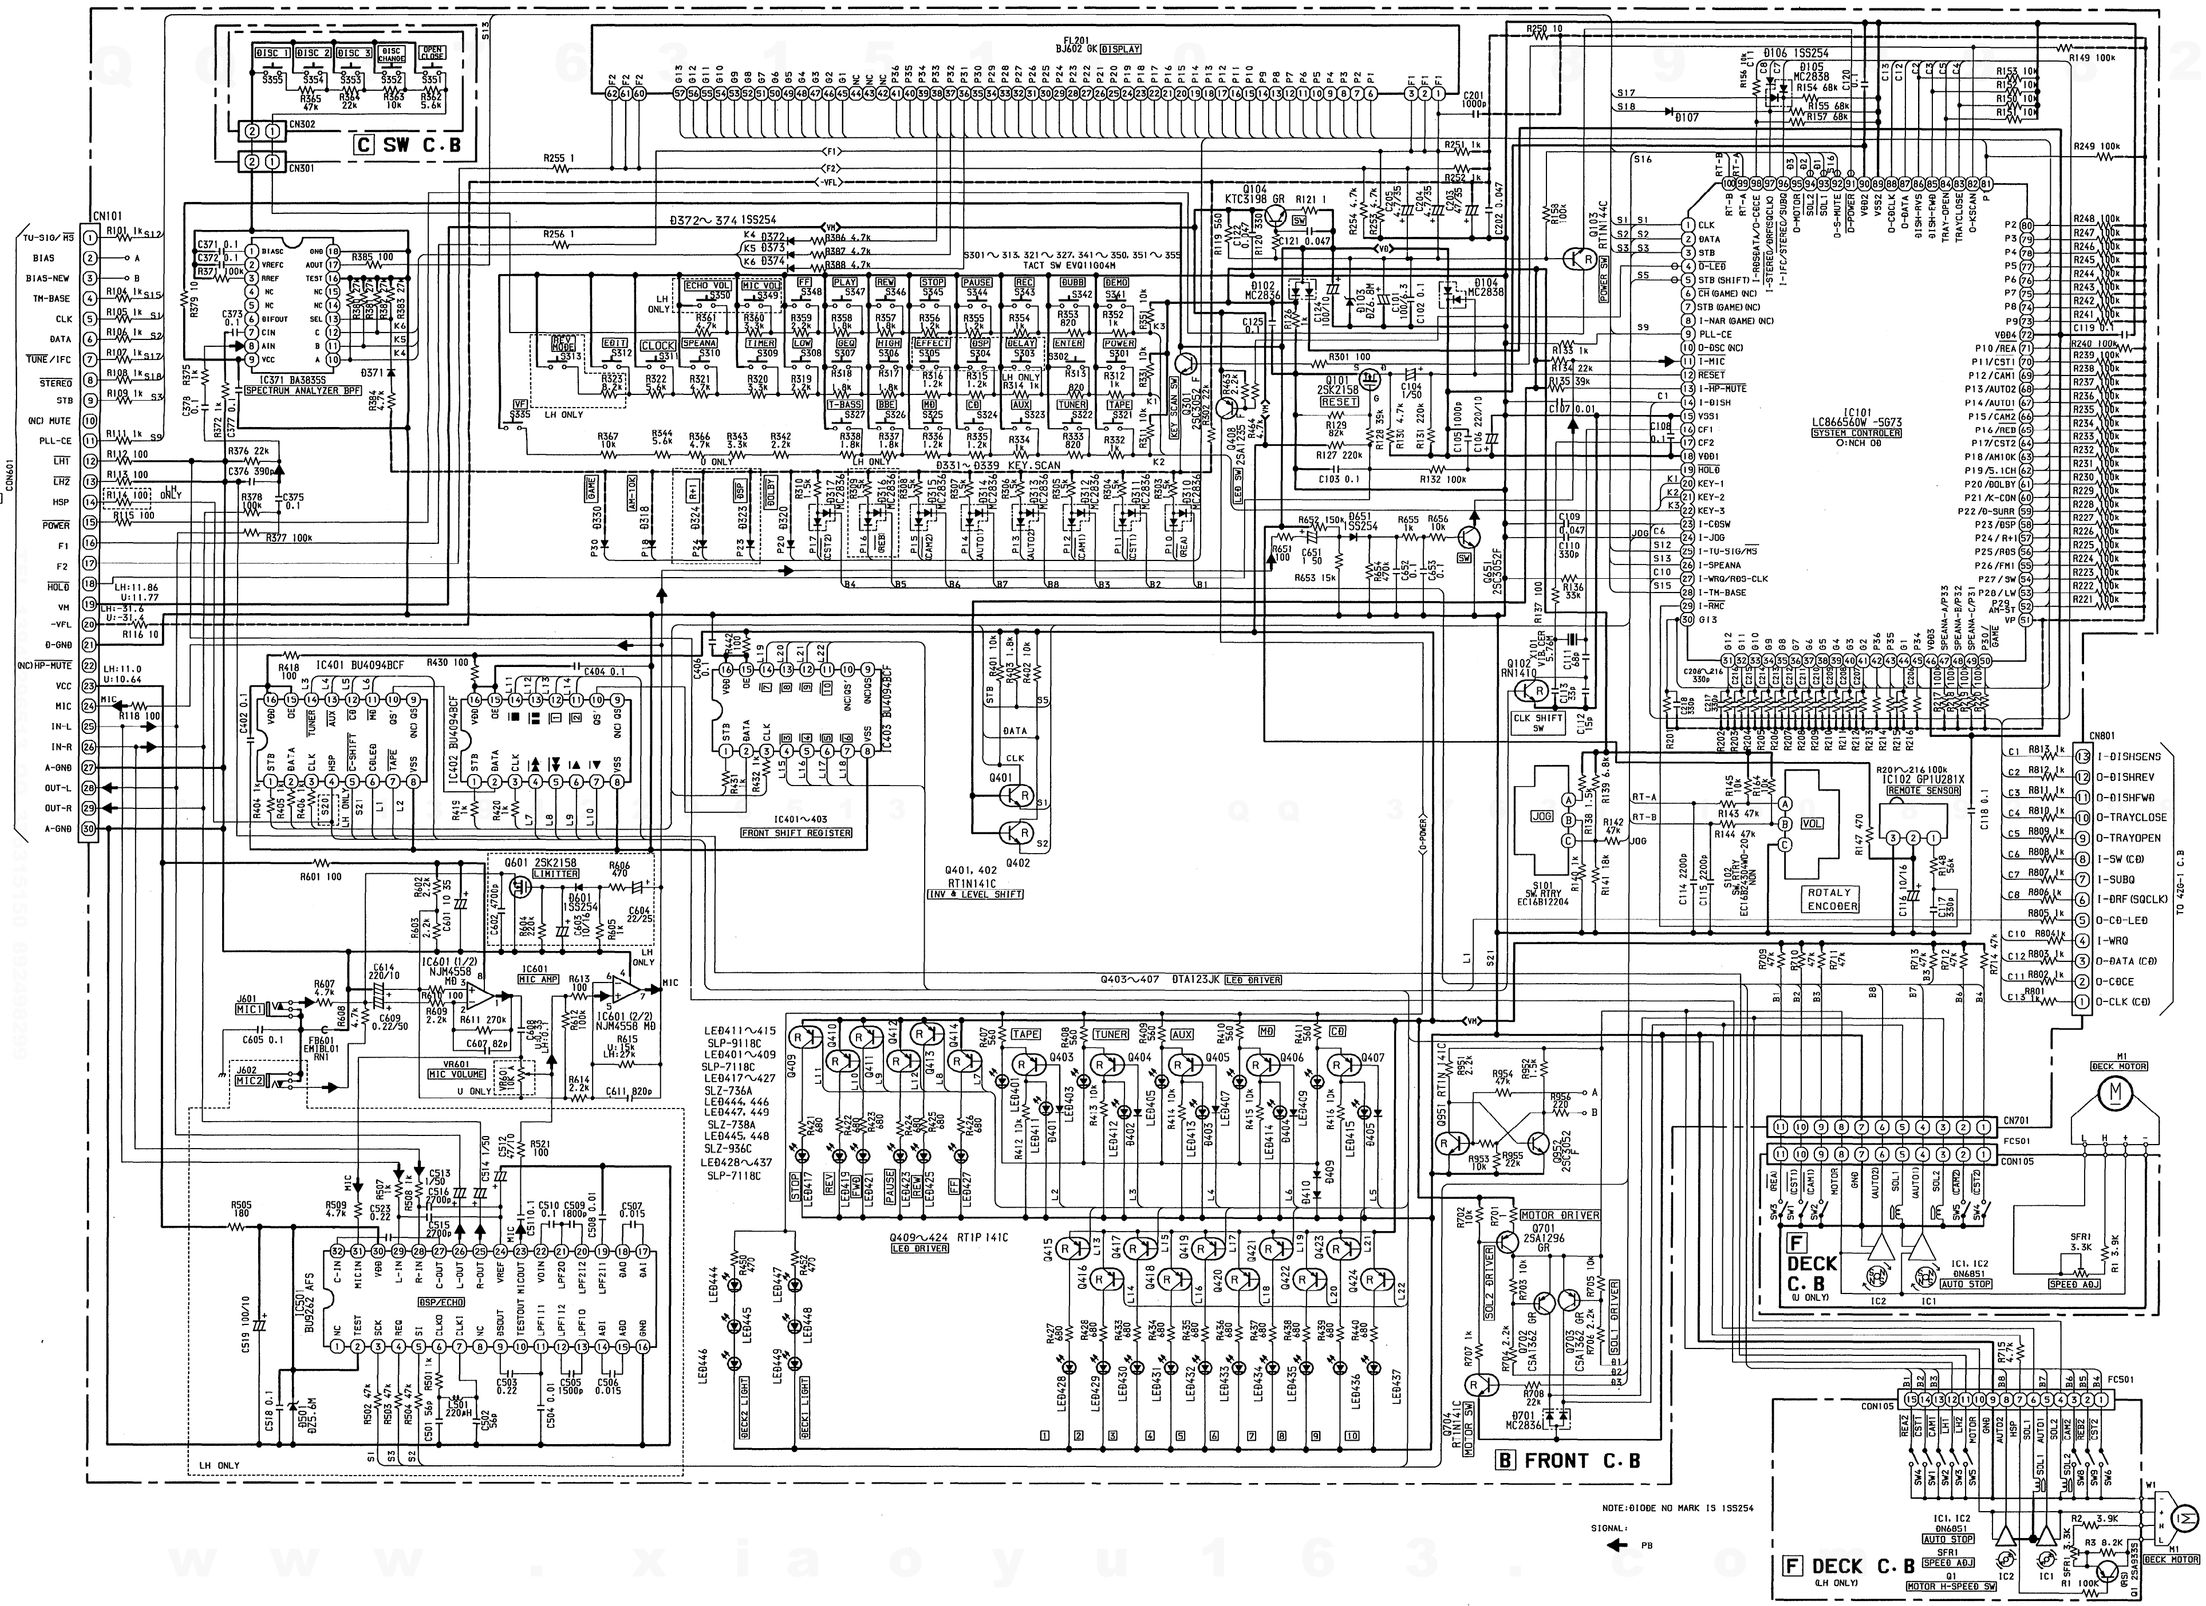

http://www.xiaoyu163.com

http://www.xiaoyu163.com

1 2 3 4 5 6 7 8 9 10 11 12 13 14

A B C D E F G H I J K L M

C SW C.B

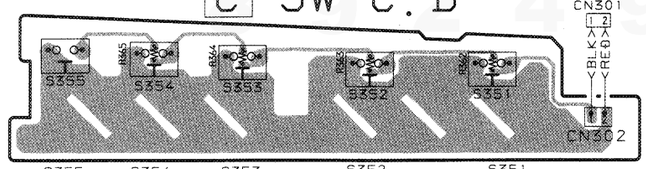

S355 DISC1 | S354 DISC2 | S353 DISC3 | S352 DISC CHANGE | S351 ▲OPEN/CLOSE

DISC DIRECT PLAY 1-3

B FRONT C.B

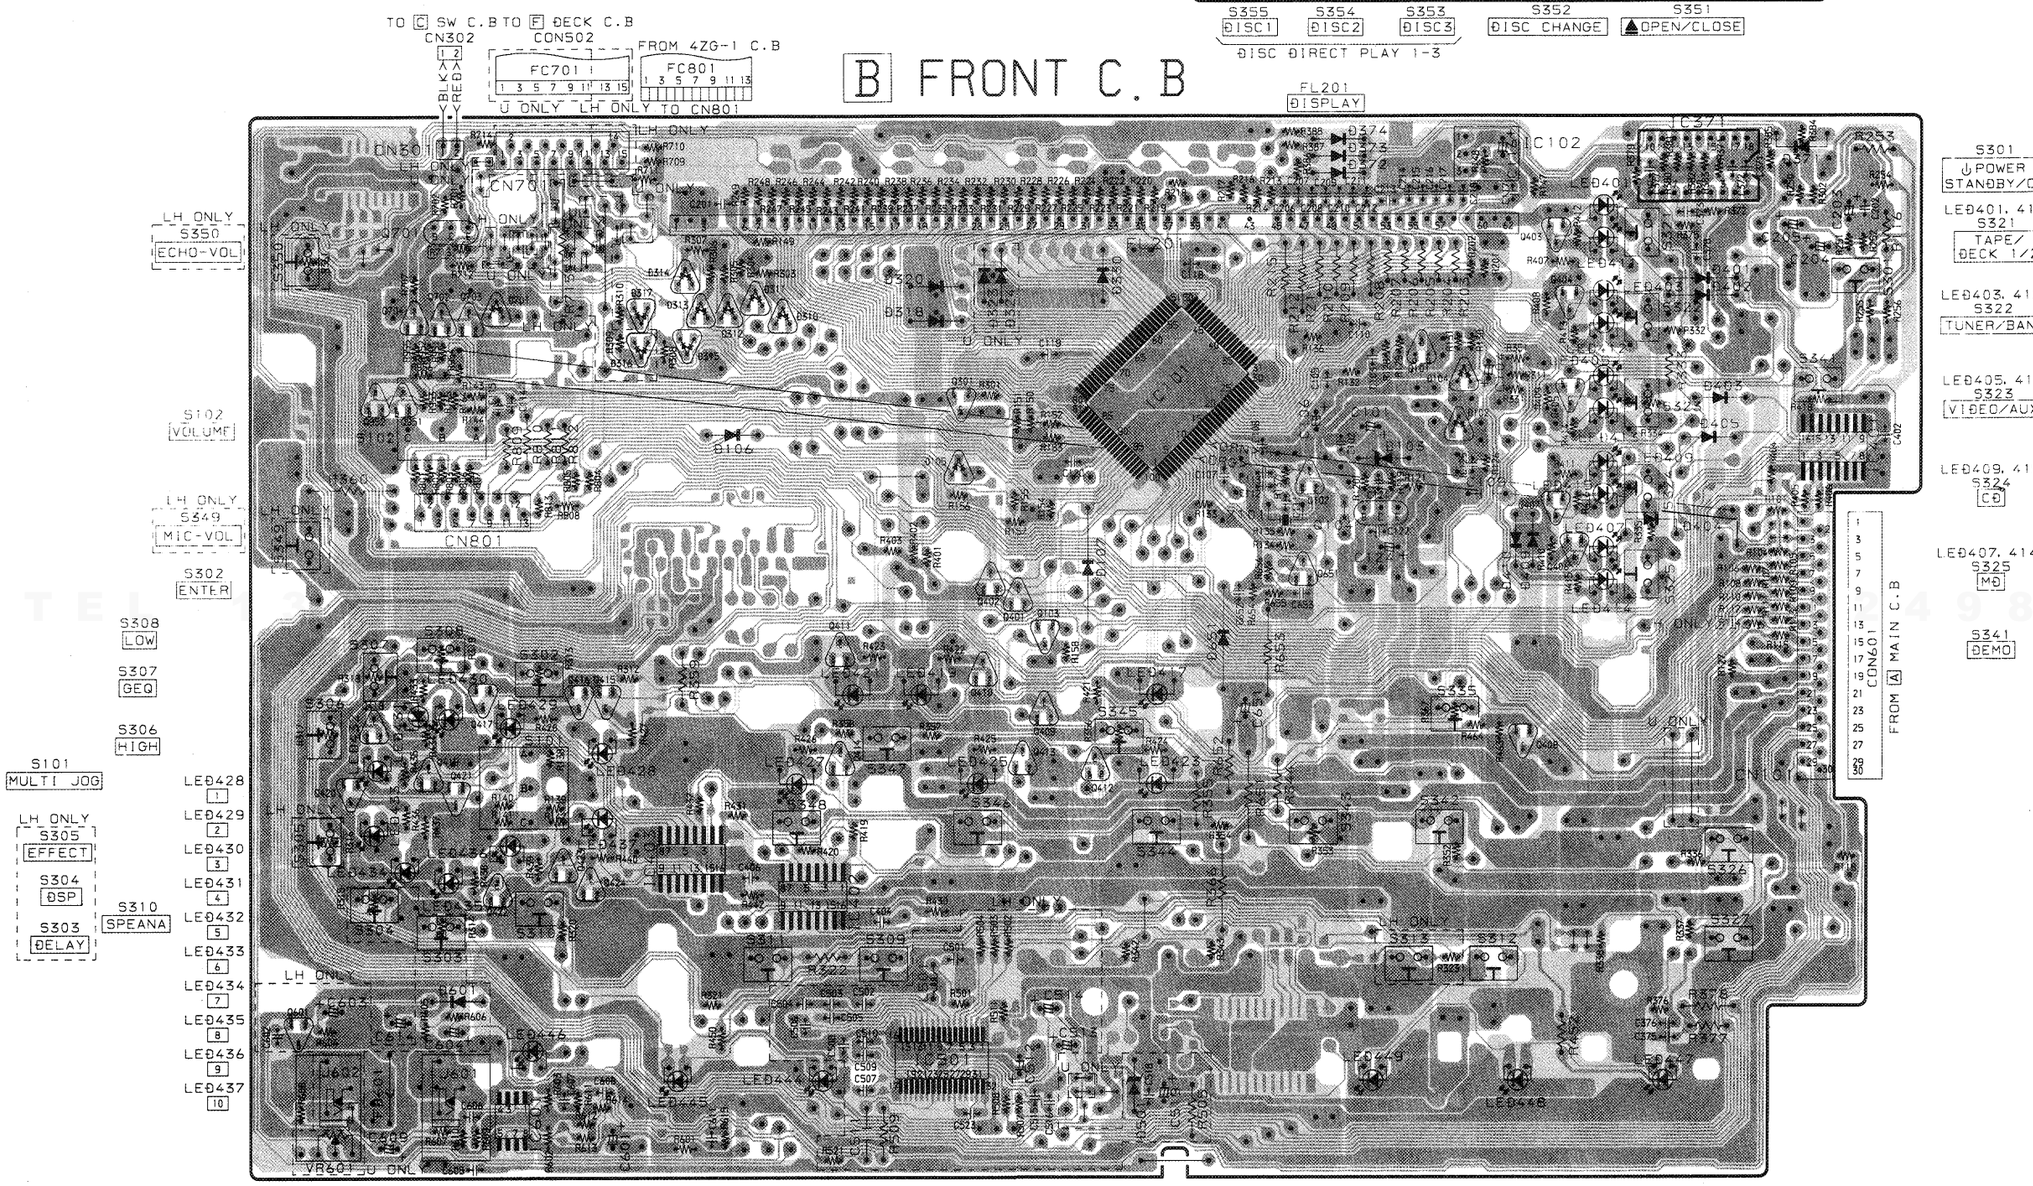

http://www.xiaoyu163.com

http://www.xiaoyu163.com

WIRING – 3 (AC1 / AC2)

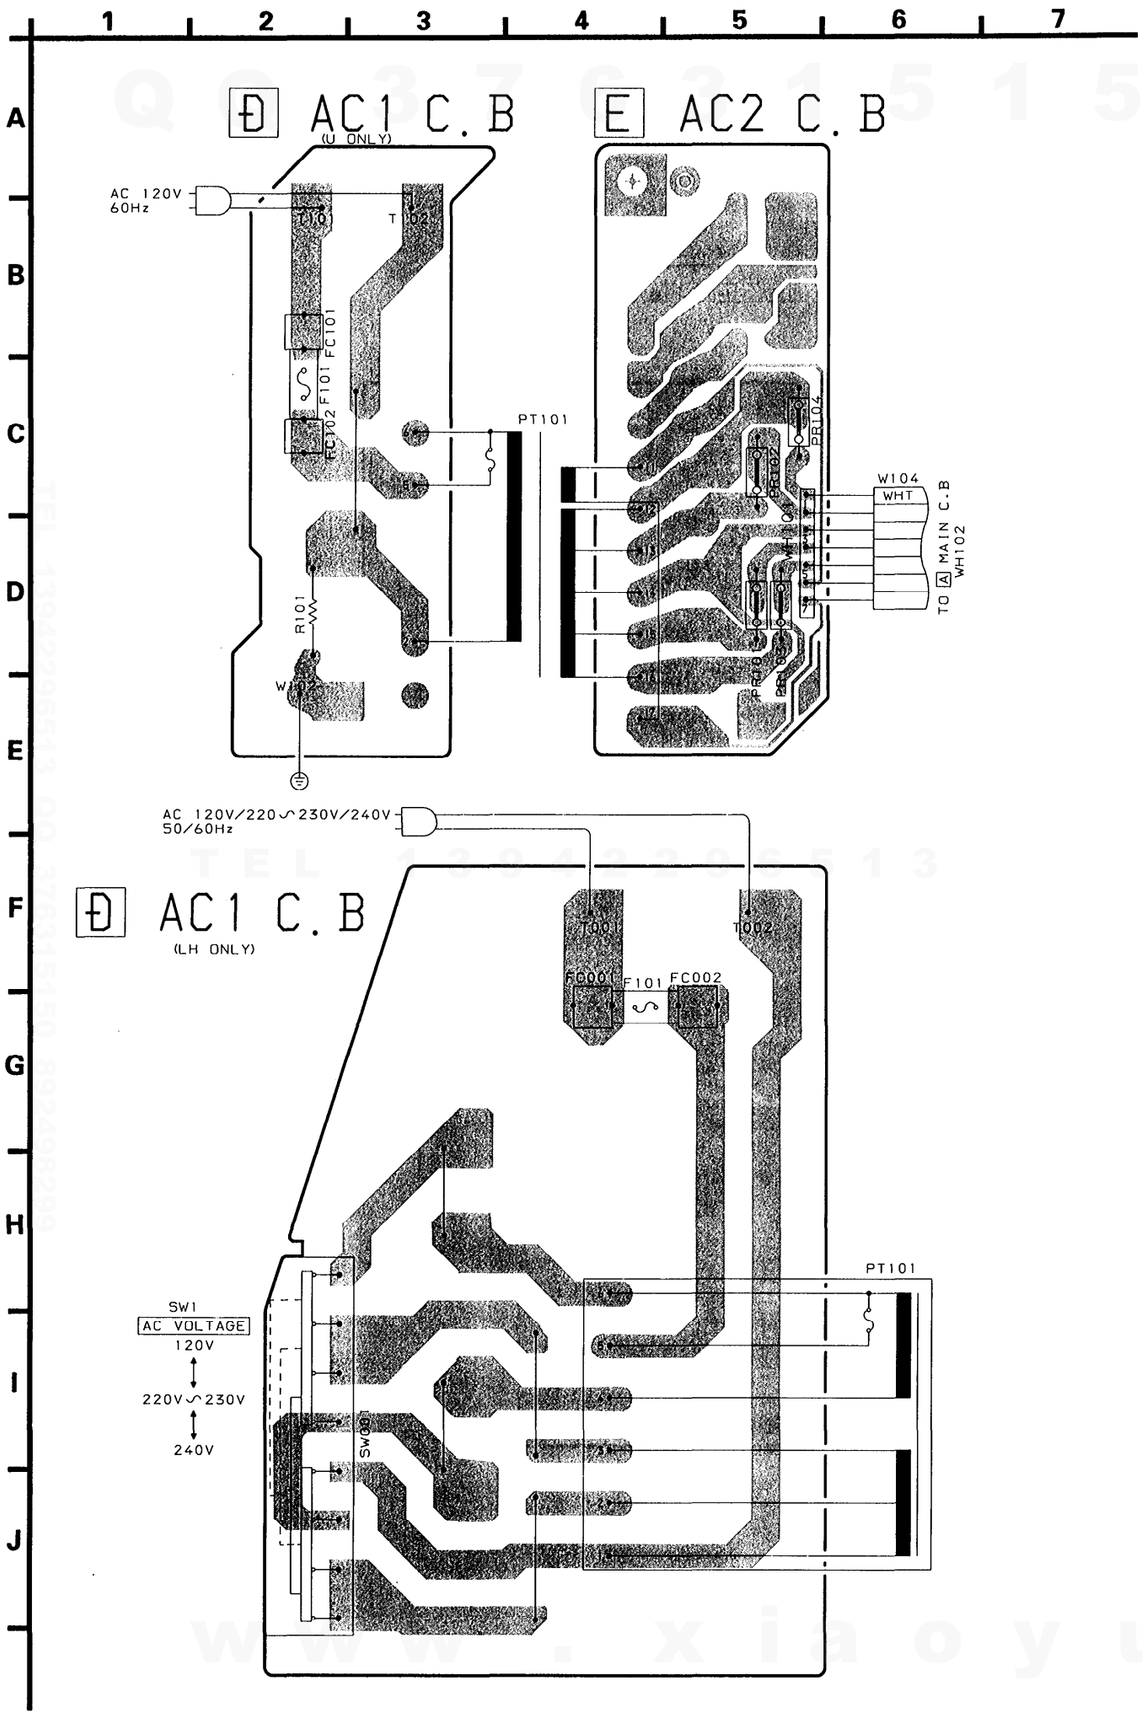

SCHEMATIC DIAGRAM –3 (TUNER FRONT END)

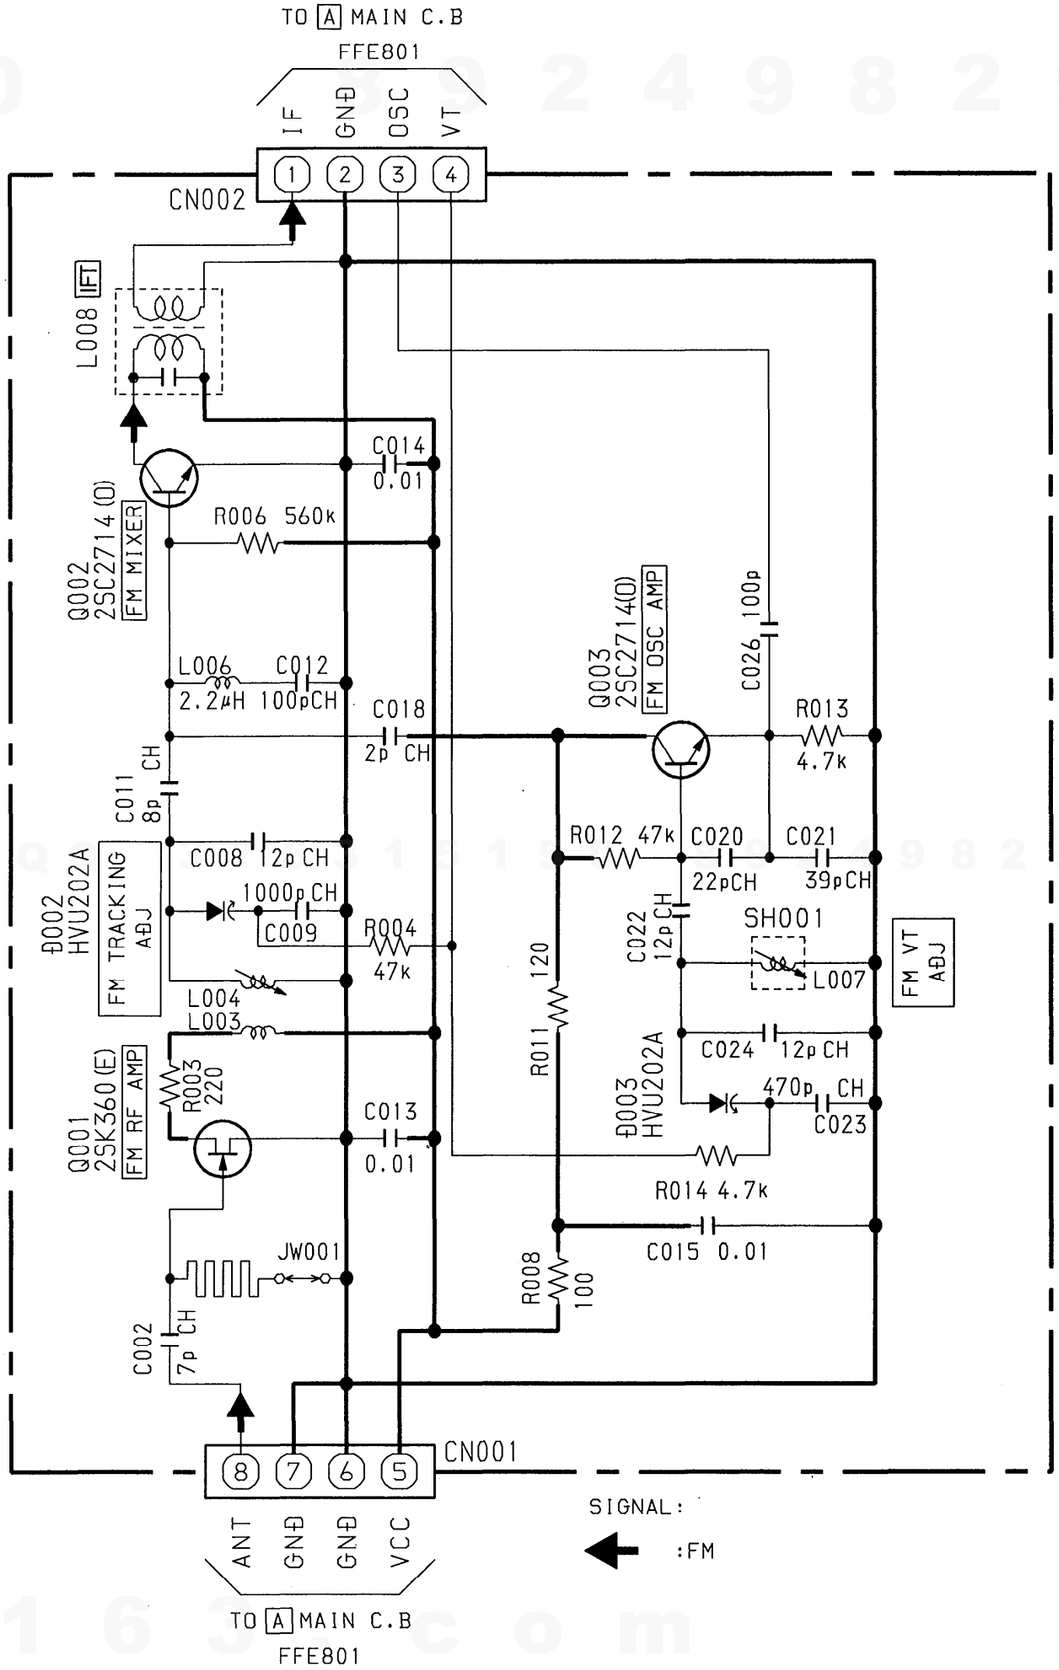

http://www.xiaoyu163.com

http://www.xiaoyu163.com

SCHEMATIC DIAGRAM – 4 (MAIN 2 / 2)

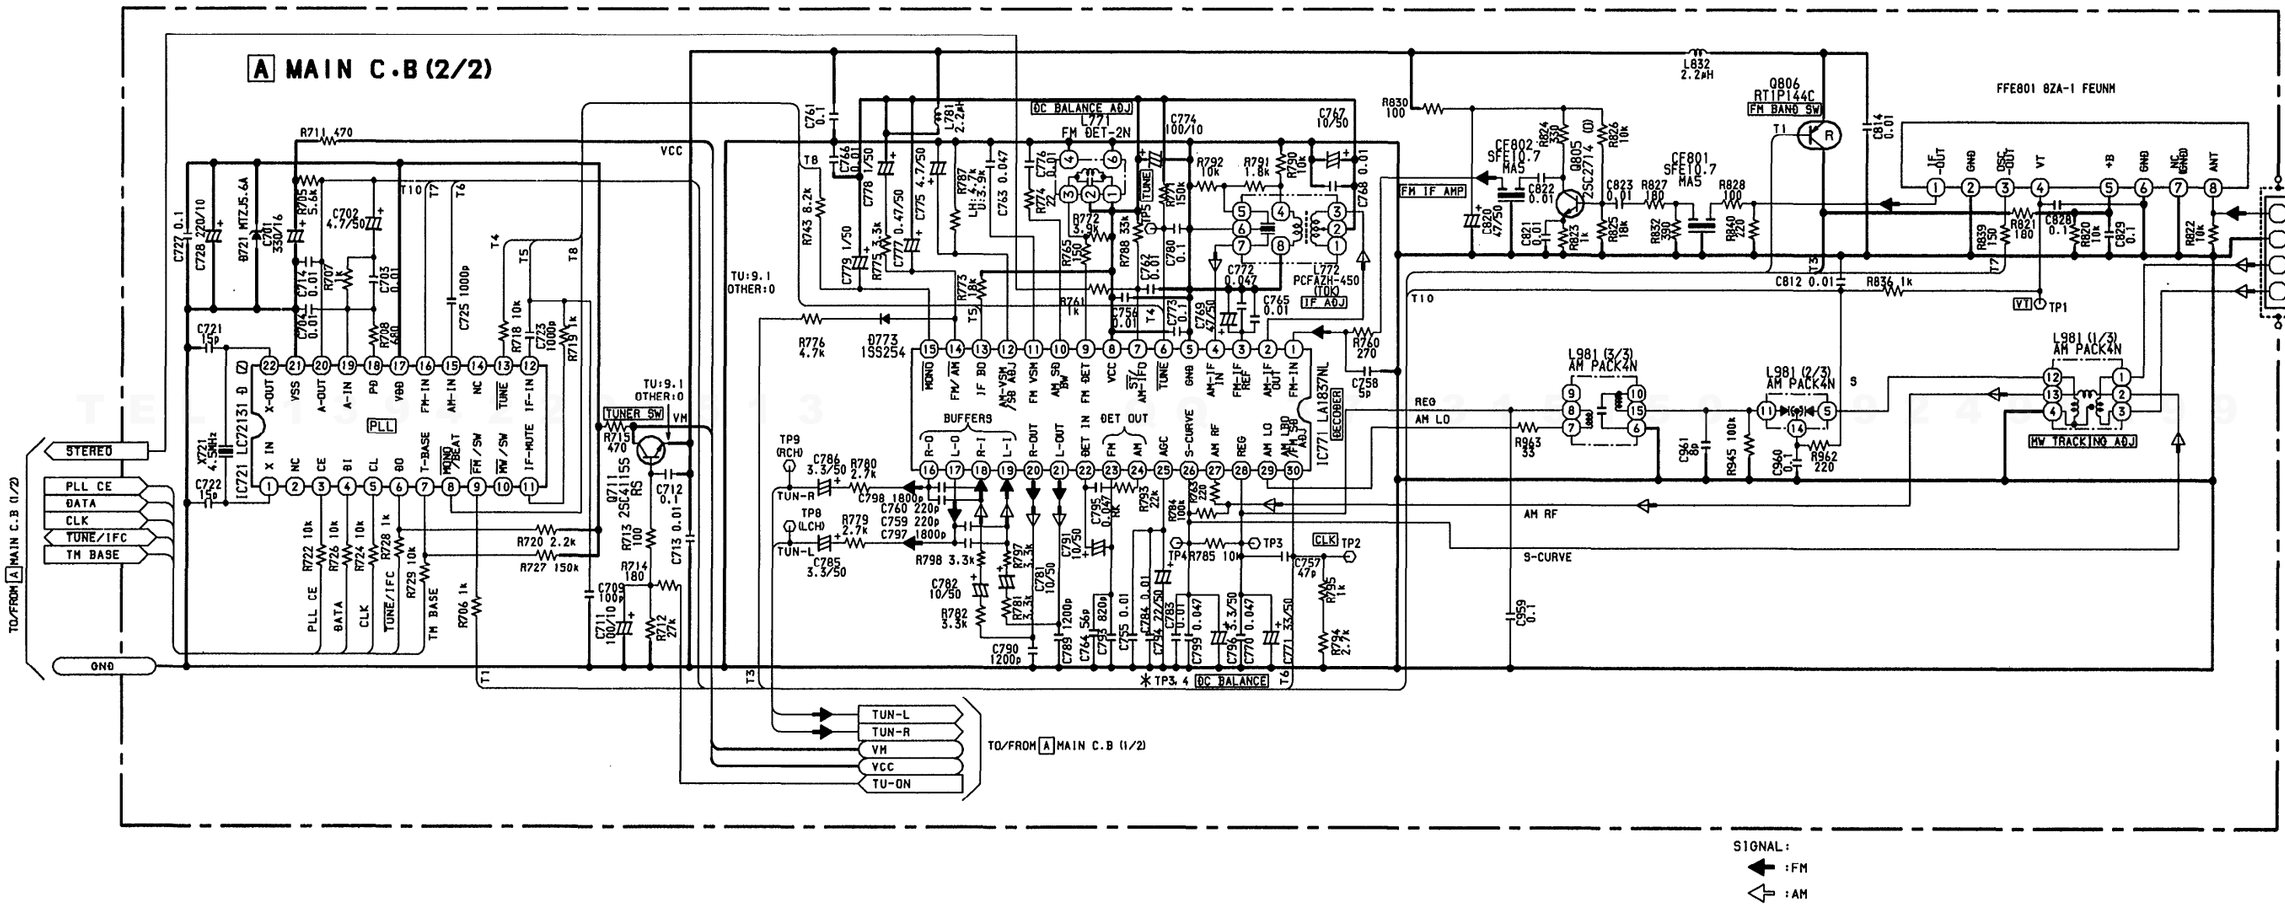

http://www.xiaoyu163.com

http://www.xiaoyu163.com

WIRING – 4 (DECK : 6ZM-3 PR2NM)

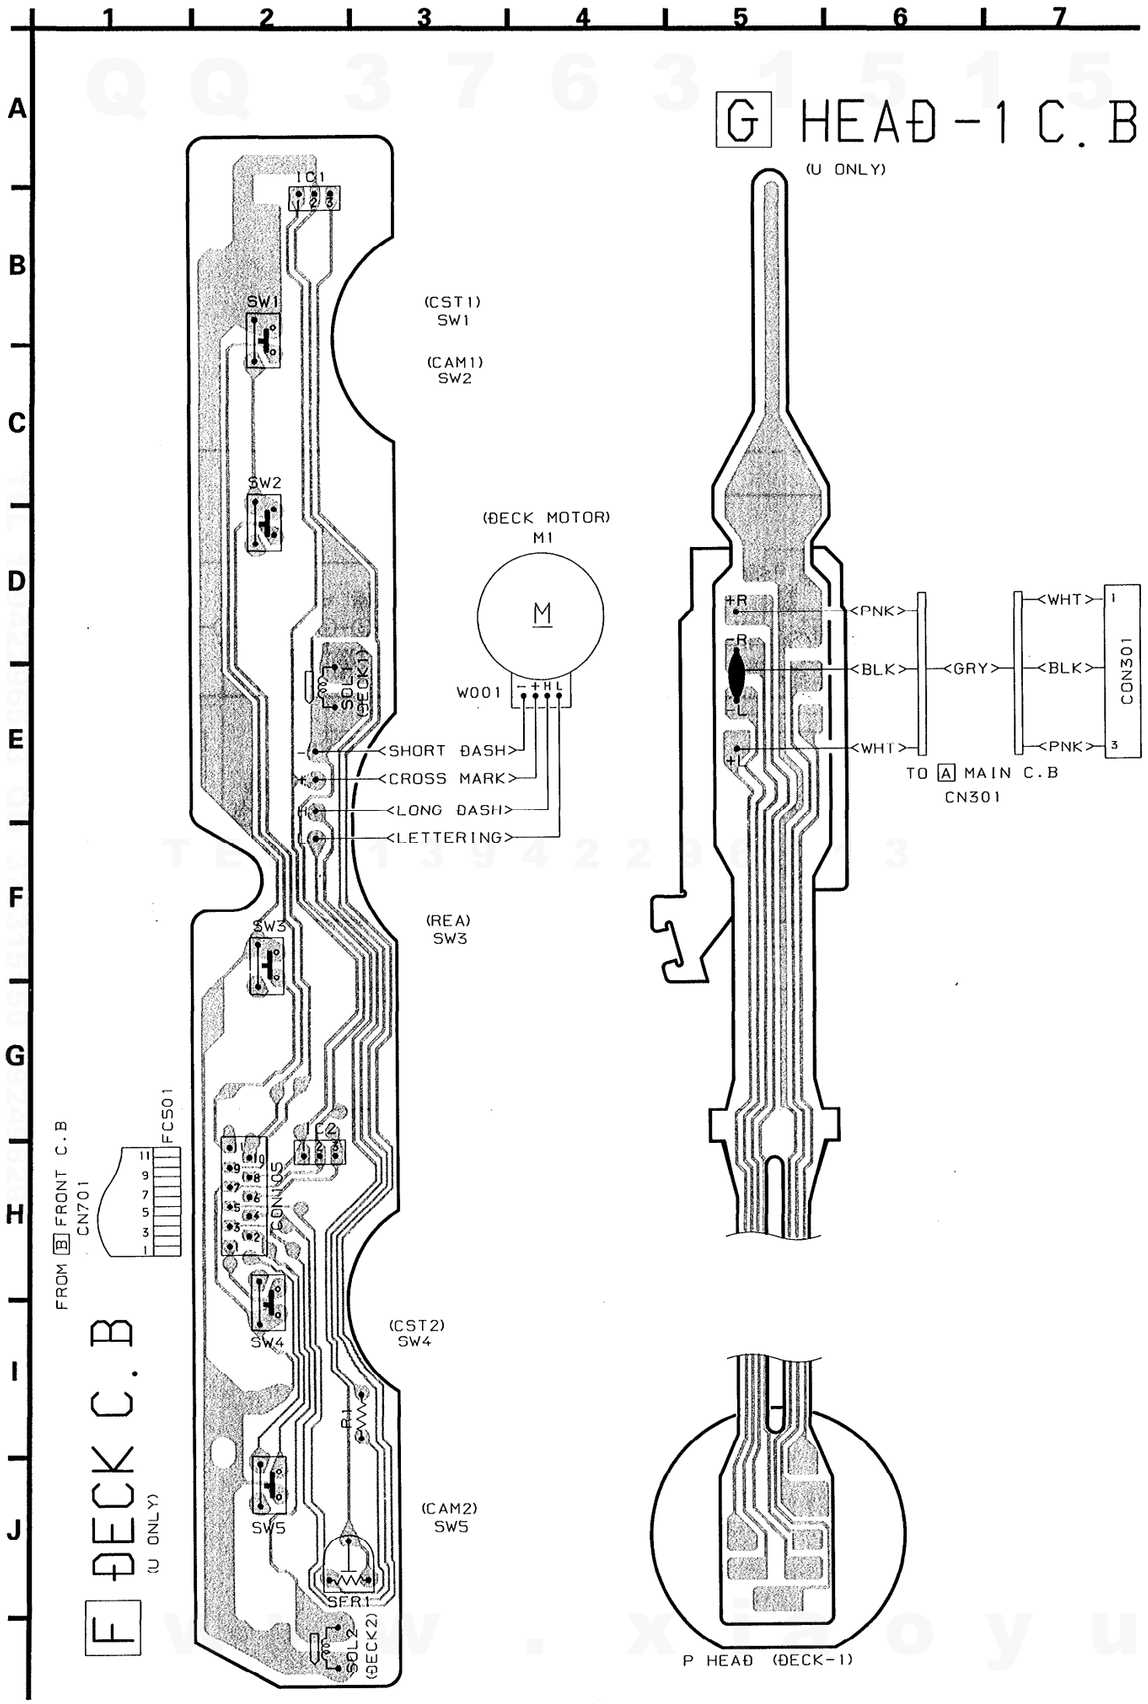

WIRING – 5 (DECK : 2ZM-3MK2 PR4NM)

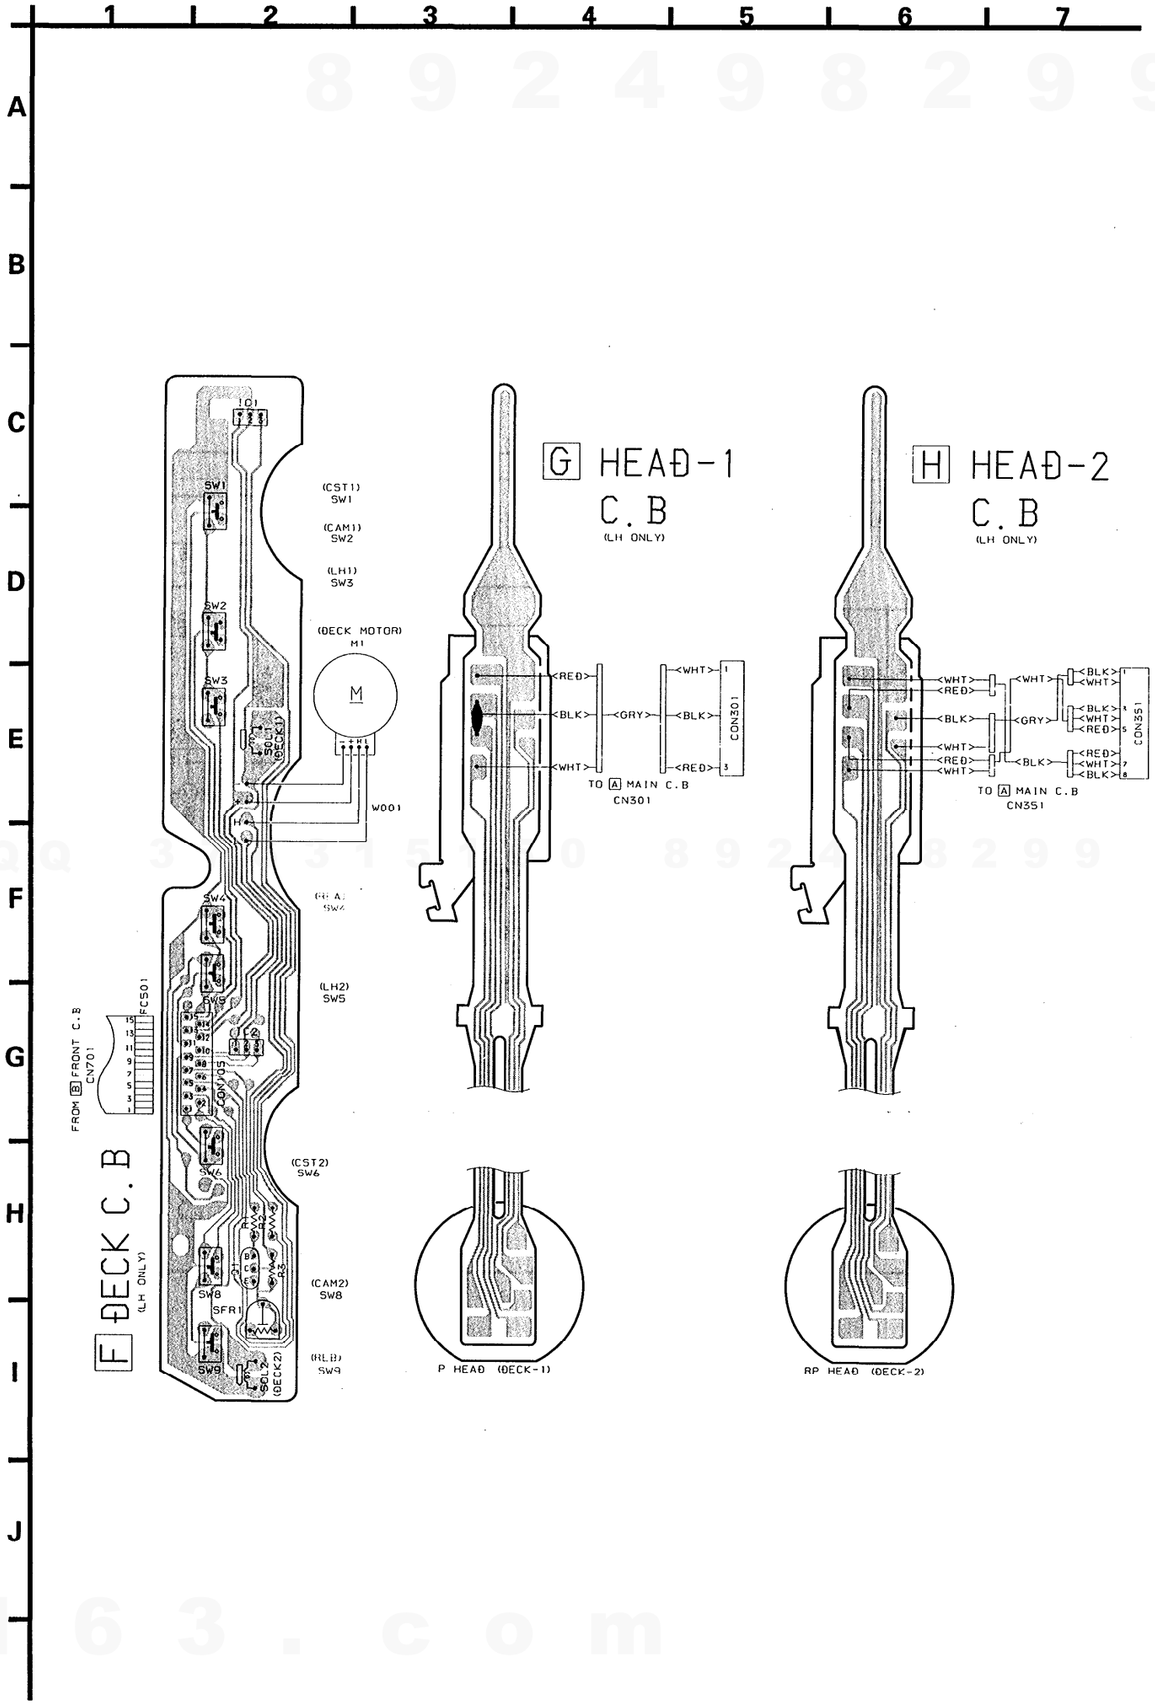

http://www.xiaoyu163.com

http://www.xiaoyu163.com

IC BLOCK DIAGRAM – 2

IC, NJM2152M

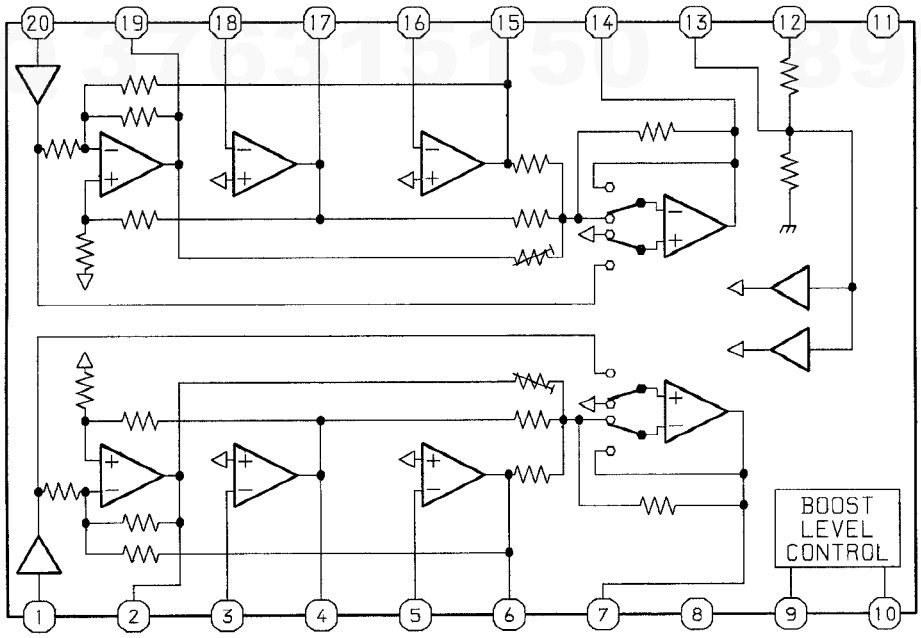

IC, BA3835S

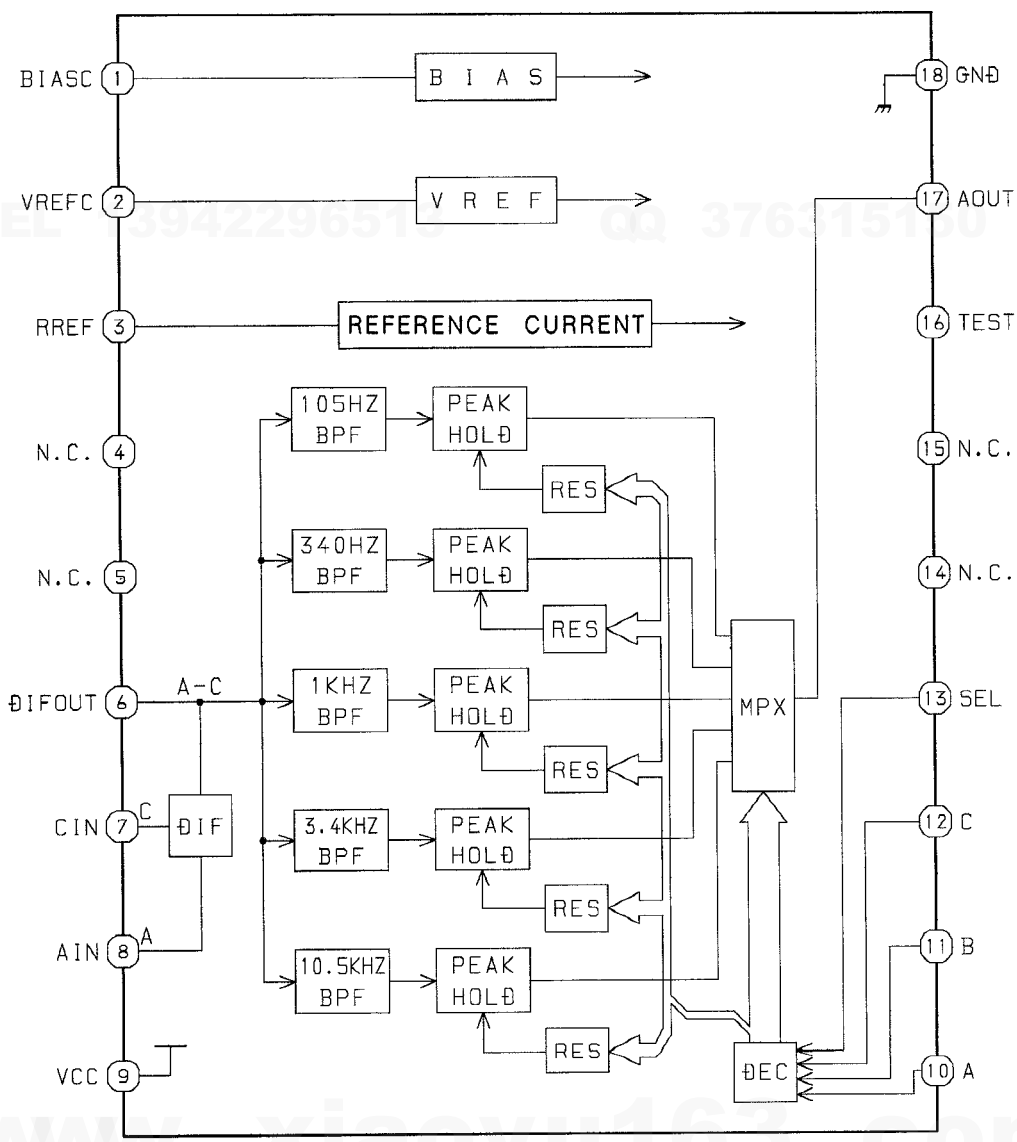

http://www.xiaoyu163.com

http://www.xiaoyu163.com

IC, BU9262FS

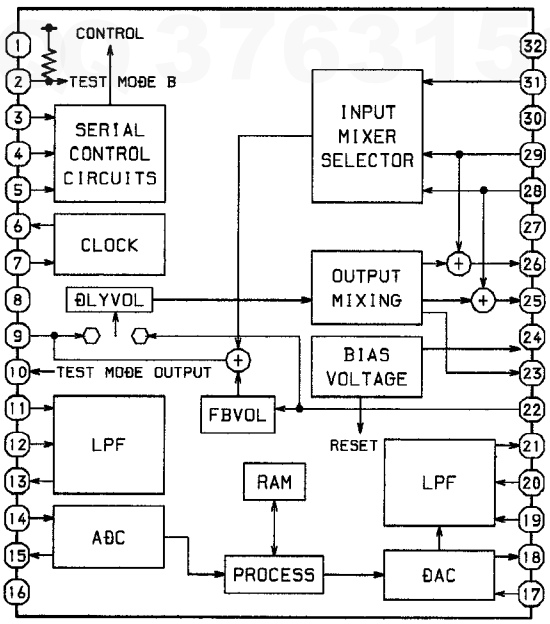

IC, BU4094BF

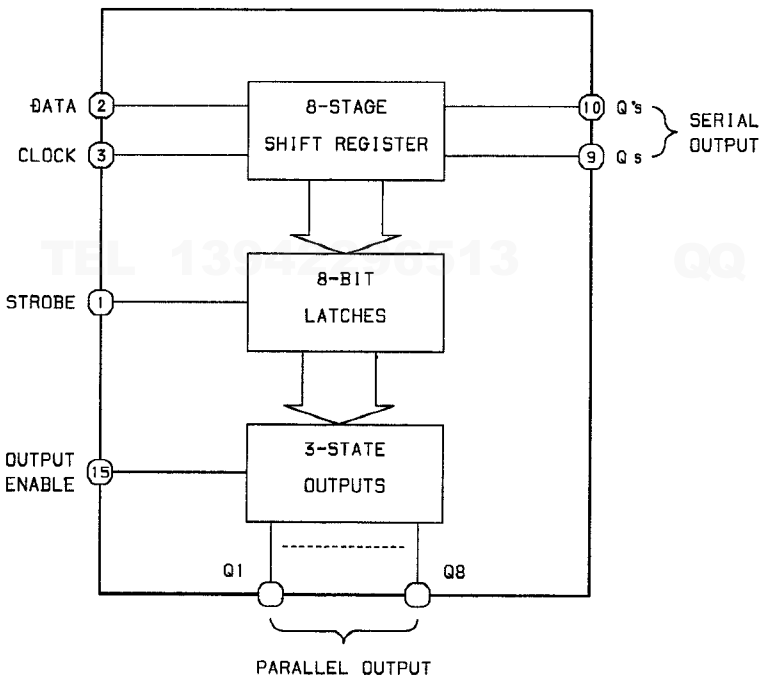

TRUTH TABLE

CLOCK	OUTPUT ENABLE	STROBE	DATA	PARALLEL OUTPUTS		SERIAL OUTPUTS	
				Q1	Qn	Qs	Q's
↑	L	X	X	Z	Z	Q7	NO Chg.
↓	L	X	X	Z	Z	No Chg.	Qs
↑	H	L	X	No Chg.	No Chg.	Q7	No Chg.
↑	H	H	L	L	Qn-1	Q7	No Chg.
↑	H	H	H	H	Qn-1	Q7	No Chg.
↓	H	X	X	No Chg.	No Chg.	No Chg.	Qs

Z=High Impedance

X=Don't Care

http://www.xiaoyu163.com

http://www.xiaoyu163.com

IC, LC72131

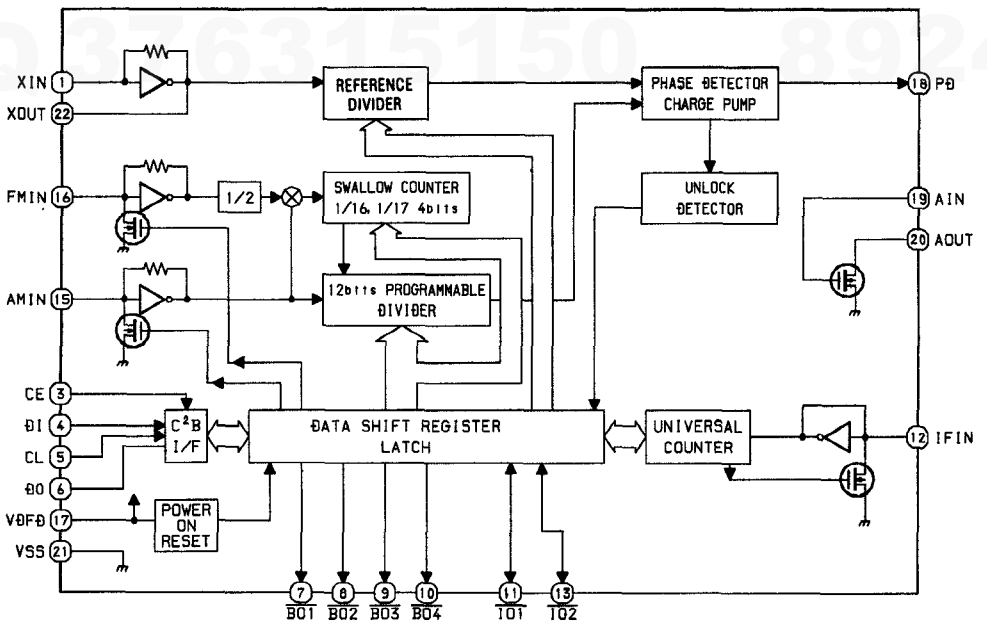

IC, LA1837

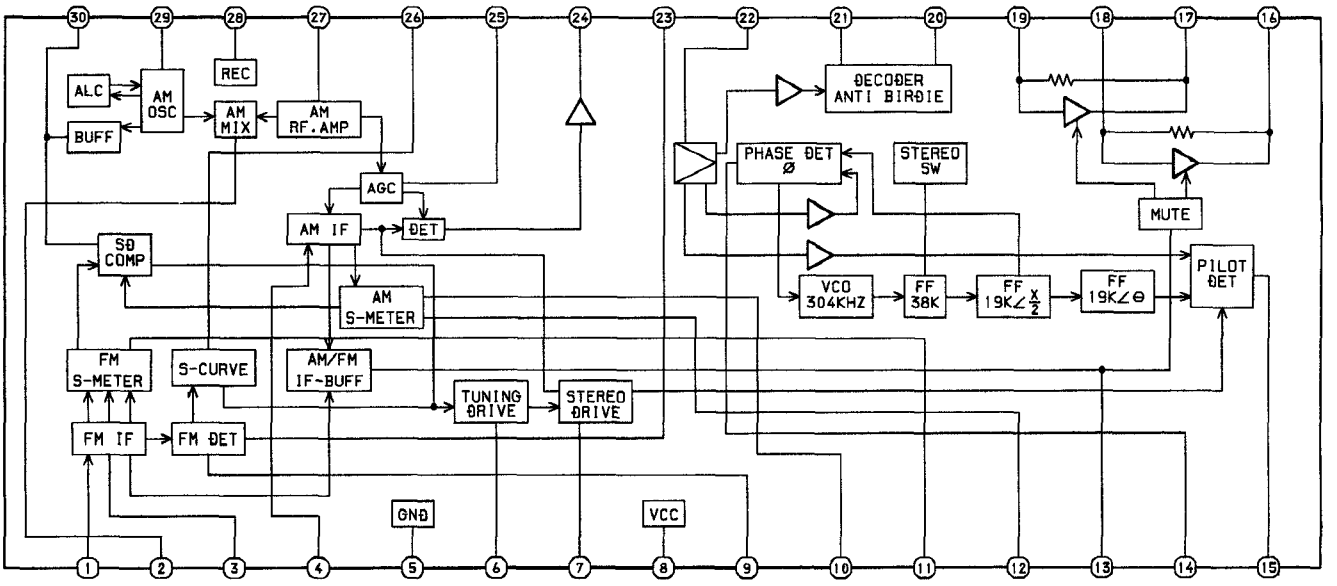

http://www.xiaoyu163.com

http://www.xiaoyu163.com

IC,M62445FP-601

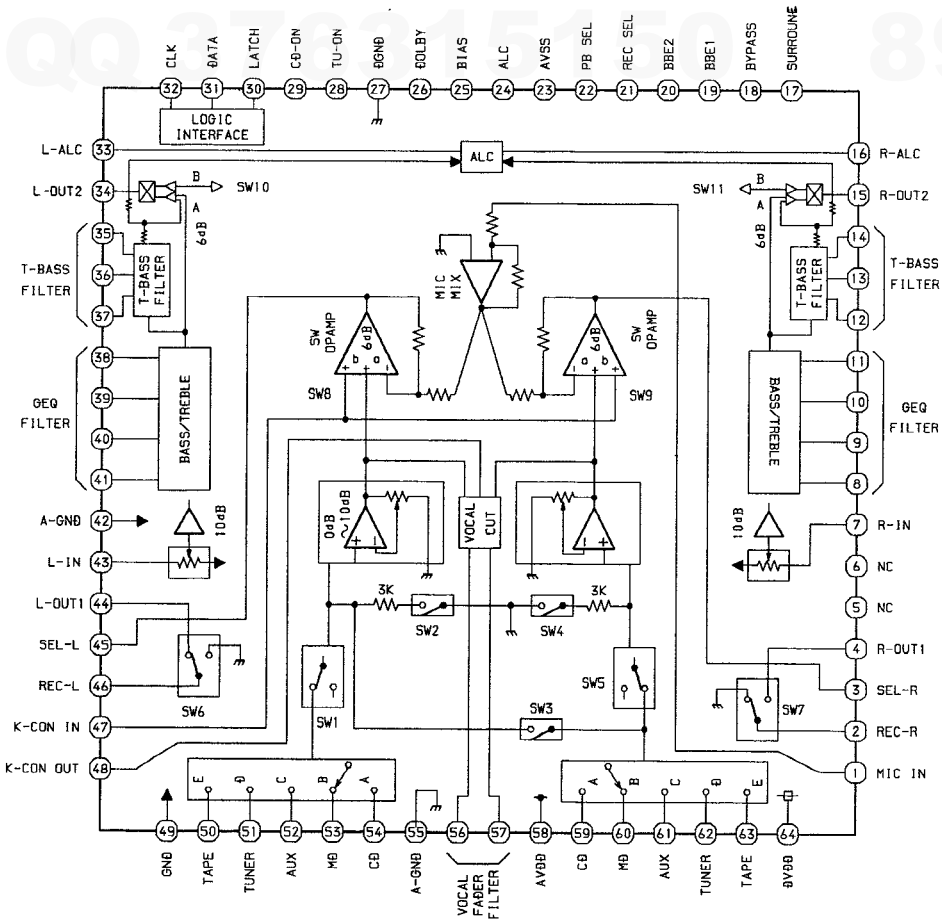

PRACTICAL SERVICE FIGURE

<TUNER SECTION>

<FM SECTION>

IHF Sensitivity :	Less than 10 / 9 / 9dB
(THD 3%)	[at 87.5 / 98.0 / 108.0MHz]
S/N 50dB Quieting sensitivity :	
	Less than 35dB
	[at 98.0MHz]
Signal to noise ratio :	Mono : More than 72dB
	Stereo : More than 66dB
	[at 98.0MHz]
Distortion :	Mono : Less than 1.2%
	Stereo : Less than 2.0%
	[at 98.0MHz]
Auto stop level :	25dB ± 10dB [at 98.0MHz]
Stereo separation :	More than 30dB [at 98.0MHz]
Intermediate frequency :	10.7MHz

<MW SECTION>

Sensitivity :	Less than 60dB
(S/N 20 dB)	[at 600kHz]
	Less than 58dB
	[at 1000kHz]
	Less than 58dB
	[at 1400kHz]
Signal to noise ratio :	More than 36dB
	[at 1000kHz]
Distortion :	Less than 1.5%
	[at 1000kHz]
Auto stop level :	52dB +10/-15dB
	[at 1000kHz]
Intermediate frequency :	450kHz

<DECK SECTION>

Tape speed :	3000Hz ± 45Hz
Wow & flutter :	Less than 0.21 / 0.25% (LH/U)
	(W.R.M.S)
Take-up torque :	30 ~ 55g-cm
	(FWD, REV)
F.F torque :	75 ~ 180g-cm
REW torque :	75 ~ 130g-cm (LH)
	75 ~ 180g-cm (U)
Back tension :	2 ~ 7g-cm
	(FWD, REV)
PB output level :	300mV± 3dB
	(SP OUT 2V)
REC/PB output level :	0 ± 3dB
	(SP OUT 2V)
Distortion (REC/PB) :	Less than 2.0%
	(NORM)
Noise level (PB) :	Less than 2.0mV
	(NORM, SP OUT 2V)
Noise level (REC/PB) :	Less than 3.0mV
	(NORM, SP OUT 2V)
Erasing ratio :	More than 60dB
	(at 125Hz, +10VU)
Test tape :	TTA-602 (NORMAL)

http://www.xiaoyu163.com

http://www.xiaoyu163.com

IC DESCRIPTION

IC, LC866560W-5G73

Pin No.	Pin Name	I/O	Description
1	CLK	O	CLOCK output for MAIN,FRONT PWB.
2	DATA	O	DATA output for MAIN, FRONT PWB.
3	STB	O	Latch strobe output for MAIN PWB.
4	$\overline{\text{O-LED}}$	O	LED $\overline{\text{ON}}$/OFF output.
5	STB (SHIFT)	O	Latch strobe output for FRONT shift register.
6	$\overline{\text{CH}}$(GAME)	I	Channel control output for Sound IC. (Not connected)
7	STB (GAME)	O	Latch strobe output for Sound IC. (Not connected)
8	I-NAR (GAME)	I	Sound IC NAR input. (Not connected)
9	PLL-CE	O	PLL IC chip enable output.
10	O-DSC	O	Serial data output for PROLOGIC PWB. (Not connected)
11	$\overline{\text{I-MIC}}$	I	Microphone input for AUTO VF display.
12	$\overline{\text{RESET}}$	I	Reset input.
13	$\overline{\text{I-HP-MUTE}}$	I	Headphone input for MUTE by PROLOGIC.
14	I-DISH	I	CD turntable photo sensor A/D converter input.
15	VSS 1	–	GND.
16	CF 1	–	5.76MHz oscillator circuit.
17	CF 2	–	
18	VDD 1	–	Power supply input.
19	$\overline{\text{HOLD}}$	I	Power failure detection input. "H" normal operation, "L" main power cannot be turned on.
20	KEY-1	I	KEY input.(A/D)
21	KEY-2	I	
22	KEY-3	I	
23	I-CD SW	I	CD mechanical switch A/D converter input.
24	I-JOG	I	JOG dial A/D level input.
25	I-TU-SIG/$\overline{\text{MS}}$	I	Tuner signal and deck music sensor signal input.
26	I-SPEANA	I	A/D input for spectrum analyzer display.
27	I-WRQ/RDS-CLK	I	CD WRQ input. TUNER RDS CLOCK input.
28	I-TM-BASE	I	REFERENCE CLOCK input for timer watch.
29	$\overline{\text{I-RMC}}$	I	System remote control signal input.
30~41	G13~G2	O	FL GRID output G2~G13.
42, 43	P36, P35	O	FL SEGMENT output P35, P36.
44	G1	O	FL GRID output G1.
45	P34	O	FL SEGMENT output P34.
46	VDD3	–	Power supply input.
47	SPEANA-A/P33	O	Spectrum analyzer band switching output /FL segment P33 output.
48	SPEANA-B/P32	O	Spectrum analyzer band switching output /FL segment P32 output.
49	SPEANA-C/P31	O	Spectrum analyzer band switching output /FL segment P31 output.
50	P30/$\overline{\text{GAME}}$	I/O	FL segment P30 output / GAME input to diode.
51	VP	–	Power supply input for FL display.
52	P29/AM-ST	I /O	FL segment P29 output / AM-ST input to diode.
53	P28/LW	I/O	FL segment P28 output / LW input to diode.
54	P27/SW	I/O	FL segment P27 output / SW input to diode.

http://www.xiaoyu163.com

http://www.xiaoyu163.com

Pin No.	Pin Name	I/O	Description
55	P26/FM 1	I/O	FL segment P26 output / FM1 (OIRT) input to diode.
56	P25/RDS	I/O	FL segment P25 output / RDS input to diode.
57	P24/R+1	I/O	FL segment P24 output / RVS+1 way input to diode.
58	P23/$\overline{\text{DSP}}$	I/O	FL segment P23 output / $\overline{\text{DSP}}$ input to diode.
59	P22/D-SURR	I/O	FL segment P22 output / SURR input to diode.
60	P21/K-CON	I/O	FL segment P21 output / K-CON input to diode.
61	P20/$\overline{\text{DOLBY}}$	I/O	FL segment P20 output / DOLBY input to diode.
62	P19/5.1CH	I/O	FL segment P19 output / 5.1CH input to diode.
63	P18/AM10K	I/O	FL segment P18 output / AM 10kHz input to diode.
64	P17/$\overline{\text{CST 2}}$	I/O	FL segment P17 output / DECK2 cassette detect switch data input.
65	P16/$\overline{\text{REB}}$	I/O	FL segment P16 output / DECK2 side-B record OK switch data input.
66	P15/$\overline{\text{CAM 2}}$	I/O	FL segment P15 output / DECK2 CAM switch data input.
67	P14/AUTO 1	I/O	FL segment P14 output / DECK1 AUTO stop signal input.
68	P13/AUTO 2	I/O	FL segment P13 output / DECK2 AUTO stop signal input.
69	P12/$\overline{\text{CAM 1}}$	I/O	FL segment P12 output / DECK1 CAM switch data input.
70	P11/$\overline{\text{CST 1}}$	I/O	FL segment P11 output / DECK1 cassette detect switch data input.
71	P10/$\overline{\text{REA}}$	I/O	FL segment P10 output / DECK2 side A record OK switch data input.
72	VDD 4	–	Power supply input.
73 ~ 81	P9 ~ P1	O	FL segment P1 ~ P9 output.
82	O-KSCAN	O	Switch SCAN timing output.
83	$\overline{\text{TRAYCLOSE}}$	O	CD TRAY CLOSE data output.
84	$\overline{\text{TRAY-OPEN}}$	O	CD TRAY OPEN data output.
85	DISH-FWD	O	CD turntable forward rotation output.
86	DISH-RVS	O	CD turntable reverse rotation output.
87	O-DATA	O	CD data output.
88	O-CDCLK	O	CD clock output.
89	VSS2	-	GND.
90	VDD2	-	Power supply input.
91	$\overline{\text{O-POWER}}$	O	System power supply $\overline{\text{ON}}$/OFF output.
92	O-S-MUTE	O	System mute ON/$\overline{\text{OFF}}$ output.
93	$\overline{\text{SOL 1}}$	O	DECK 1 solenoid output.
94	$\overline{\text{SOL 2}}$	O	DECK 2 solenoid output.
95	O-MOTOR	O	DECK MOTOR ON/$\overline{\text{OFF}}$ output.
96	I-IFC/$\overline{\text{STEREO}}$/SUBQ	I	Tune IF count serial data input /CD SUBQ data input.
97	I-$\overline{\text{STEREO}}$/ DRF(SQCLK)	I/O	Tuner stereo detected input / CD SQ CLOCK output.
98	I-RDS-DATA/ O-CDCE	I/O	RDS data input / CD chip enable output.
99	RT-A	I	Rotary encoder A input.
100	RT-B	I	Rotary encoder B input.

www.xiaoyu163.com

http://www.xiaoyu163.com

http://www.xiaoyu163.com

ADJUSTMENT <TUNER / DECK>

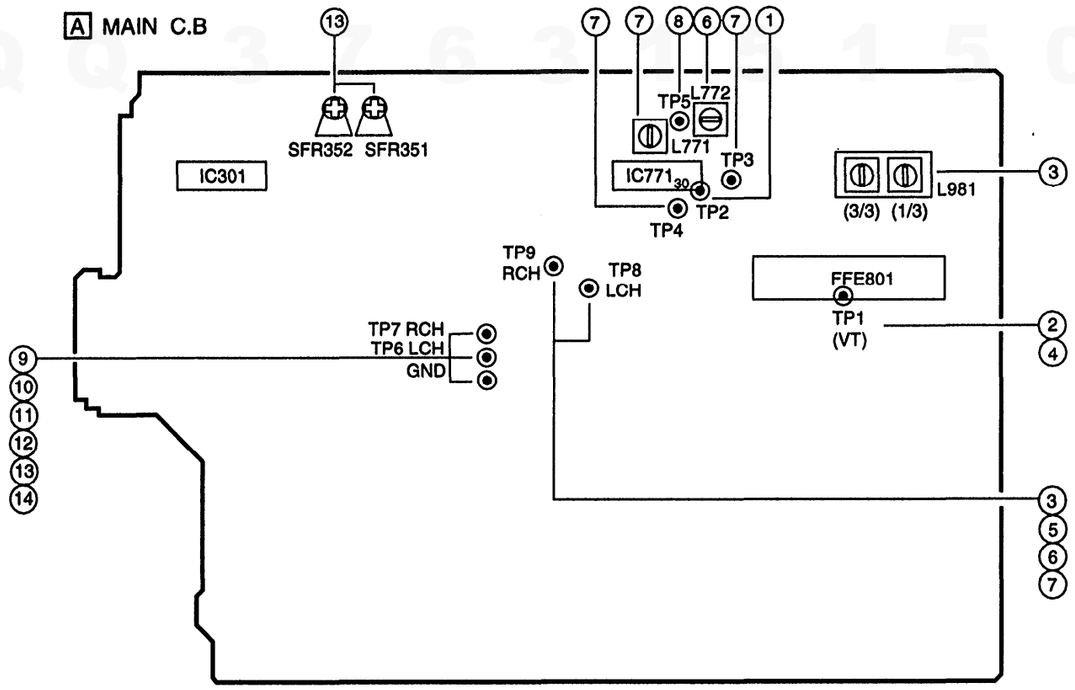

DECK–1 P, DECK–2 R / P / E HEAD (EXCEPT U)

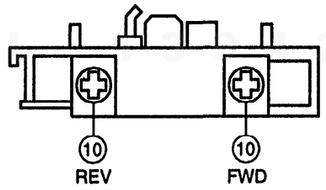

DECK–2 R / P HEAD (U ONLY)

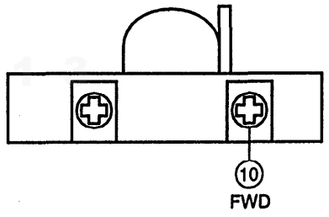

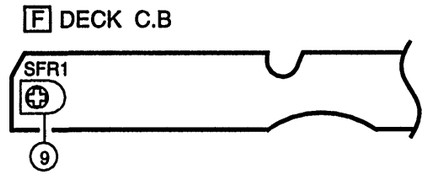

< TUNER SECTION >

1. Clock Frequency Check
   Settings : • Test point : TP2
   Method : Set to AM 1710kHz and check that the test point is 2160kHz ± 45Hz.

2. MW VT Check
   Settings : • Test point : TP1
   Method : Set to MW 1710kHz and MW 530kHz and check that the test point is less than 8.5V(1710kHz) and more than 0.6V(530kHz).

3. MW Tracking Adjustment
   Settings : • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location :
   L981(1/3) 1000kHz
   Method : Set to AM 1000kHz and adjust L981 (1/3) to MAX.

4. FM VT Check
   Settings : • Test point : TP1
   Method : Set to FM 108.0MHz and check that the test point is less than 8.0V.
   Set to FM 87.5MHz and check that the test point is more than 0.5V.

5. FM Tracking Check
   Settings : • Test point : TP8(Lch), TP9(Rch)
   Method : Set to FM 98.0MHz and check that the test point is less than 9.0dB.

6. AM(MW) IF Adjustment
   Settings : • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location :
   L772 ..... 450kHz

7. DC Balance / Mono Distortion Adjustment
   Settings : • Test point : TP3, TP4 (DC Balance)
   TP8(Lch), TP9(Rch) (Distortion)
   • Adjustment location : L771
   • Input level : 54dB
   Method : Set to FM 98.0MHz and adjust L771 so that the voltage between TP3 and TP4 becomes 0V ± 0.04V. Next, check that the distortion is less than 1.3%

8. Auto Stop Level Check
   AM(MW)
   Settings : • Input level : 52dB
   • Test point : TP5
   Method : Set to AM 1000kHz and check that the auto stop is at 37 ~ 62dB.

   FM
   Settings : • Input level : 25dB
   • Test point : TP5
   Method : Set to FM 98.0MHz and check that the auto stop is at 25dB ± 10dB.

< DECK SECTION >

9. Tape Speed Adjustment
   Settings : • Test tape : TTA–100
   • Test point : TP6(Lch), TP7(Rch)
   • Adjustment location : SFR1
   Method : Play back the test tape and adjust SFR1 so that the frequency counter reads 3000Hz ± 5Hz.

10. Head Azimuth Adjustment
    Settings : • Test tape : TTA–330
    • Test point : TP6(Lch), TP7(Rch)
    • Adjustment location : Head azimuth adjustment screw
    Method : Play back (FWD) the 8kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on REV PLAY mode.

11. PB Frequency Response Check (DECK 1, DECK 2)
    Settings : • Test tape : TTA–330
    • Test point :TP6(Lch), TP7(Rch)
    Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is within 5dB.

12. PB Sensitivity Check (DECK 1, DECK 2)
    Settings : • Test tape : TTA–200
    • Test point : TP6(Lch), TP7(Rch)
    Method : Play back the test tape and check that the output level of the test point is 120mV± 3dB (±10mV).

13. REC/PB Frequency Response Adjustment
    Settings : • Test tape : TTA–602
    • Test point : TP6(Lch), TP7(Rch)
    • Input signal : 1kHz / 10kHz (LINE IN)
    • Adjustment location : SFR351 (Lch)
    SFR352 (Rch)
    Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP6, TP7 becomes -20VU(-28dBV). Record and play back the 1kHz and 10kHz signals and adjust SFRs so that the output of the 10kHz signals becomes 0dB ± 0.5dB with respect to that of the 1kHz signal.

14. REC/PB Sensitivity Check
    Settings : • Test tape : TTA–602
    • Test point : TP6(Lch), TP7(Rch)
    • Input signal : 1kHz (LINE IN)
    Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP6, TP7 becomes 0VU(-8dBV). Record and play back the 1kHz signals and check that the output is 0 ± 3.5dB.

www.xiaoyu163.com

http://www.xiaoyu163.com

http://www.xiaoyu163.com

MECHANICAL EXPLODED VIEW 1 / 1

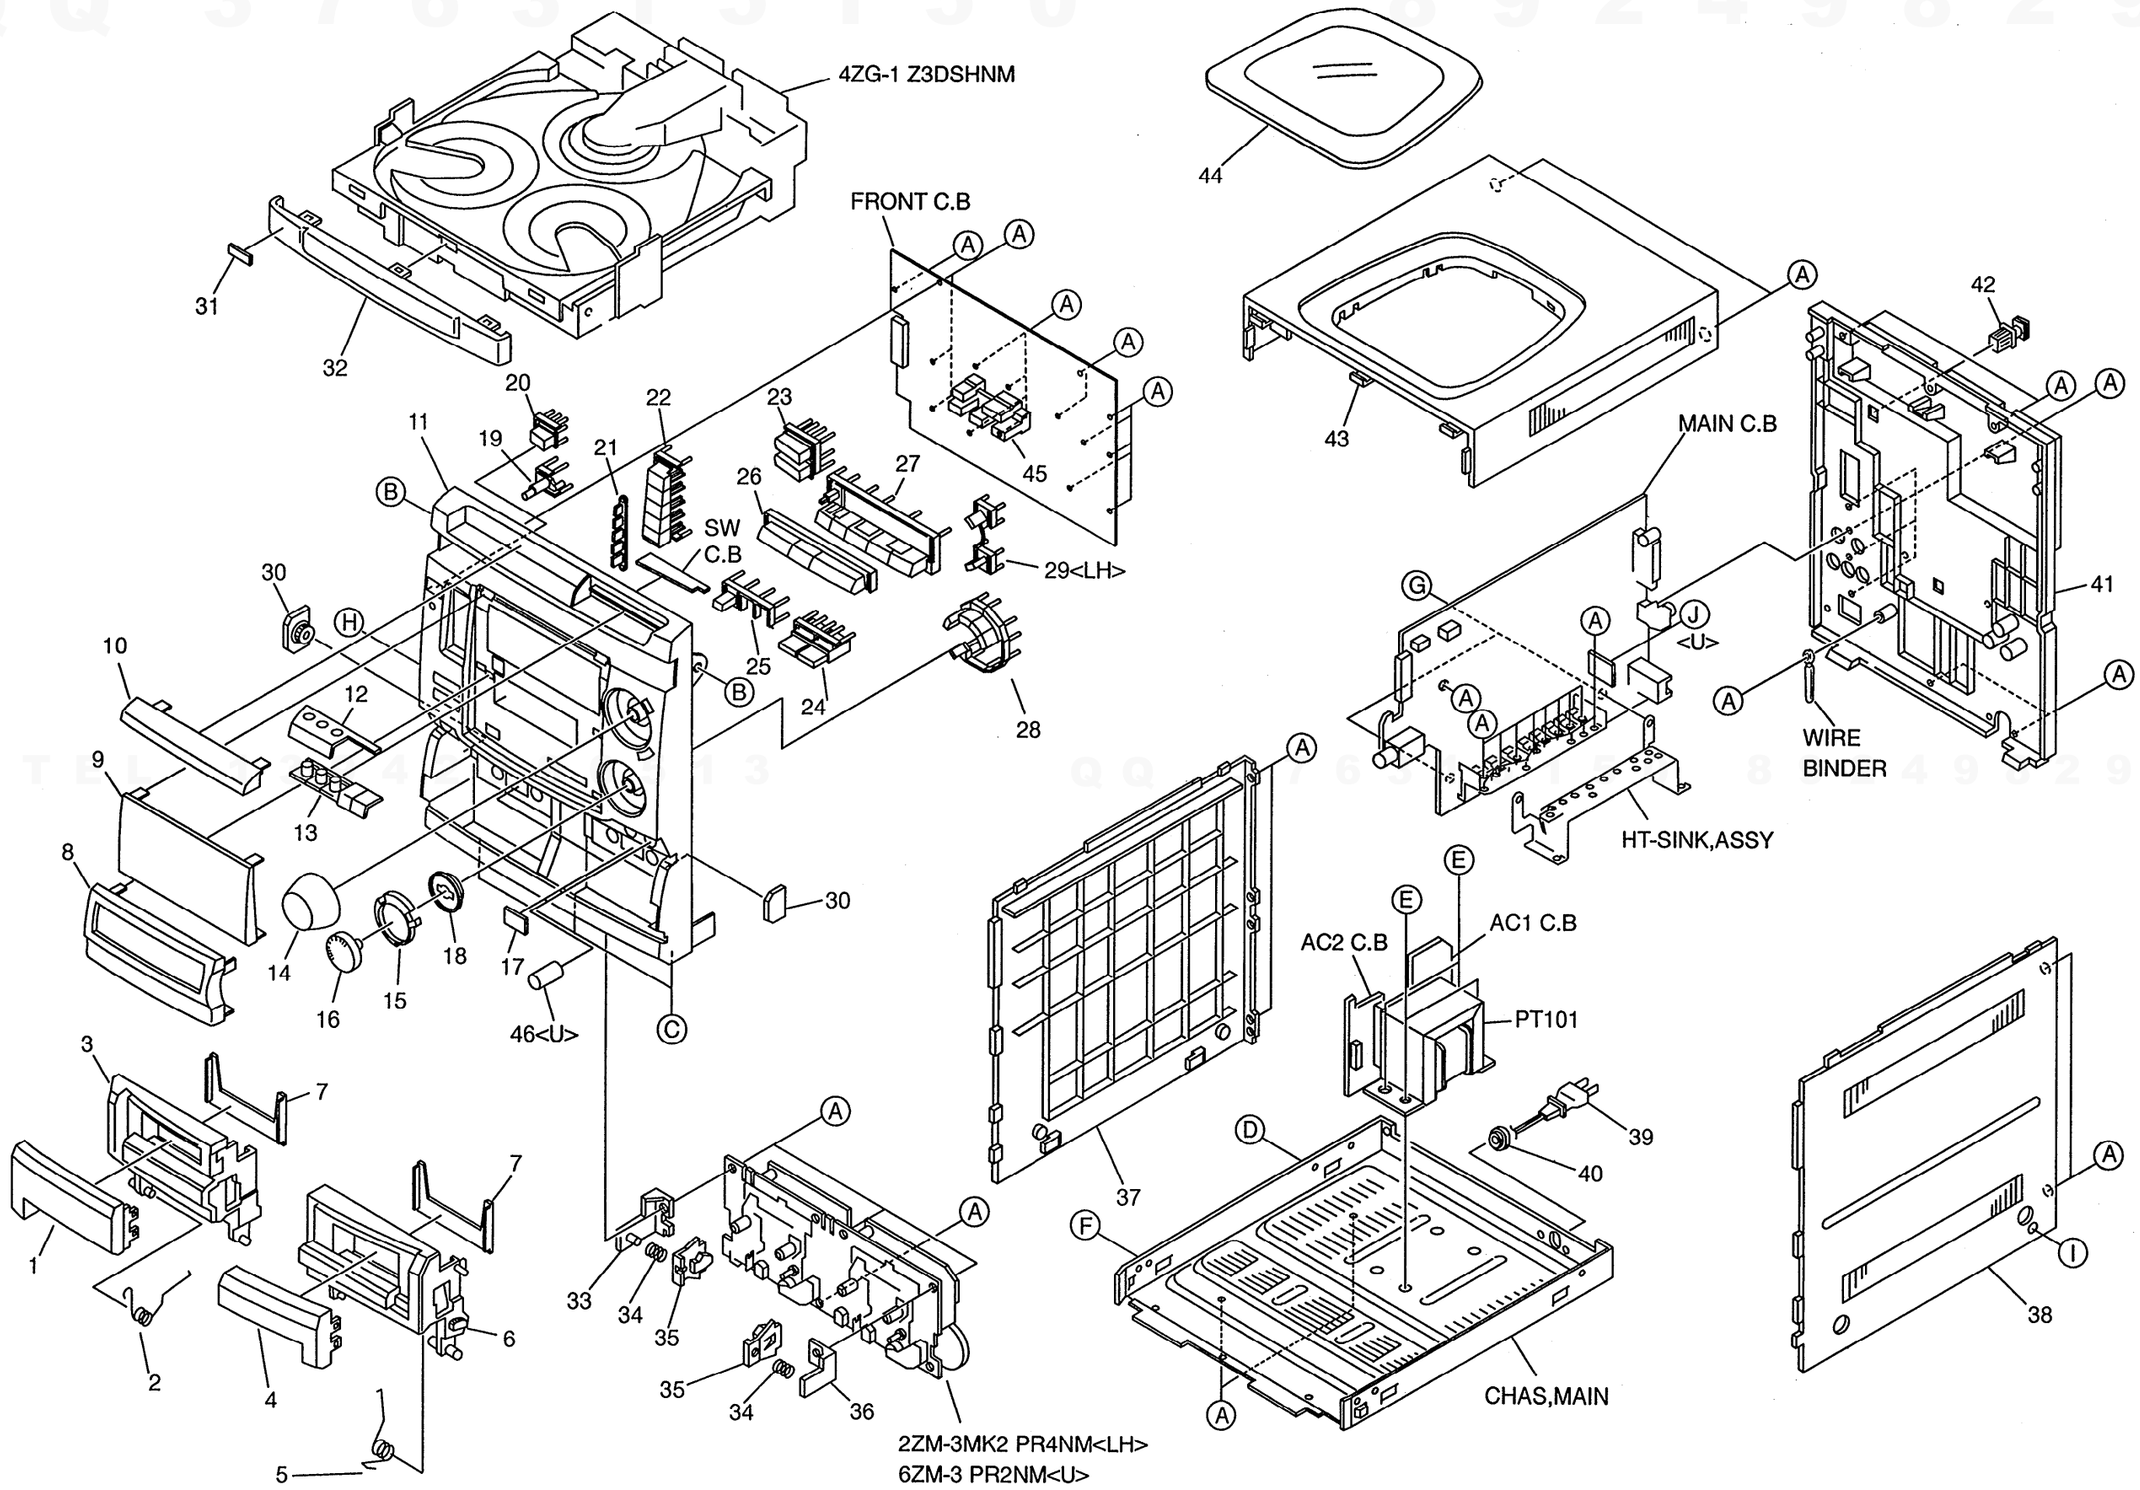

http://www.xiaoyu163.com

http://www.xiaoyu163.com

MECHANICAL PARTS LIST 1 / 1

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	87-NBG-009-010		WINDOW,CASS 1
2	82-NF5-218-010		SPR-T,EJECT 1 (SIN)
3	88-NF7-003-010		BOX,CASS 1 U
4	87-NBG-010-010		WINDOW,CASS 2
5	82-NF5-219-010		SPR-T,EJECT 2 (SIN)
6	88-NF7-049-010		BOX,CASS 2 H<LH>
6	88-NF7-004-010		BOX,CASS 2 U<U>
7	86-NF6-061-010		REFLECTOR,CASS
8	88-NF7-030-010		PANEL,CONT U<U>
8	88-NF7-047-010		PANEL,CONT U1<LH>
9	88-NF7-021-010		WINDOW,DISP<U>
9	88-NF7-038-010		WINDOW,DISP H<LH>
10	87-NBG-008-010		WINDOW,CD
11	88-NF7-046-010		CABI,FR H<LH>
11	88-NF7-001-010		CABI,FR U<U>
12	87-NBG-006-010		PANEL,CD
13	88-NF7-062-010		KEY,CD
14	87-NBG-011-010		KNOB,RTRY VOL
15	88-NF7-007-010		PANEL,JOG<LH>
15	88-NF7-020-010		PANEL,JOG GEQ<U>
16	88-NF7-006-010		KNOB,RTRY JOG
17	81-532-080-010		LABEL, CASS. COMPT
18	88-NF7-015-010		REFLECTOR,JOG
19	88-NF7-040-010		KEY,DEMO S
20	87-NBG-015-010		KEY,POWER
21	87-NBG-023-010		REFLECTOR,FUN
22	88-NF7-022-110		KEY,FUN
23	88-NF7-008-010		KEY,BBE
24	88-NF7-027-010		KEY,TIMER U
25	88-NF7-032-010		KEY,EDIT H<LH>
25	88-NF7-025-010		KEY,EDIT U<U>
26	88-NF7-028-010		KEY,ASSY OPE U
27	88-NF7-034-010		KEY,ASSY DEMO H<LH>
27	88-NF7-029-010		KEY,ASSY DEMO U<U>
28	88-NF7-014-010		KEY,DSP<LH>
28	88-NF7-026-010		KEY,DSP U1<U>
29	87-NBG-019-010		KEY,ECHO<LH>
30	87-NF8-220-010		DMPR,150
31	82-NE6-067-010		BADGE,AIWA 30N
32	88-NF7-005-010		PANEL,TRAY
33	87-NF4-216-010		HLDR,LOCK 1
34	86-NF9-224-010		SPR-C,LOCK
35	82-NF5-229-010		PLATE,LOCK
36	87-NF4-217-010		HLDR,LOCK 2
37	88-NF7-063-010		PANEL,LEFT 2<LH>
37	87-NB8-051-010		PANEL,LEFT U<U>
38	88-NF8-047-010		PANEL,RIGHT 2<LH>
38	88-NF8-048-010		PANEL,RIGHT 2 U<U>
⚠ 39	87-050-053-010		AC CORD ASSY,U-2<U>
⚠ 39	87-050-079-010		AC-CORD ASSY,E<LH>
40	87-085-185-010		BUSHING, AC CORD (E)<LH>
40	87-085-189-010		BUSHING, CORD (U)<U>
41	88-NF7-058-010		CABI,REAR LHSTNM<LH>
41	88-NF7-016-010		CABI,REAR USNM<U>
42	84-ZG1-245-210		CAP,OPTICAL
43	87-NF6-021-010		PANEL,TOP
44	86-NF6-101-010		WINDOW TOP UL<U>
44	86-NF6-007-010		WINDOW,TOP<LH>
45	88-NF7-201-010		GUIDE,OPE
46	86-AR5-019-010		KNOB,RTRY MIC<U>
A	87-067-703-010		TAPPING SCREW, BVT2+3-10
B	87-721-097-410		QT2+3-12 GLD
C	87-067-688-010		BVTT+3-6
D	87-721-096-410		QT2+3-10 GLD
E	87-078-019-010		S-SCREW,IT+4-6
F	87-591-094-010		QIT+3-6 GOLD
G	87-NF4-224-010		S-SCREW,IT3B+3-8 CU
H	87-723-096-410		QT2+3-10W/O SLOT BL
I	87-B10-091-010		UTT2+3-10 W/O BLK
J	87-067-579-010		TAPPING SCREW, BVT2+3-8<U>

http://www.xiaoyu163.com

http://www.xiaoyu163.com

TAPE MECHANISM EXPLODED VIEW 1 / 1 <U: 6ZM-3 PR2NM>

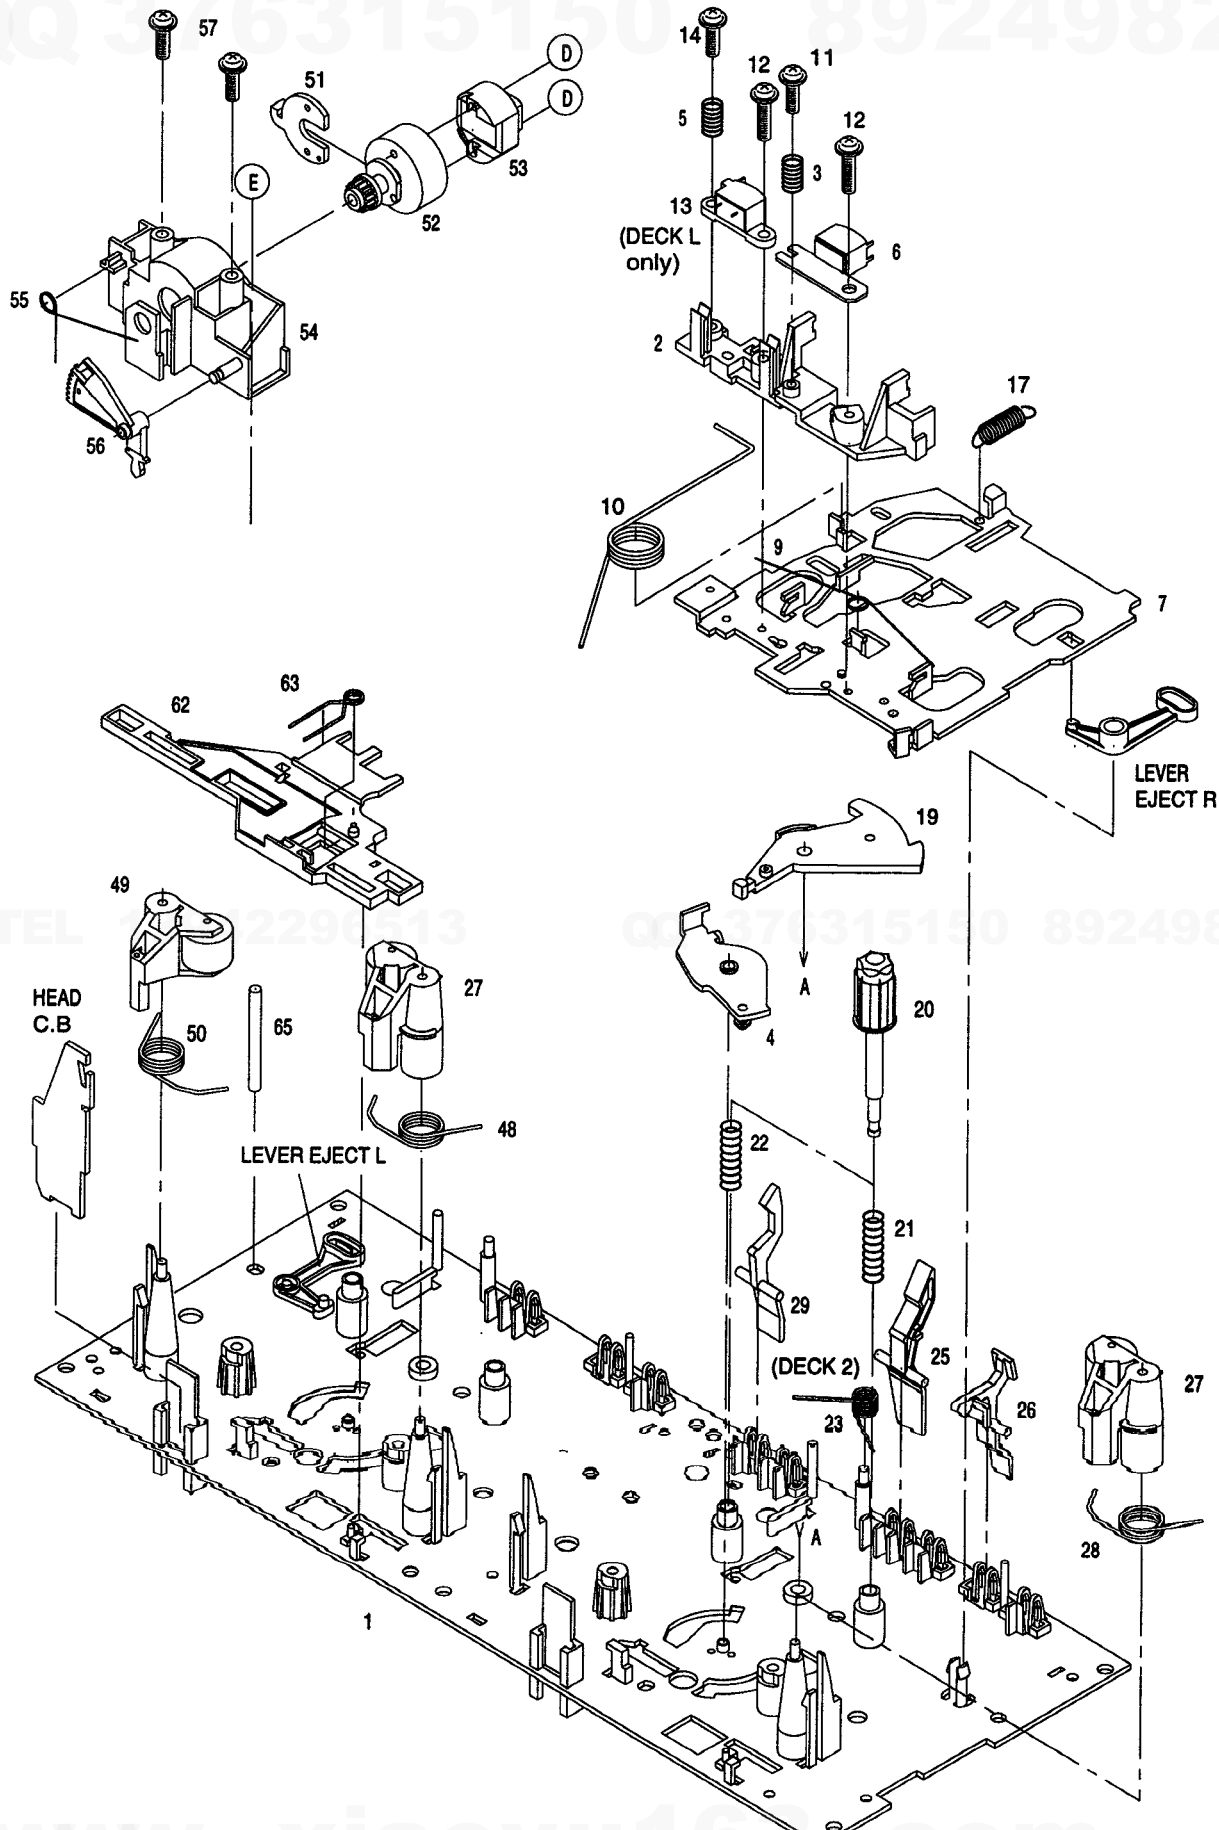

http://www.xiaoyu163.com

http://www.xiaoyu163.com

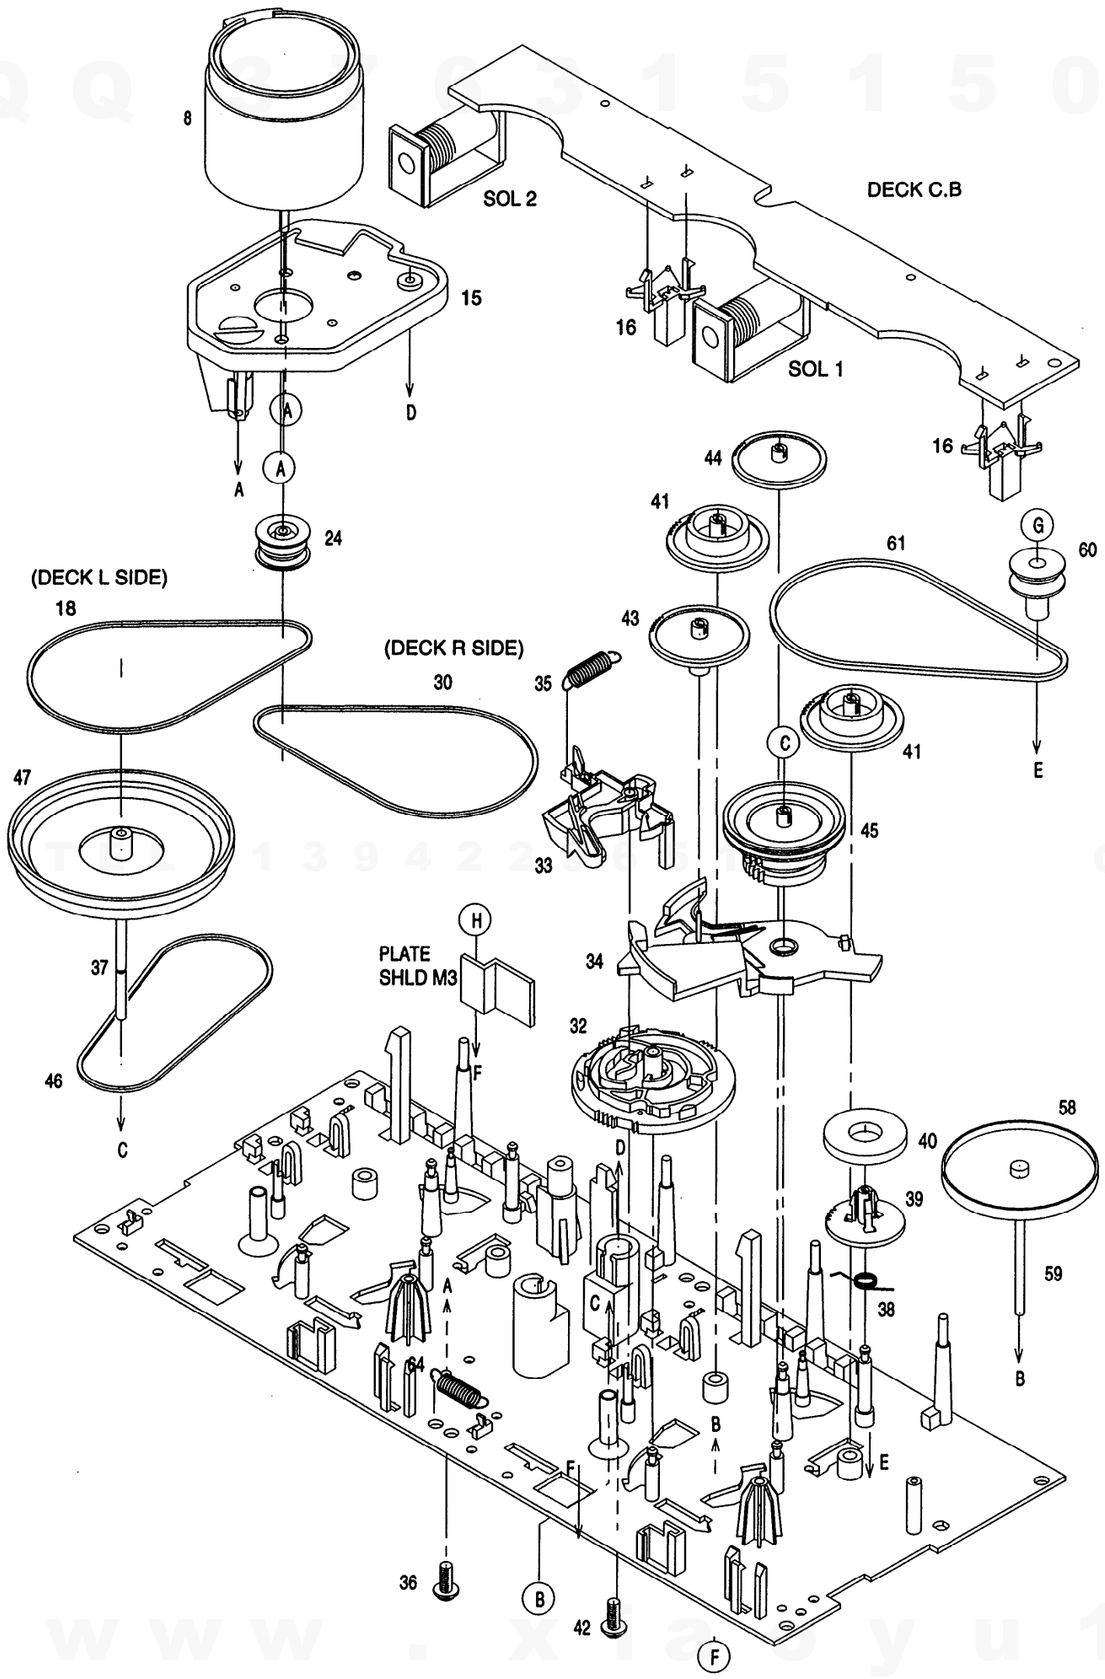

TAPE MECHANISM PARTS LIST 1 / 1 <U: 6ZM-3 PR2NM>

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-ZM3-215-010		CHAS ASSY,RS
2	86-ZM3-202-010		BASE,HEAD S
3	86-ZM3-205-010		SPR-C,RPH S
4	82-ZM1-333-210		PLATE,LINK 2
5	86-ZM3-206-010		SPR-C,EH S
6	87-A90-403-019		HEAD,RPH MS15R
7	86-ZM3-201-010		CHAS,HEAD S(DECK L)
7	82-ZM3-206-910		CHAS,HEAD(DECK R)
8	87-045-347-019		MOT,SHU2L 70(M1)
9	82-ZM1-269-219		SPR-T,BRG
10	82-ZM1-219-110		SPR-T,LINK
11	86-ZM3-209-010		S-SCREW,ASIMUTHS
12	86-ZM3-207-010		S-SCREW,RPH
13	87-A90-404-019		HEAD,EH LE15B
14	86-ZM3-208-010		S-SCREW,EH
15	86-ZM3-203-010		HLDR,MOTS
16	82-ZM1-245-210		HLDR,IC
17	82-ZM1-218-019		SPR-E,HB
18	86-ZM3-214-010		BELT,SUB RR
19	82-ZM1-222-219		LVR,PLAY
20	82-ZM1-217-419		REEL TABLE
21	82-ZM1-244-519		SPR-C,BT
22	82-ZM1-285-410		SPR-C,BT L
23	82-ZM1-257-019		SPR-T,CAS
24	82-ZM3-221-010		PULLEY,MOT 2M
25	82-ZM1-242-019		LVR,CAS
26	82-ZM1-243-019		LVR,STOP
27	82-ZM1-344-119		LVR ASSY,PINCH
28	86-ZM3-204-010		SPR-T,PINCHDS
29	82-ZM1-240-119		LVR,REC (DECK 2)
30	86-ZM3-210-010		BELT,RS
32	82-ZM3-305-119		GEAR,CAM M2
33	82-ZM1-227-319		LVR,TRIG
34	82-ZM3-306-110		LVR,FR M2
35	82-ZM1-265-119		SPR-E,TRIG
36	87-761-073-419		VFT2+2.6-6 W/O SLOT
37	82-ZM1-239-019		CAPSTAN N 2.2-41.7
38	82-ZM1-322-019		SPR-T,FR60
39	82-ZM1-220-219		GEAR,IDLER
40	82-ZM3-616-019		RING MAGNET 4
41	82-ZM1-216-319		GEAR,REEL
42	86-ZM3-213-010		S-SCREW,HLDR,MOT 3
43	82-ZM1-225-219		GEAR,FR
44	82-ZM1-226-019		GEAR,REW
45	82-ZM3-333-310		SLIP DISK ASSY 2
46	82-ZM1-338-010		BELT FR4
47	82-ZM1-349-019		FLY-WHL RW (DECK L)
47	82-ZM3-338-010		FLY-WHL R3W (DECK R)
48	82-ZM1-259-210		SPR-T,PINCH R
49	82-ZM1-341-110		LVR ASSY,PINCH L2
50	82-ZM1-258-210		SPR-T,PINCH L
51	82-ZM1-314-110		PLATE,HEAD
52	82-ZM1-208-310		HLDR,HEAD
53	87-A90-366-010		HEAD,PH YK50P-BF414
54	82-ZM1-207-810		GUIDE TAPE
55	82-ZM1-213-010		SPR-T,HEAD
56	82-ZM1-210-110		GEAR,HT
57	86-ZM4-206-010		S-SCREW AZIMUTH L
58	82-ZM1-348-010		FLY-WHL,LW
59	82-ZM1-236-019		CAPSTAN N 2-41.5
60	82-ZM3-335-210		PULLEY,COUPLER M3
61	86-ZM1-206-010		BELT,MAIN L
62	82-ZM1-266-110		LVR,DIR
63	82-ZM1-214-010		SPR-T,DIR
64	82-ZM1-255-310		SPR-E,LVR DIR
65	82-ZM3-339-010		SHAFT,COUPLER N3
A	87-251-071-417		U+2.6-4
B	80-ZM6-243-019		SH,1.75-3.6-0.5 SLT
C	82-ZM3-334-010		PW,2.16-6-0.4
D	80-ZM6-207-010		V+1.6-7
E	85-ZM3-202-010		S-SCREW TG
F	82-ZM1-288-010		SH,1.63-3.2-0.5 SLT
G	87-B10-043-010		W-P,0.99-4-0.25 SLT
H	87-571-032-410		VIT+2-3

http://www.xiaoyu163.com

http://www.xiaoyu163.com

SPRING APPLICATION POSIATION <U: 6ZM-3 PR2NM>

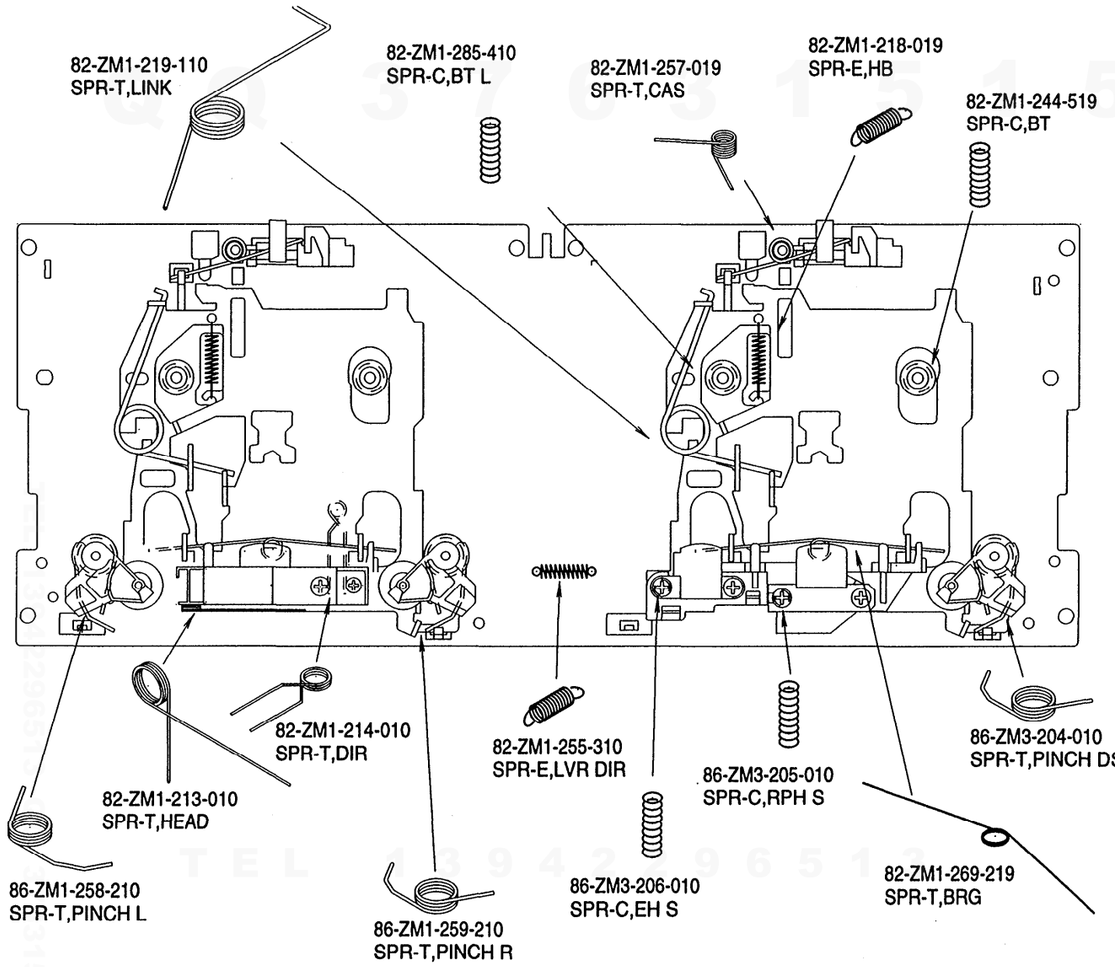

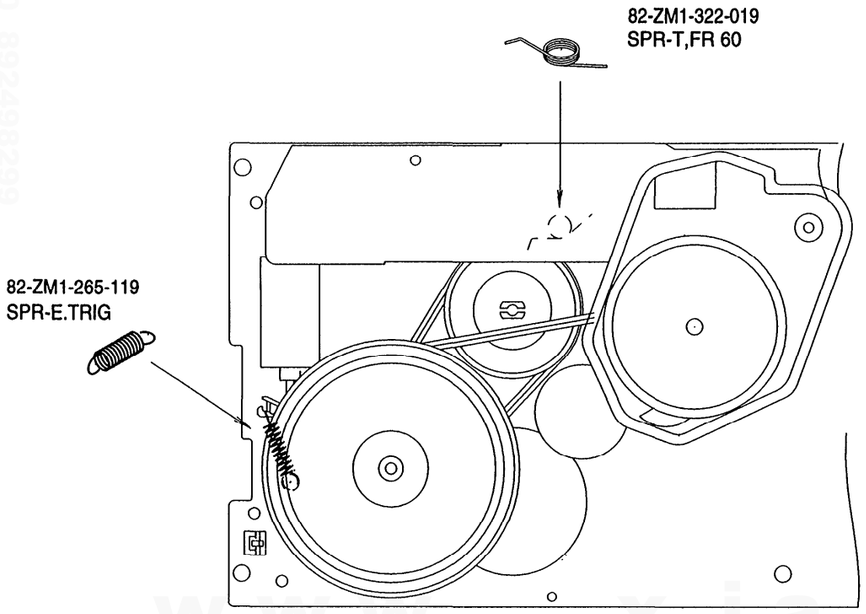

TAPE MECHANISM EXPLODED VIEW 1 / 1 <LH: 2ZM-3MK2 PR4NM>

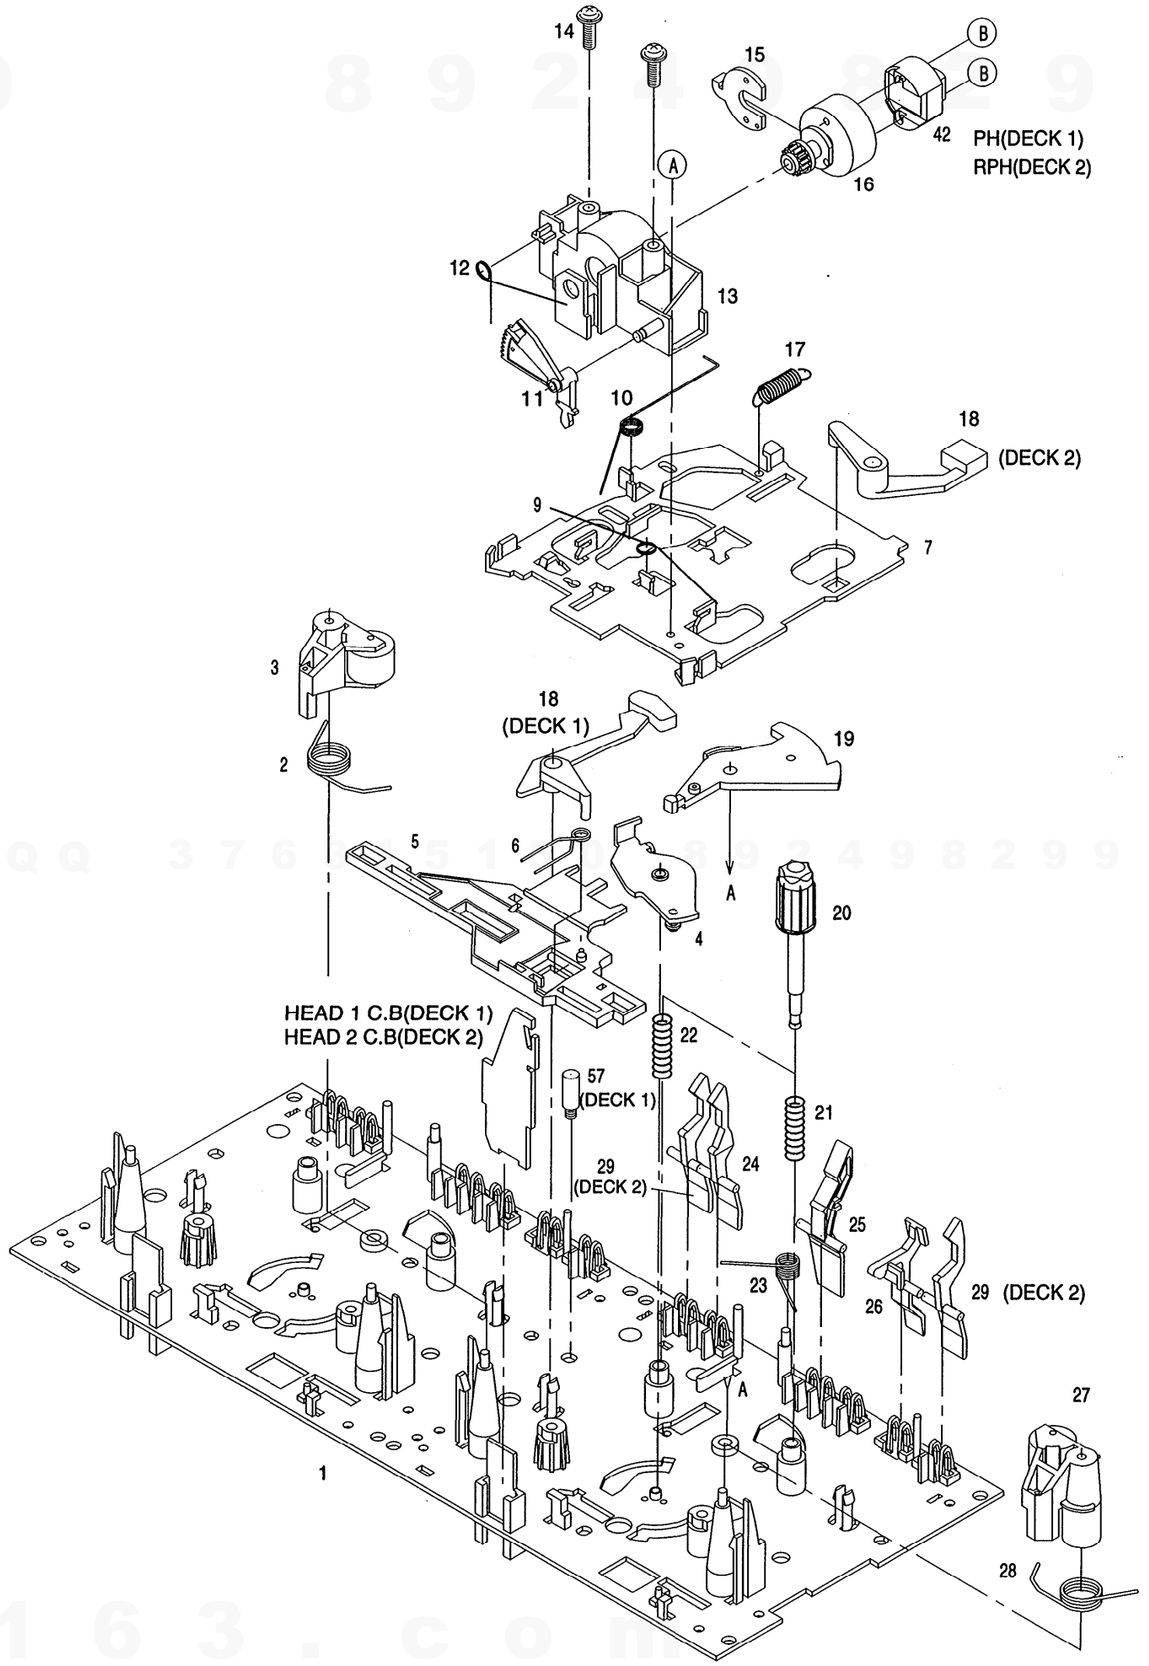

http://www.xiaoyu163.com

http://www.xiaoyu163.com

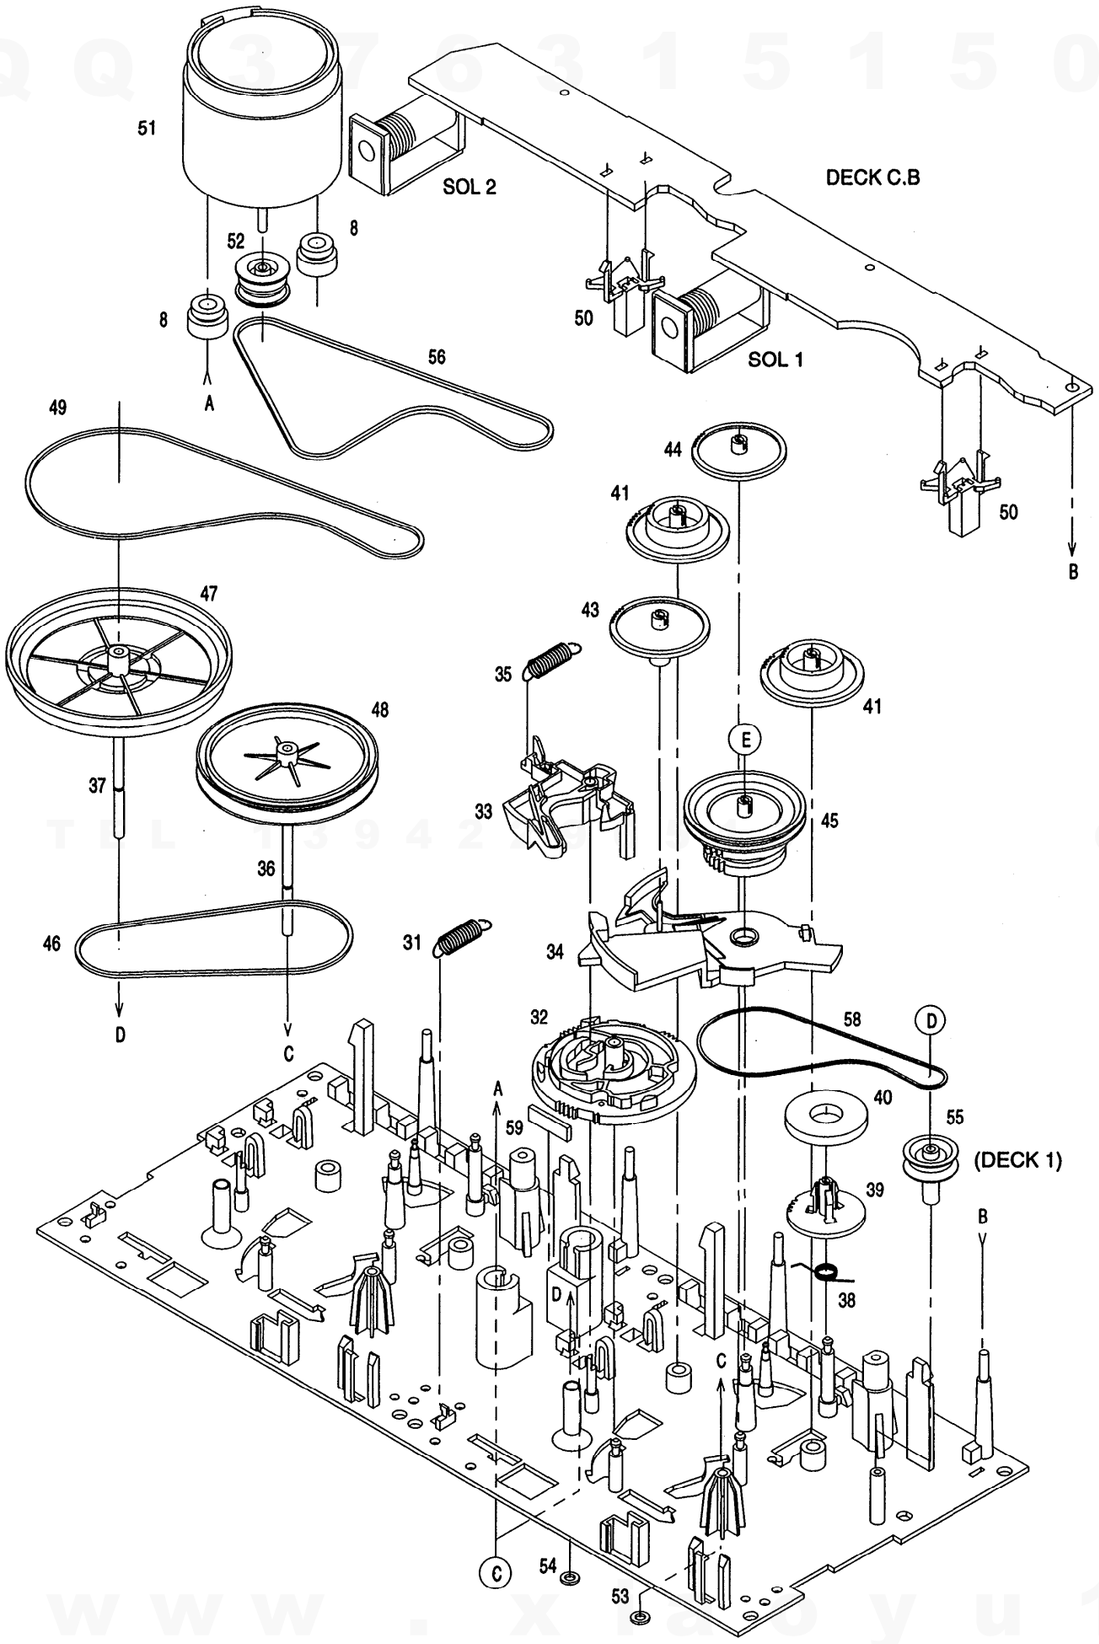

TAPE MECHANISM PARTS LIST 1 / 1 <LH: 2ZM-3MK2 PR4NM>

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	82-ZM3-301-519		CHAS ASSY,M2
2	82-ZM1-258-110		SPR-T,PINCH L
3	82-ZM1-341-110		LVR ASSY,PINCH L2
4	82-ZM1-333-010		PLATE,LINK 2
5	82-ZM1-266-11K		LVR,DIR
6	82-ZM1-214-010		SPR-T,DIR
7	82-ZM1-206-81K		CHAS,HEAD
8	82-ZM3-307-019		CUSH-G,DIA3.7-8-3.2
9	82-ZM1-269-219		SPR-T,BRG
10	82-ZM1-219-119		SPR-T,LINK
11	82-ZM1-210-119		GEAR,H T
12	82-ZM1-213-019		SPR-T,HEAD
13	82-ZM1-207-619		GUIDE,TAPE
14	86-ZM4-206-010		S-SCREW,AZIMUTH
15	82-ZM1-314-119		PLATE,HEAD
16	82-ZM1-208-119		HLDR,HEAD
17	82-ZM1-218-019		SPR-E,HB
18	82-ZM1-263-110		LVR,EJECT L (DECK 1)
18	82-ZM1-264-010		LVR,EJECT R (DECK 2)
19	82-ZM1-222-21K		LVR,PLAY
20	82-ZM1-217-319		REEL TABLE
21	82-ZM1-244-510		SPR-C,BT
22	82-ZM1-285-310		SPR-C,BT L
23	82-ZM1-257-019		SPR-T,CAS
24	82-ZM1-241-319		LVR,MC
25	82-ZM1-242-019		LVR,CAS
26	82-ZM1-243-019		LVR,STOP
27	82-ZM1-344-110		LVR ASSY,PINCH R2
28	82-ZM1-259-110		SPR-T,PINCH R
29	82-ZM1-240-11K		LVR,REC (DECK 2)
31	82-ZM1-255-319		SPR-E,LVR DIR
32	82-ZM3-305-01K		GEAR,CAM M2
33	82-ZM1-227-21K		LVR,TRIG
34	82-ZM3-306-11K		LVR,FR M2
35	82-ZM1-265-119		SPR-E,TRIG

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
36	82-ZM1-236-019		CAPSTAN N 2-41.5
37	82-ZM1-239-019		CAPSTAN N 2.2-41.7
38	82-ZM1-322-019		SPR-T,FR60
39	82-ZM1-220-219		GEAR,IDLER
40	82-ZM3-616-019		RING MAGNET 4
41	82-ZM1-216-31K		GEAR,REEL
42	87-A90-319-010		HEAD,PH HADKH2 FPC
42	87-A90-320-010		HEAD,RPH HADKH5 FPC
43	82-ZM1-225-21K		GEAR,FR
44	82-ZM1-226-019		GEAR,REW
45	82-ZM3-333-310		SLIP DISK ASSY 2
46	82-ZM1-338-010		BELT FR4
47	82-ZM1-349-110		FLY-WHL,R W(DECK 2)
47	82-ZM3-338-110		FLY-WHL,R3 W(DECK 1)
48	82-ZM1-348-010		FLY-WHL,L W(DECK 2)
48	82-ZM1-348-010		FLY-WHL,L W(DECK 1)
49	82-ZM3-329-210		BELT,SBU R2
50	82-ZM1-245-210		HLDR,IC
51	87-045-347-019		MOT,SHU2L 70(M1)
52	82-ZM3-221-010		PULLEY,MOT 2M
53	82-ZM1-288-019		SH,1.63-3.2-0.5 SLT
54	80-ZM6-243-019		SH,1.75-3.6-0.5 SLT
55	82-ZM3-335-210		PULLEY,COUPLER M3(DECK 1)
56	82-ZM3-337-010		BELT,SBU MOT 2
57	82-ZM3-339-010		SHAFT,COUPLER N3(DECK 1)
58	86-ZM1-206-010		BELT,MAIN L
59	82-ZM3-340-010		SH,BELT D2
A	85-ZM3-202-010		S-SCREW,TG
B	80-ZM6-207-019		V+1.6-7
C	82-ZM3-318-019		S-SCRW MOTOR M2
D	87-B10-043-010		W-P,0.99-4-0.25 SLT
E	82-ZM3-334-010		PW,2.16-6-0.4

http://www.xiaoyu163.com

http://www.xiaoyu163.com

SPRING APPLICATION POSITION <LH: 2ZM-3MK2 PR4NM>

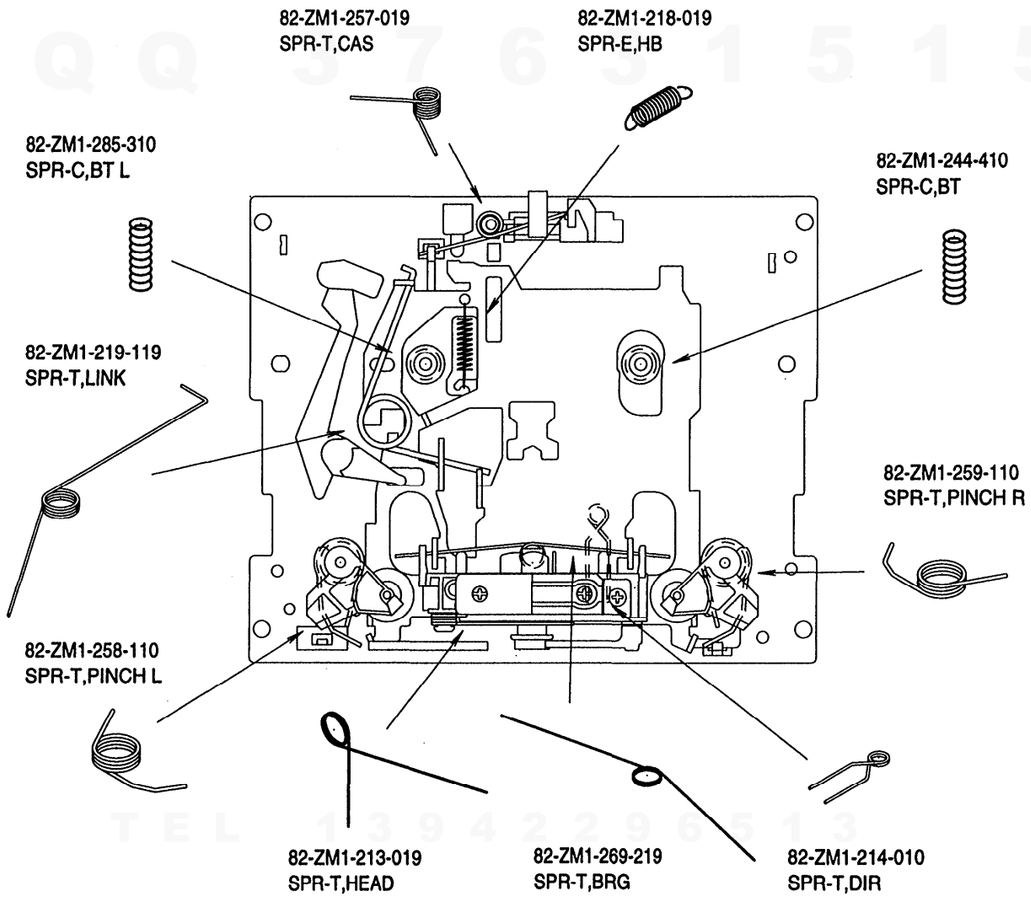

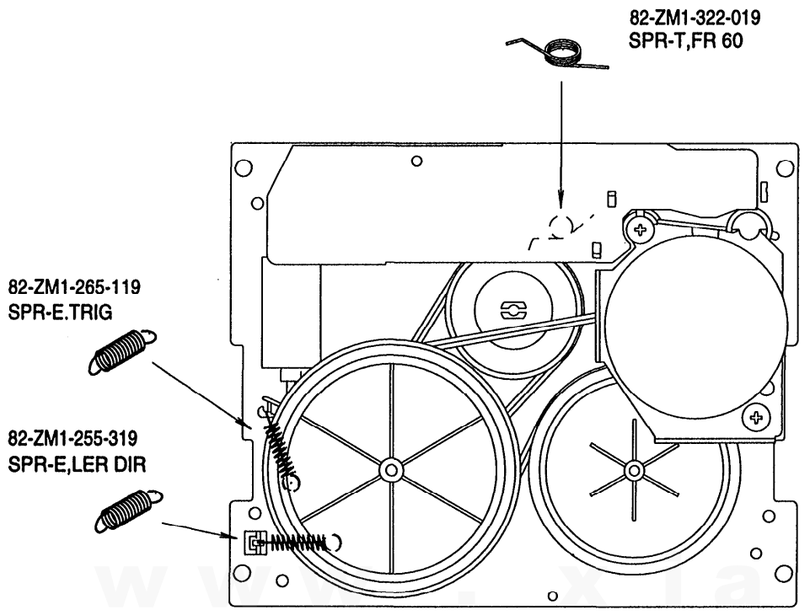

SPEAKER DISASSEMBLY INSTRUCTIONS

Type.1

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

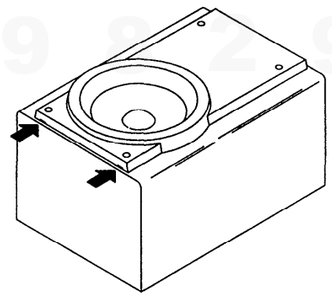

Type.2

グリルフレームを外し、4個のゴムキャプをマイナスドライバーで端の方から持ち上げて外すと中にビスが有りますので、ビスを取り外します。矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。

Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

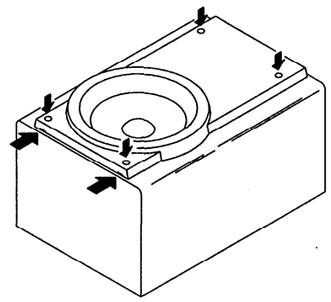

Type.3

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットの凹にマイナスドライバーを差し込んで、反時計方向に回転させスピーカーユニットを外してください。スピーカーユニット交換後は時計方向にクリック音がするまで、回転させて取り付けます。

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwise direction while inserting a flat-bladed screwdriver into one of the hollows arround speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

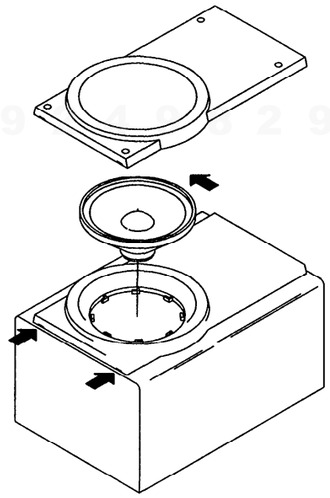

http://www.xiaoyu163.com

http://www.xiaoyu163.com

SX-NA502 (YUSTNL)
SPEAKER PARTS LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NS5-012-010		BADGE,AIWA 35
2	87-NS7-608-010		SPKR W140
3	87-NS7-610-010		SPKR T60
4	87-NS7-611-010		CORD,SPKR
5	87-NSH-612-010		SPKR,CERAMIC ASSY
6	88-NSJ-001-010		PANEL,FR

SX-NS503 (YLSTNCC)
SPEAKER PARTS LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	87-NSE-602-010		SPKR,W 160
2	87-NSE-604-010		SPKR,T 80
3	87-NSF-610-010		SPKR,CORD
4	88-NSG-001-010		PANEL,FR R
5	88-NSG-002-010		PANEL,FR L
6	88-NSG-004-010		GRILLE,FRAME ASSY
7	88-NSG-610-010		SPKR, CERAMIC ASSY

SX-FNS705 (YLSTCC)
SPEAKER PARTS LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO	DESCRIPTION
1	87-NSA-001-010		PANEL,FR
2	87-NSA-002-010		PANEL,SP
3	87-NSA-003-010		PANEL,BA
4	87-NSA-004-010		GRILLE,FRAME ASSY
5	87-NSA-010-010		PROTECTOR
6	87-NS4-611-010		SPKR,CORD
7	85-NS6-611-010		SPKR,CORD Y/B
8	87-NSA-610-010		SPKR,CERAMIC
9	87-NSA-611-010		SPKR,CAP
10	86-NSA-608-010		SPKR,W 160H
11	86-NSA-610-010		SPKR,T 60H
12	86-NS5-606-010		SPKR,80

ACCESSORIES / PACKAGE LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	88-NF7-902-010		IB,LH(ESP)M<LH>
1	88-NF7-903-010		IB,U(ESF)M<U>
2	87-006-225-010		AM LOOP ANT NC2
3	87-A90-064-010		FEEDER-ANT,FM(SHS)
⚠ 4	87-A90-312-010		PLUG,CONVERSION WTN-1157R1<LH>
5	87-NF6-635-010		RC UNIT,RC-7AS06

http://www.xiaoyu163.com

http://www.xiaoyu163.com

REFERENCE NAME LIST

ELECTRICAL SECTION

DESCRIPTION	REFERENCE NAME
ANT	ANTENNAS
C-	CHIP
C-CAP	CAP, CHIP
C-CAP TN	CAP, CHIP TANTALUM
C-COIL	COIL, CHIP
C-DI	DIODE, CHIP
C-DIODE	DIODE, CHIP
C-FET	FET, CHIP
C-FOTR	FILTER, CHIP
C-JACK	JACK, CHIP
C-LED	LED, CHIP
C-RES	RES, CHIP
C-SFR	SFR, CHIP
C-SLIDE SW	SLIDE SWITCH, CHIP
C-SW	SWITCH, CHIP
C-TR	TRANSISTOR, CHIP
C-VR	VOLUME, CHIP
C-ZENER	ZENER, CHIP
CAP, CER	CAP, CERA-SOL
CAP, E	CAP, ELECT
CAP, M/F	CAP, FILM
CAP, TC	CAP, CERA-SOL
CAP, TC-U	CAP, CERA-SOL SS
CAP, TN	CAP, TANTALUM
CERA FIL	FILTER, CERAMIC
CF	FILTER, CERAMIC
DL	DELAY LINE
E/CAP	CAP, ELECT
FILT	FILTER
FLTR	FILTER
FUSE RES	RES, FUSE
MOT	MOTOR
P-DIODE	PHOTO DIODE
P-SNSR	PHOTO SENSER
P-TR	PHOTO TRANSISTOR
POLY VARI	VARIABLE CAPACITOR
PPCAP	CAP, PP
PT	POWER TRANSFORMER
PTR, RES	PTR, MELF
RC	REMOTE CONTROLLER
RES NF	RES, NON-FLAMMABLE
RESO	RESONATOR
SHLD	SHIELD
SOL	SOLENOID
SPKR	SPEAKER
SW, LVR	SWITCH, LEVER
SW, RTRY	SWITCH, ROTARY
SW, SL	SWITCH, SLIDE
TC CAP	CAP, CERA-SOL
THMS	THERMISTOR
TR	TRANSISTOR
TRIMER	CAP, TRIMMER
TUN-CAP	VARIABLE CAPACITOR
VIB, CER	RESONATOR, CERAMIC
VIB, XTAL	RESONATOR, CRYSTAL
VR	VOLUME
ZENER	DIODE, ZENER

MECHANICAL SECTION

DESCRIPTION	REFERENCE NAME
ADHESIVE	SHEET ADHESIVE
AZ	AZIMUTH
BAR-ANT	BAR-ANTENNA
BAT	BATTERY
BATT	BATTERY
BRG	BEARING
BTN	BUTTON
CAB	CABINET
CASS	CASSETTE
CHAS	CHASSIS
CLR	COLLAR
CONT	CONTROL
CRSR	CURSOR
CU	CUSHION
CUSH	CUSHION
DIR	DIRECTION
DUBB	DUBBING
FL	FRONT LOADING
FLY-WHL	FLYWHEEL
FR	FRONT
FUN	FUNCTION
G-CU	G-CUSHION
HDL	HANDOL
HIMERON	CLOTH
HINGE, BAT	HINGE, BATTERY
HLDR	HOLDER
HT-SINK	HEAT SINK
IB	INSTRUCTION BOOKLET
IDLE	IDLER
IND, L-R	INDICATOR, L-R
KEY, CONT	KEY, CONTROL
KEY, PRGM	KEY, PROGRAM
KNOB, SL	KNOB, SLIDE
LBL	LABEL
LID, BATT	LID, BATTERY
LID, CASS	LID, CASSETTE
LVR	LEVER
P-SP	P-SPRING
PANEL, CONT	PANEL, CONTROL
PANEL, FR	PANEL, FRONT
PRGM	PROGRAM
PULLY, LOAD MO	PULLY, LOAD MOTOR
RBN	RIBBON
S-	SPECIAL
SEG	SEGMENT
SH	SHEET
SHLD-SH	SHIELD-SHEET
SL	SLIDE
SP	SPRING
SP-SCREW	SPECIAL-SCREW
SPACER, BAT	SPACER, BATTERY
SPR	SPRING
SPR-P	P-SPRING
SPR-PC-PUSH	P-SPRING, C-PUSH
T-SP	T-SPRING
TERM	TERMINAL
TRIG	TRIGGER
TUN	TUNING
VOL	VOLUME
W	WASHER
WHL	WHEEL
WORM-WHL	WORM-WHEEL

サービス技術ニュース	
番号	連絡内容
G－ －	
G－ －	
G－ －	

アイワ株式会社
AIWA CO.,LTD.
〒110-8710 東京都台東区池之端1-2-11 ☎03（3827）3111（代表）

9301978, 750038
Tokyo Japan
Printed in Singapore

http://www.xiaoyu163.com